

## MANUAL PURGE

In **MANUAL PURGE** operation, although the purge tank solenoid valve and purge pump solenoid valve are automatically controlled, the operator must manually operate the purge pump. Manual purge operation will be enabled whenever:

- (a) an “Auto Purge Failure” warning, “Purge Pump Failure” warning, or 2SOL failure warning occurs in **AUTO TANK** purge mode or
- (b) **MANUAL PURGE** mode is selected.

If the purge tank transducer (PT4) or purge pump transducer (PT3) indicates a pressure of  $<0.0\text{mm HgA}$  continuously for 25 seconds, the following message is displayed:

**WARNING – PURGE TRANSDUCER ERROR**

**To start manual purge:**

1. Press **PUMP STATUS** keypad key until

**PURGE PUMP – OFF – MANUAL PURGE**