

is displayed. The “Display Hold” feature is automatically engaged.

2. Press **MANUAL PUMP** key. The message

PURGE PUMP – ON – MANUAL PURGE

is displayed. The purge pump starts. After 2 minutes, the purge tank solenoid valve (1SOL) and purge pump solenoid valve (2SOL) open.

To stop manual purge:

1. Press **PUMP STATUS** key until

PURGE PUMP – ON – MANUAL PURGE

is displayed. The “Display Hold” feature is automatically engaged.

2. Press **MANUAL PUMP** key. If the pump has been running less than 2 minutes (purge tank and purge pump solenoid valves not opened yet), the purge pump is turned off and the message

PURGE PUMP – OFF – MANUAL PURGE

is displayed. If the purge pump has been running for greater than 2 minutes, the purge tank solenoid valve (1SOL) and purge pump solenoid valve (2SOL) close. The message

PURGE PUMP VALVE CLOSING

is displayed for 65 seconds and when the 65 seconds elapse, the purge pump is turned off and

PURGE PUMP – OFF – MANUAL PURGE

is displayed. The **MANUAL PURGE** operation is then complete. If the **MANUAL PURGE** operation continued for more than 10 minutes, the 7-day manual purge counter and lifetime total manual purge counter each increment by 1 count.

3. Press **DISPLAY HOLD** key. The normal foreground message is displayed.