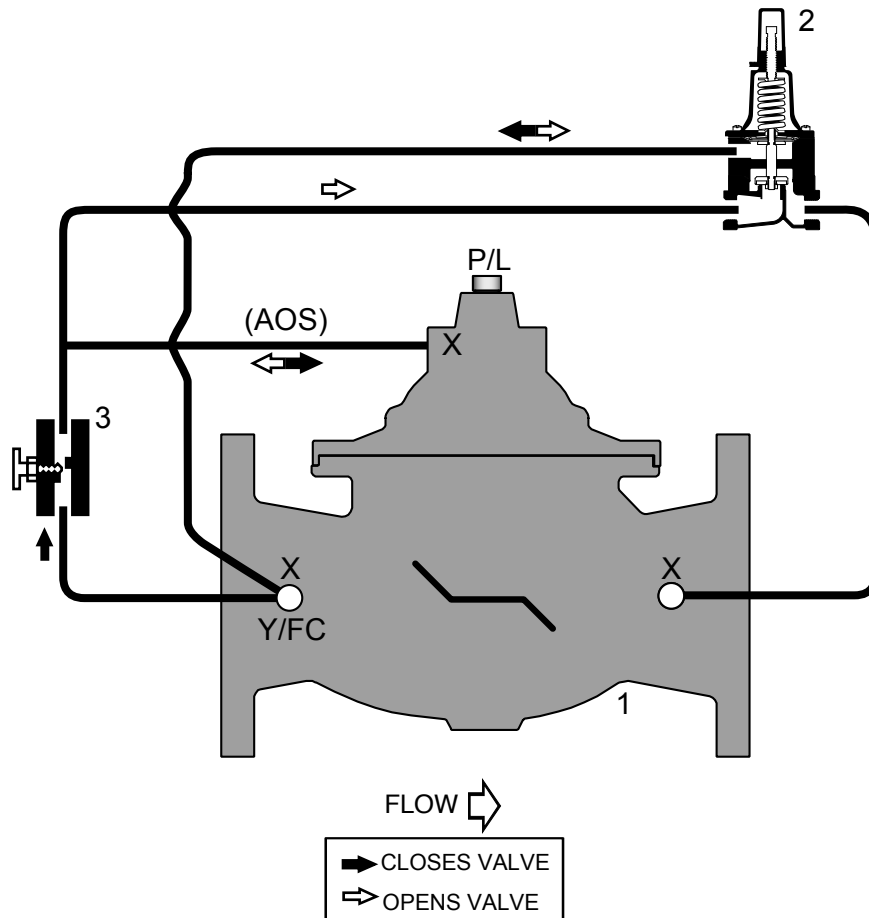


Classic Series**F116 (Globe)**
F1116 (Angle)

- Opens when upstream pressure is above setpoint
- Closes when upstream pressure is below setpoint
- Adjustable Closing Speed
- When installed on branch of tee acts as Pressure Relief Valve
- When installed between two pressure zones acts as Pressure Sustaining Valve
- When installed on discharge of a pump acts as Backpressure Control Valve
- Setpoint is adjustable

**STANDARD COMPONENTS**

- 1 - Main Valve (Single Chamber)
- 2 - Relief / Sustaining Control
- 3 - Adjustable Closing Speed

OPTIONS and ACCESSORIES

- X - Isolation Cocks
- FC - Flo-Clean Strainer
- Y - Y-Strainer (Replaces Flo-Clean)
- AOS – Adjustable Opening Speed
- P - Position Indicator
- L - Limit Switch