



Stainless Series

**S116 or S6116 (Globe)
S1116 or S61116 (Angle)**

Installation Guidelines

- Prior to installation, flush line to remove debris.
- Install valve horizontally “in line” (cover facing up), so flow arrow matches flow through the line. Avoid installing valves 6” and larger vertically. Consult factory **prior** to ordering if installation is other than described.
- Install upstream and outlet isolation valves. **NOTE:** When using butterfly valves, insure disc does not contact control valve. Damage or improper valve seating may occur.
- Provide adequate clearance for valve servicing and maintenance.
- Install pressure gauges to monitor valve upstream and outlet pressure.

Other Watts ACV Pressure Relief / Backpressure or Sustaining Control Valves

S116-5 / S6116-5	Backpressure / Sustaining Valve with Hydraulic Check Feature
S116-31 / S6116-31	Pressure Sustaining Valve with Solenoid (On-Off) Feature
S116-32 / S6116-32	Pressure Sustaining Valve with Solenoid (On-Off) and Check Features
S116-52 / S6116-52	Surge Anticipator and Pressure Relief Valve