


PARAMETER POINTS

Instructions:

How to access, view and change parameter settings

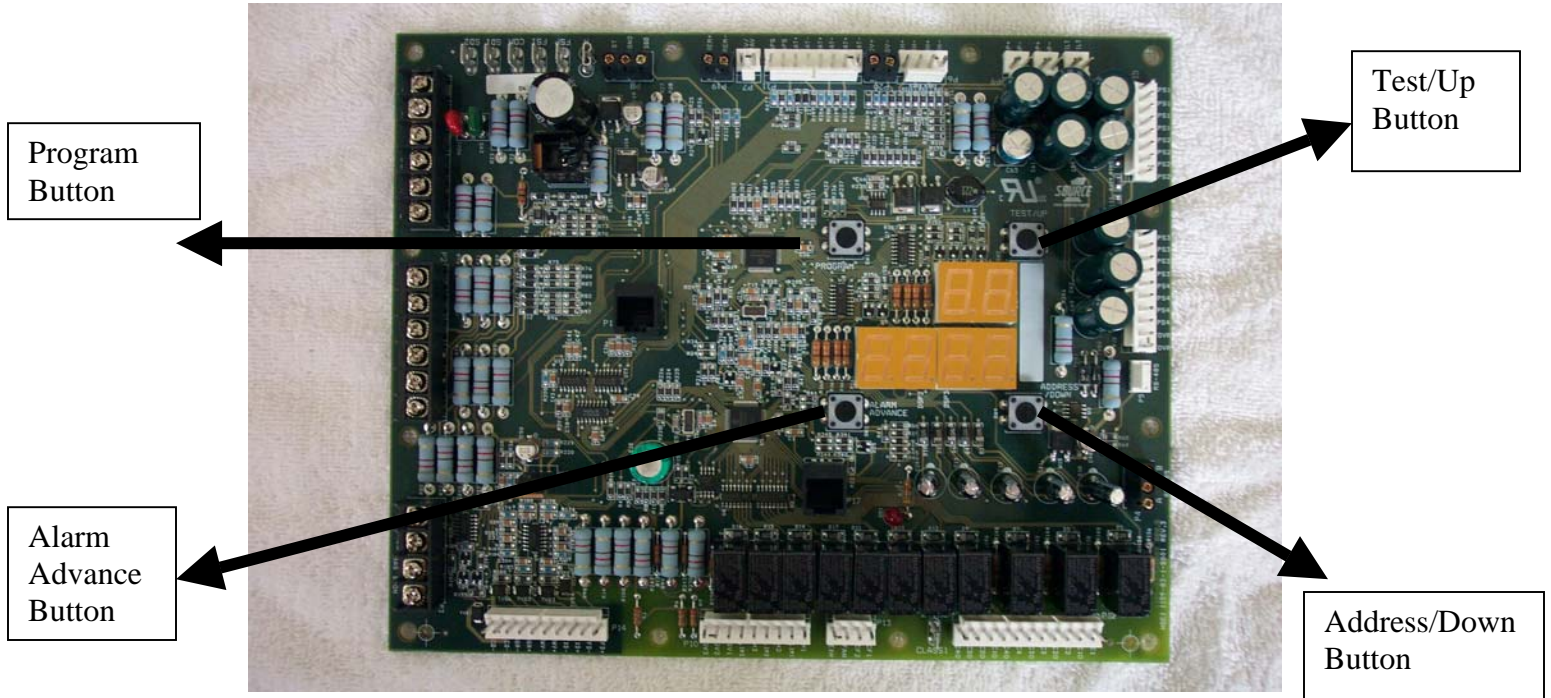

1. Push the “Program” button once. The two digit display shows “01” and the four digit display shows the current value for that parameter.
2. To scroll through the next address, push the “Test/Up” button. To scroll to the previous address, push the “Address/Down” button.
3. To change a value, locate the address desired following the instructions above. Then push the “Alarm/Advance” button once. The current value as displayed in the four-digit display will begin flashing. Use the “Test/Up” and “Address/Down” buttons to change the current value to the desired value.
4. To accept and store the new value push the “Alarm/Advance” button once. The new value is accepted, displayed and the display stops flashing.

To exit the “Program” mode and return to the normal operating mode push the “Program” button once again.