


(FOR ALL OTHER VOLTAGES)


CAUTION: OPEN ALL DISCONNECTS BEFORE SERVICING THIS UNIT

DETAIL "A"  
(FRONT VIEW)

THESE FUSES ONLY  
(FOR 208/230V ONLY)

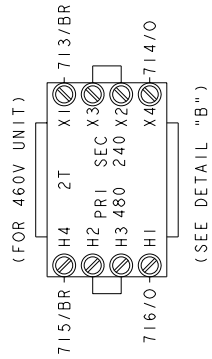

(FOR 460V UNIT)  
(SEE DETAIL "B")

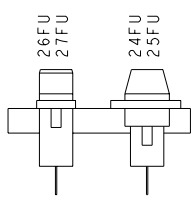

SEE DETAIL "A"  
ROTATED 90°

