



BY JOHNSON CONTROLS

Form 070.660-SM (DEC 2013)

SERVICE MANUAL

File: SERVICE MANUAL - Section 70
Replaces: 070.660-SM (AUG 2012)
Dist: 3, 3a, 3b, 3c
Revised: 24 Jan 2014 p.42

BARE ROTARY SCREW COMPRESSOR REPLACEMENT

Models TDSH/TDSL - XJS/XJF - SGC

Table of Contents

TDSH/TDSL COMPRESSOR REPLACEMENT	3
Figure 1. TDSH 163 & 193 Liquid Injection and Economizer Plugs before January 1994	4
TDSH 163 and 193 ECONOMIZER PLUGS	4
Figure 2. TDSH 163 & 193mm Economizer Port and Plug after January 1994	5
Table 1. TDSH Flange Bolt Torque	5
Figure 3. 163/193mm Compressor Ports Locations	6
Figure 4. 233mm Compressor Ports Locations	7
Figure 5. 283S/Lmm Compressor Ports Locations	8
Figure 6. 283Sxmm Compressor Ports Locations	9
REPLACING TDSL 3-STEP WITH 4-STEP COMPRESSOR	10
Figure 7. TDSL 283S & 283L 3-Step P & I Diagram with 4-Step Machine (bottom view)	10
Figure 8. TDSL 283S/283L 4-Step P & I Diagram with 4-Step Machine (bottom view)	10
Figure 9. TDSL 283XL 3-Step P & I Diagram with 4-Step Machine (bottom view)	11
Figure 10. TDSL 283XL 4-Step P & I Diagram with 4-Step Machine (bottom view)	11
Table 2. RDB/TDSL Capacity Control Sequence	11
REPLACING TDSH 355 WITH TDSB 355	12
REPLACING TDSH 355 WITH TDSH 355	12
Figure 11. Booster 1/8" Orifice Fitting	12
Figure 12. 355mm Compressor Ports Locations	13
XJS COMPRESSOR REPLACEMENT	15
XJS/XJF SLIDE VALVE SOLENOID VALVES	15
Figure 13. XJS Discharge Housing Mounted Solenoid	16
Figure 14. RXB Unit Housing Mounted Solenoid	16
RXF/XJF MOTOR & COMPRESSOR REPLACEMENT PROCEDURE	18
Figure 15. Weigh replacement motor	18
Figure 16. Hydraulic piston supports motor weight	18
Figure 17. Shim motor feet to less than .002 inch gap	19
Figure 18. Set replacement compressor and motor assembly on separator flange	19
Table 3. XJS/XJF Motor / Compressor / Tunnel Weights	20
Table 4. XJS/XJF Flange Bolt Torque	20
SLIDE VALVE POTENTIOMETERS vs LINEAR TRANSMITTERS FOR RXF/RXB UNITS	21
Figure 19. Slide Valve Potentiometers vs Linear Transmitters on Remanufactured XJF Compressors	21
Figure 20. Installation of Precision Engineering Vi Control Valves and Gaskets, RXB & RXF Packages	22
Vi CONTROL VALVES AND GASKETS	22
Figure 21. Installation of Danfoss Vi Control Valves and Gaskets, RXB & RXF Packages	23
Figure 22. RXF 12-19, XJF 95 Port Locations	24
Figure 23. RXF 24-50, XJF 120 Port Locations	25
Figure 24. RXF 58-101, XJF 151 Port Locations & O-rings	26
SAE STRAIGHT THREAD O-RING FITTINGS - ASSEMBLY PROCEDURE FOR RXF 58 - 101	27
Table 5. Assembly Torque	27
RWF MOTOR & COMPRESSOR REPLACEMENT PROCEDURE	29
Figure 25. Weigh replacement motor	29
Figure 26. Hydraulic piston supports motor weight	29
Figure 27. Shim motor feet to less than .002 inch gap	30
Figure 28. Set replacement compressor and motor assembly on separator flange	30
Table 6. SGC Flange Bolt Torque	31
Table 7. SGC Motor Weights	31
Figure 29. SGC/H 3511-3524 Multi-Valve Inlet	31
Figure 30. SGC 1913/1918 Compressor Ports Locations	32
Figure 31. SGC 2313/2317 Compressor Ports Locations	33
Figure 32. SGC 2321 Compressor Ports Locations	34
Figure 33. SGC 2813/2817 Compressor Ports Locations	35
Figure 34. SGC 2821/2824 Compressor Ports Locations	36
Figure 35. SGC 3511/3515/3519 Compressor Ports Locations	37
Figure 36. SGC 3524 Compressor Ports Locations	38
Table 8. Compressor Ports, Sizes & O-Rings	39
SAE STRAIGHT THREAD O-RING FITTINGS - ASSEMBLY PROCEDURE FOR RWFII	40
Table 9. Assembly Torque	40
Table 10. 90° ELBOW ADAPTERS / O-RINGS STRAIGHT THREAD TO TUBE	40
Table 11. STRAIGHT ADAPTERS / O-RINGS STRAIGHT THREAD TO NPTF	40
RETURNING THE OLD COMPRESSOR	41
Table 12. Compressor Weights with Skid & Lifting Rings (less coupling)	41
COMPRESSOR MODEL AND PACKAGE DESIGNATIONS	42
Table 13. Compressor Package/Model Cross-reference	42
INDEX BY NAME	43

TDSH/TDSL COMPRESSOR REPLACEMENT

The following procedure is required when a compressor is replaced in the field:

NOTICE

Refer to current Installation-Operation-Maintenance Manual of your unit for detailed shutdown/start-up instructions.

1. Verify that main power to the unit is disconnected. Lockout and tag the switch.
2. Close suction and discharge service valves, also liquid injection and economizer service valves, as applicable.
3. Slowly vent separator to low-side system pressure using the bypass line on suction trap.

NOTICE

Recover or transfer all refrigerant vapor, in accordance with applicable ordinances, before opening to atmosphere. The separator must be equalized to atmospheric pressure.

CAUTION

To prevent injury or damage to components, and for complete details regarding pressurized refrigerant vapor transfer and recovery, see the current Installation-Operation-Maintenance Manual for your unit.

4. Remove all tubing, piping, and wiring that is connected to the compressor.
5. Disconnect the coupling from the motor shaft.
6. Support the compressor by attaching a crane, or other appropriate lifting device, to the lifting eyebolts supplied with the compressor. Remove bolts from the compressor feet and discharge flange. Carefully remove compressor from base. See Table 7 for compressor weights. Save any existing shims.
7. Thoroughly clean the replacement compressor and motor feet and mounting pads of burrs and other foreign matter to ensure firm seating of the compressor.
8. Clean the discharge flange surfaces on the compressor and separator. Clean mounting surfaces of compressor feet.

9. Support the new compressor in the same fashion as the old compressor. Remove the solid plate from the discharge flange. The new gasket between the flange and solid plate will be used to seal the compressor to the separator flange. Make sure the gasket does not restrict gas flow. (Contact Baltimore Parts Center for replacement gaskets, Ph:800-336-7264)

10. Tighten bolts in the discharge flange connection to the compressor using a star pattern. Lube bolts then finger tighten all bolts, then torque to 1/3 of value (See Table 1) in star pattern increasing by 1/3's to full torque. Measure the clearance between the compressor feet and the base plate with a feeler gauge. If no clearance is evident, remove compressor and install a second gasket on discharge flange. Retorque flange.

11. Measure the clearance between the compressor feet and the base plate with a feeler gauge. Shim any compressor feet that exhibit a gap (gauge reading + .002"). A pry or jack can be used to lift the compressor .002". Reinstall and tighten bolts in feet to the support base and torque the mounting bolts to 250 ft-lb.

12. Install tubing, piping and wiring. Use the suction gasket supplied with the new compressor. It is located between solid plate and suction port. Refer to the Installation, Operation and Maintenance manual for P & I diagram.

13. Reinstall drive coupling. See current Installation-Operation-Maintenance Manual of your unit for coupling alignment procedure and bolt torques.

NOTICE

If motor was disconnected or changed, motor rotation must be checked before drive coupling is installed.

14. The shaft alignment must be measured and aligned to .004" total indicator reading. Verification of the alignment is necessary after the compressor is operated for approximately four hours.

NOTICE

Failure to follow this procedure could result in binding of internal parts, i.e. slide valve, slide stop, and bearings which could result in improper operation or premature failure of machine.

TDSH 163 and 193 ECONOMIZER PLUGS

On TDSH 163mm and 193mm machines built after January 1994, (Figure 2) the economizer port and plug configuration is different than that shown in Figure 1.

On the latter mentioned machines one piece of machined steel incorporates the economized cover and plug. This is also true for the XJS and XJF compressors. On the TDS_163mm and TDS_193mm machines only, the plug is inserted through the discharge casing, perpendicular to the economizer port.

The economizer plug is held in place by a straight-thread O-ring plug. A spring is used between the straight-thread plug and the economizer plug to keep the economizer plug from rattling if the economizer port is not used. Both the spring and the economizer plug must be removed in order for the vapor to flow through the economizer port and into the compressor. The existence of the economizer plug would block all flow of vapor through the economizer port.

Figures 1 & 2. Legend:

- SV-1 Economizer
- SL-1 Low Vi Liquid Injection & Economizer
- SL-2 High Vi Liquid Injection

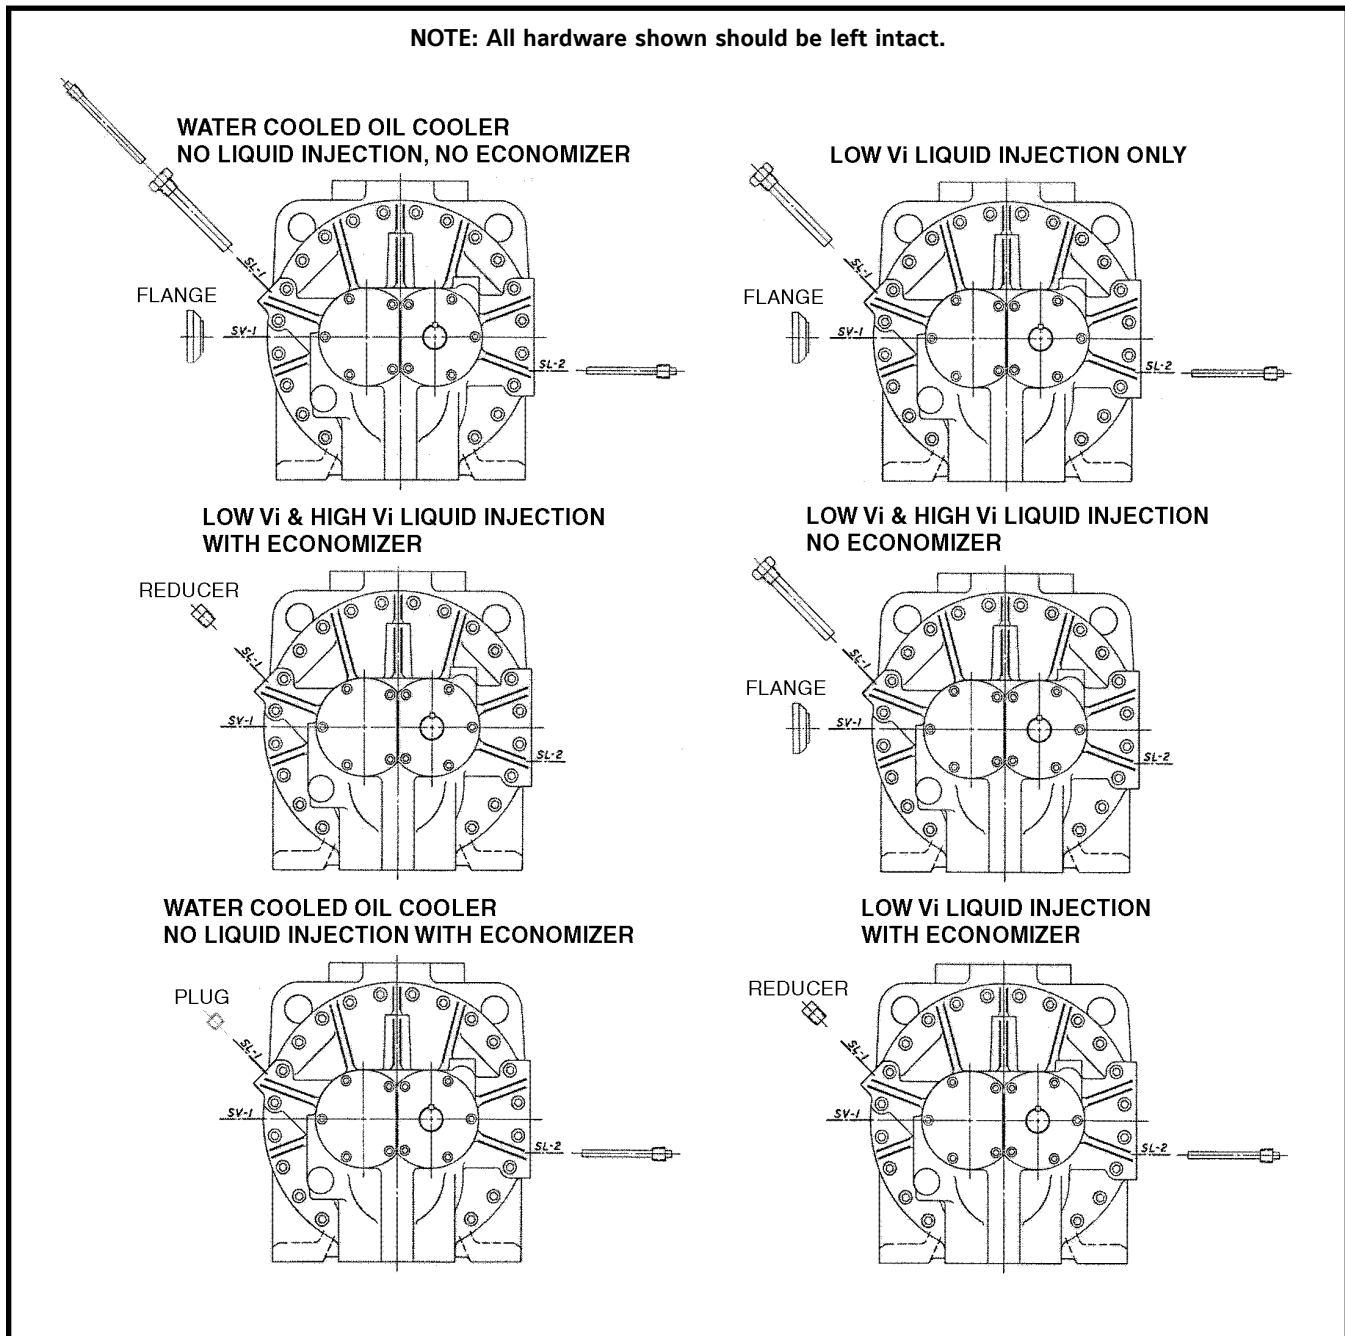


Figure 1. TDSH 163 & 193 Liquid Injection and Economizer Plugs before January 1994

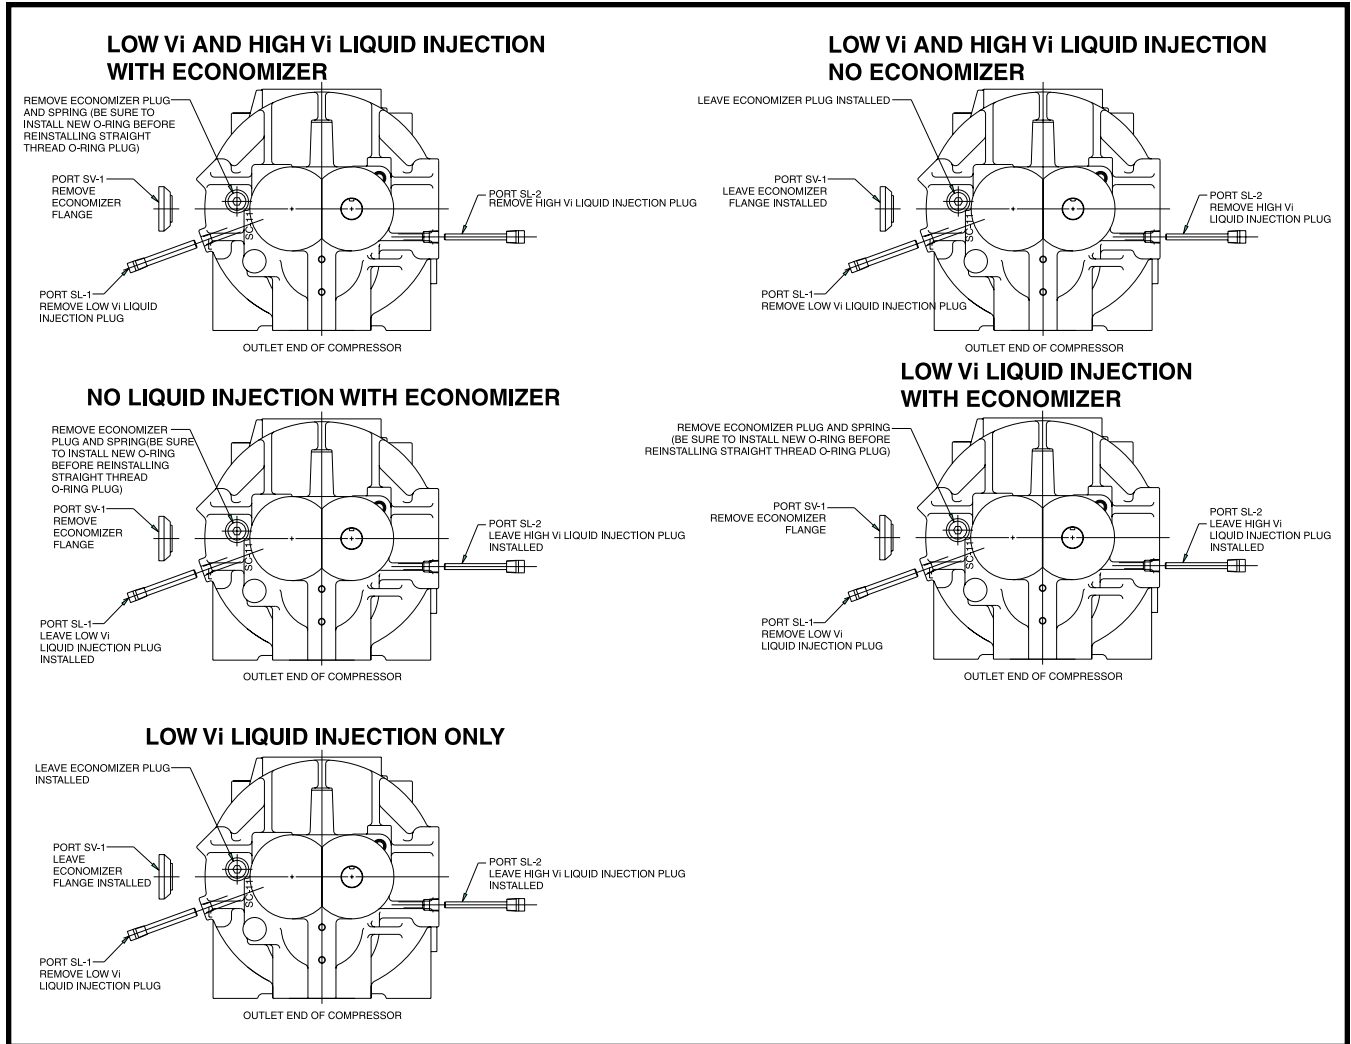



Figure 2. TDSH 163 & 193mm Economizer Port and Plug after January 1994

RWBII MODEL	Compressor Model	Discharge Flange to Separator Flange		Suction Flange	
		Bolt Size (mm)	Torque (ft-lb)	Bolt Size (mm)	Torque (ft-lb)
60	163S	M20 X 2.5	100	M16 X 2.0	120
76	163L	M20 X 2.5	100	M16 X 2.0	120
100	193S	M20 X 2.5	140	M20 X 2.5	180
134	193L	M20 X 2.5	140	M20 X 2.5	160
177	233S	M20 X 2.5	160	M20 X 2.5	160
222	233L	M20 X 2.5	160	M20 X 2.5	200
270	233XL	M20 X 2.5	160	M22 X 2.5	220
316	283S	M22 X 2.5	230	M22 X 2.5	220
399	283L	M22 X 2.5	230	M22 X 2.5	220
480	283SX	M22 X 2.5	230	M24 X 3.0	220
496	355S	M24 X 3.0	240	M30 X 3.5	350
676	355L	M24 X 3.0	240	M30 X 3.5	350
856	355XL	M24 X 3.0	240	M30 X 3.5	350

Table 1. TDSH Flange Bolt Torque

NOTE:

1. The bolt torque requirements for the compressor flange to separator flange are based on:
 - a. Gaskets: Garlock® Blue-Gard® 3300
 - b. Bolts: Class 8.8 or stronger hex head bolts, lightly oiled and clean

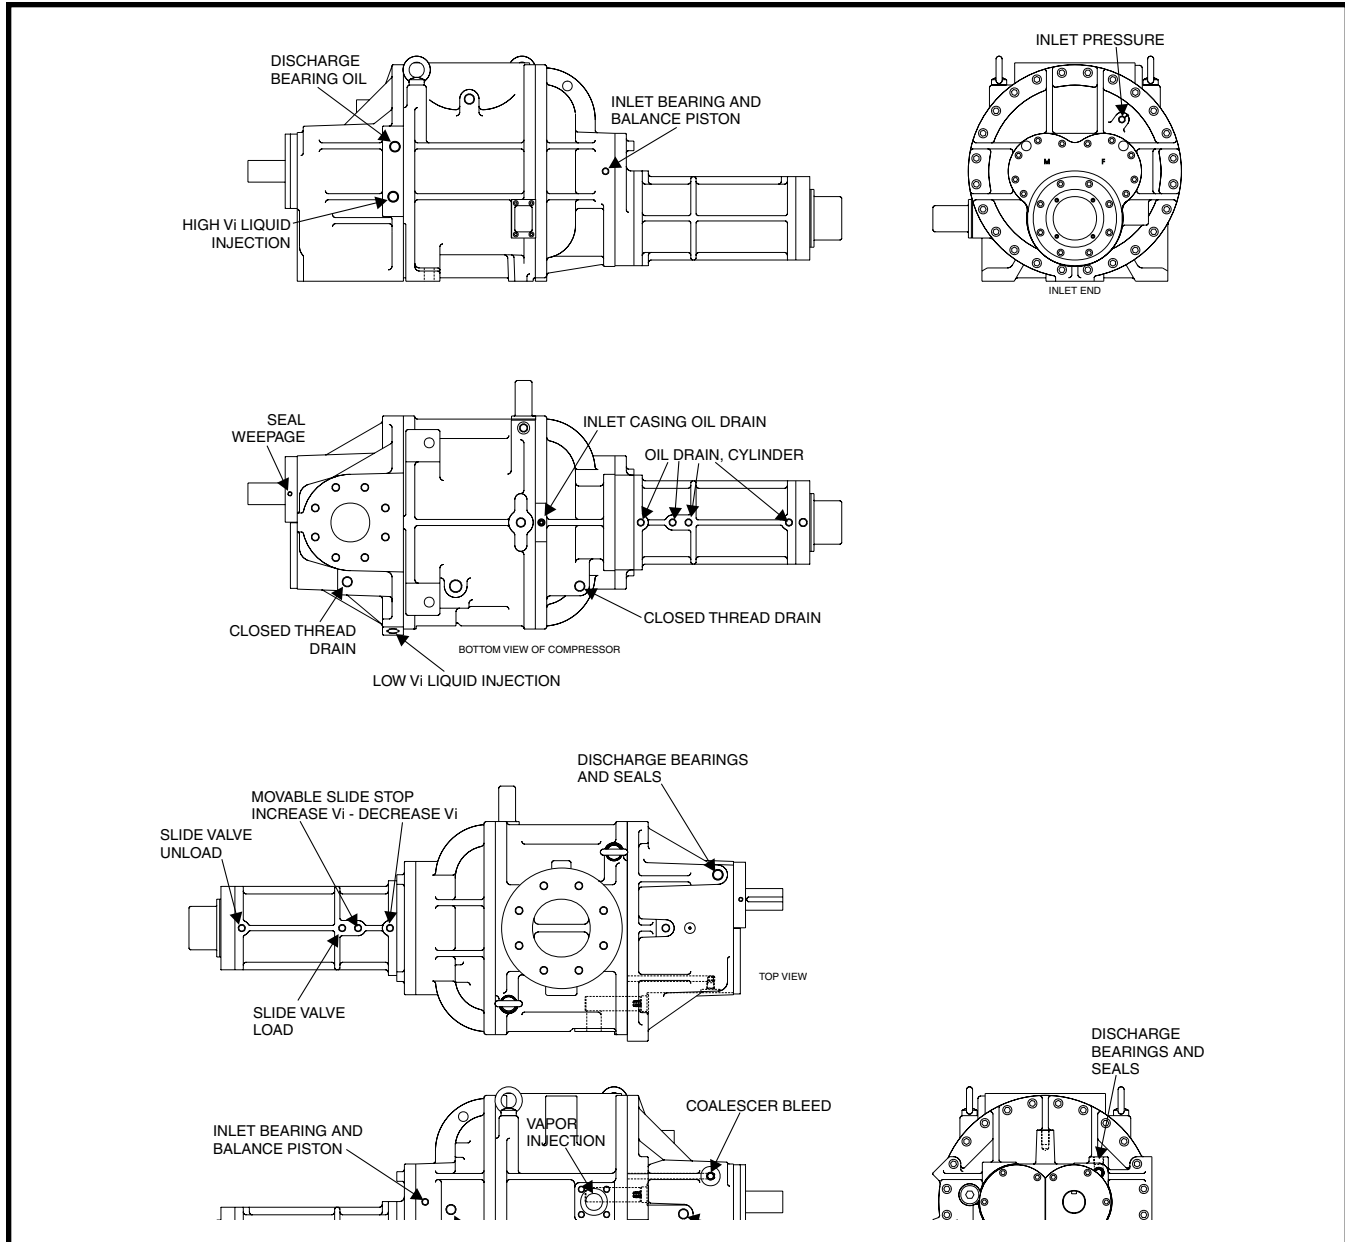

SYMBOL	SIZE	DESCRIPTION
SB-2	3/8-18 NPTF	INLET BEARING & BALANCE PISTON
SB-3	3/4-14 NPTF	DISCHARGE BEARINGS & SEAL
SC-1	3/8-18 NPTF	SLIDE VALVE - UNLOAD
SC-2	3/8-18 NPTF	SLIDE VALVE - LOAD
SC-3	3/8-18 NPTF	MOVABLE SLIDE STOP - INCREASE Vi
SC-4	3/8-18 NPTF	MOVABLE SLIDE STOP - DECREASE Vi
SC-5	3/8-18 NPTF	INLET PRESSURE
SC-6	3/8-18 NPTF	DISCHARGE PRESSURE
SC-7	1/8-27 NPTF	SEAL WEEPAGE
SC-8	1 11-1/2 NPTF	CLOSED THREAD DRAIN
SC-9	3/8-18 NPTF	INLET CASING OIL DRAIN
SC-10	3/4-14 NPTF	DISCHARGE BEARING OIL
SC-11	3/4-14 NPTF	CLOSED THREAD DRAIN
SC-13	3/8-18 NPTF	OIL DRAIN - CYLINDER
SD-1	3/4-16 UNF-2B	COALESCER BLEED (STD. THD. / O-RING P/N 980A0012K62)
SL-1	3/4-14 NPTF	LOW Vi LIQUID INJECTION
SL-2	3/4-14 NPTF	HIGH Vi LIQUID INJECTION
SM-1	3/4-14 NPTF	MAIN OIL INJECTION
SV-1	1 1/2 SO FLANGE	VAPOR INJECTION - TONGUE & GROOVE

Figure 3. 163/193mm Compressor Ports Locations


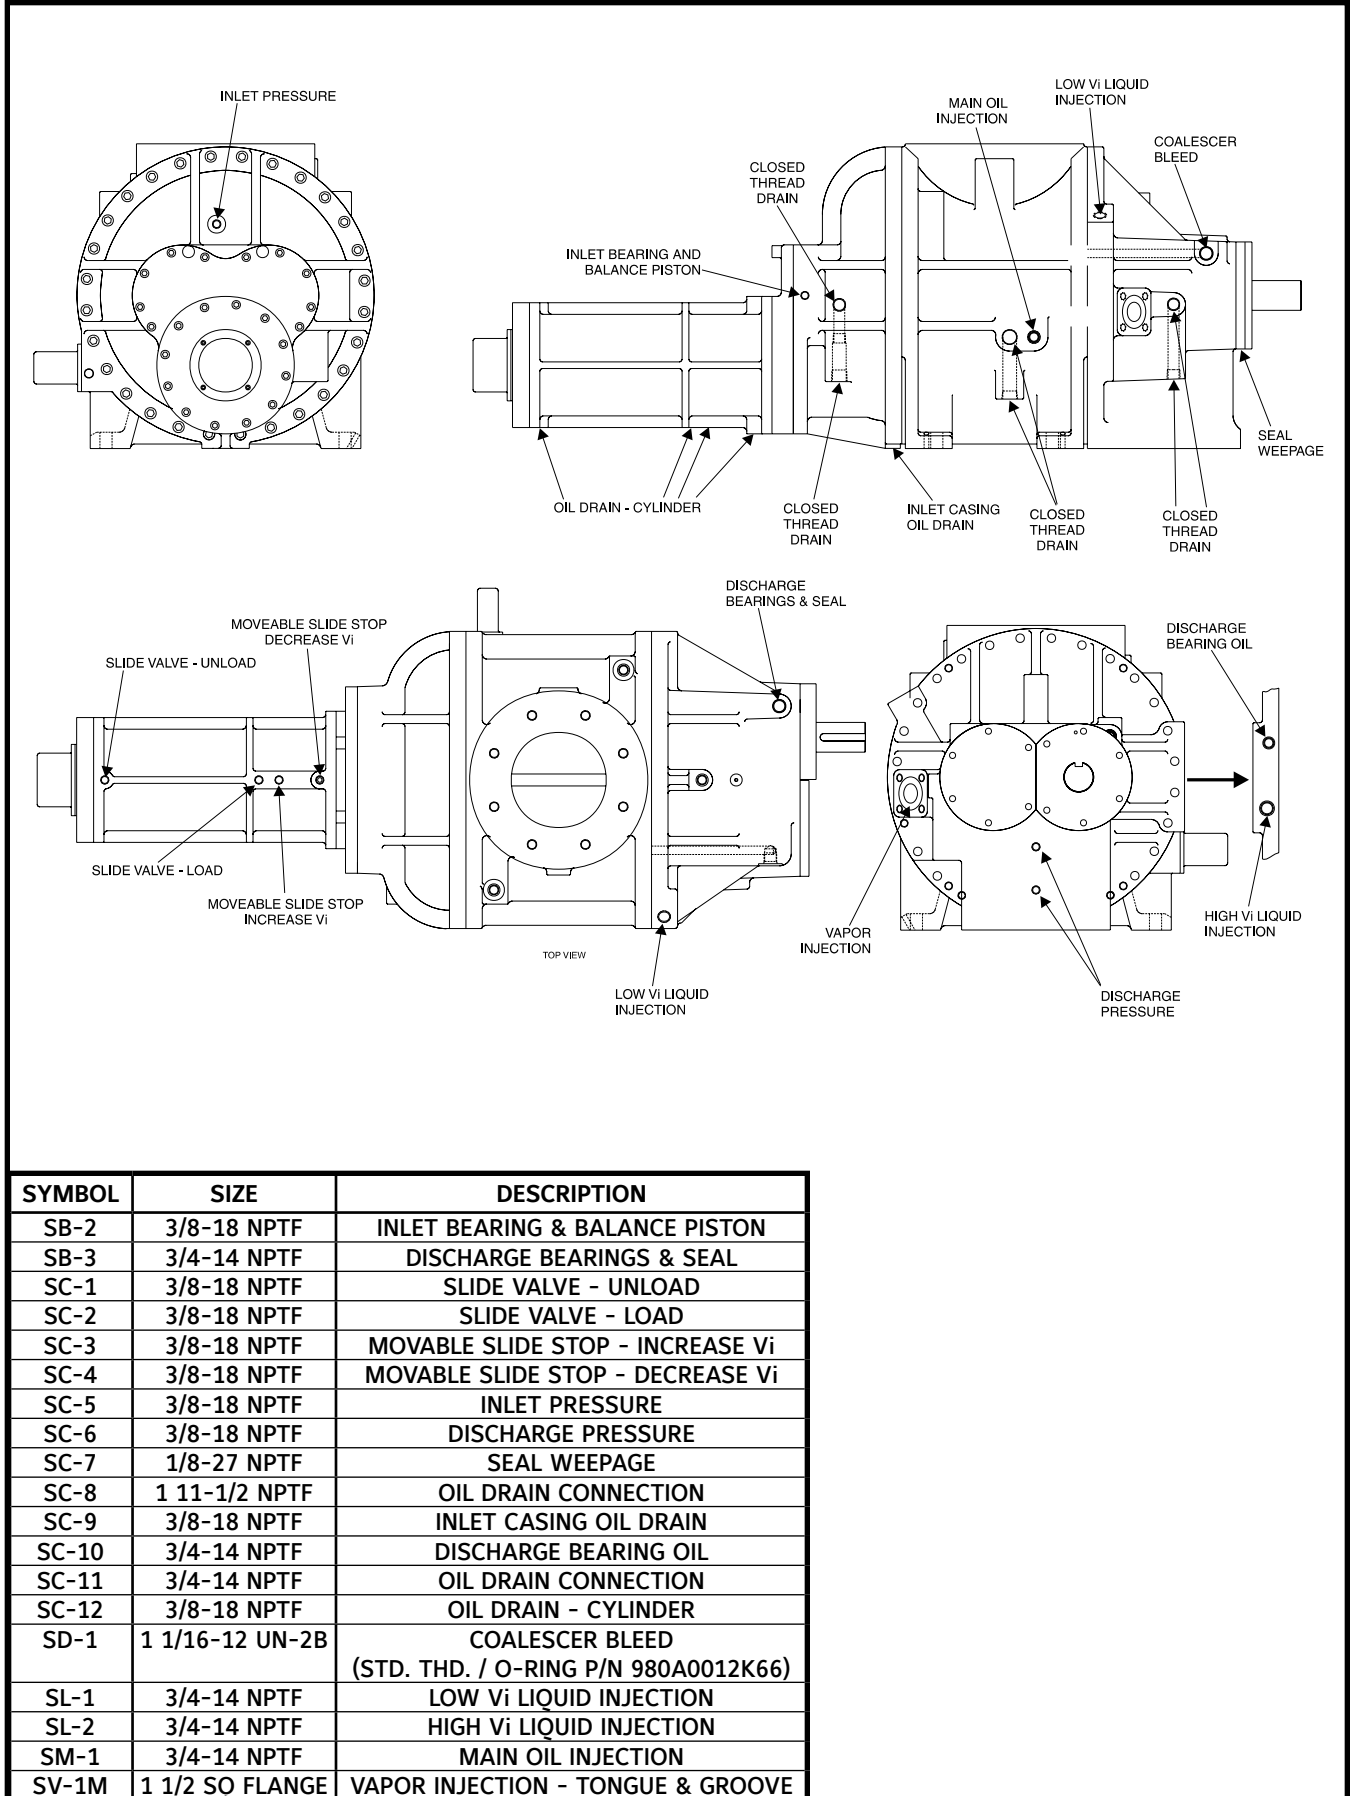


Figure 4. 233mm Compressor Ports Locations

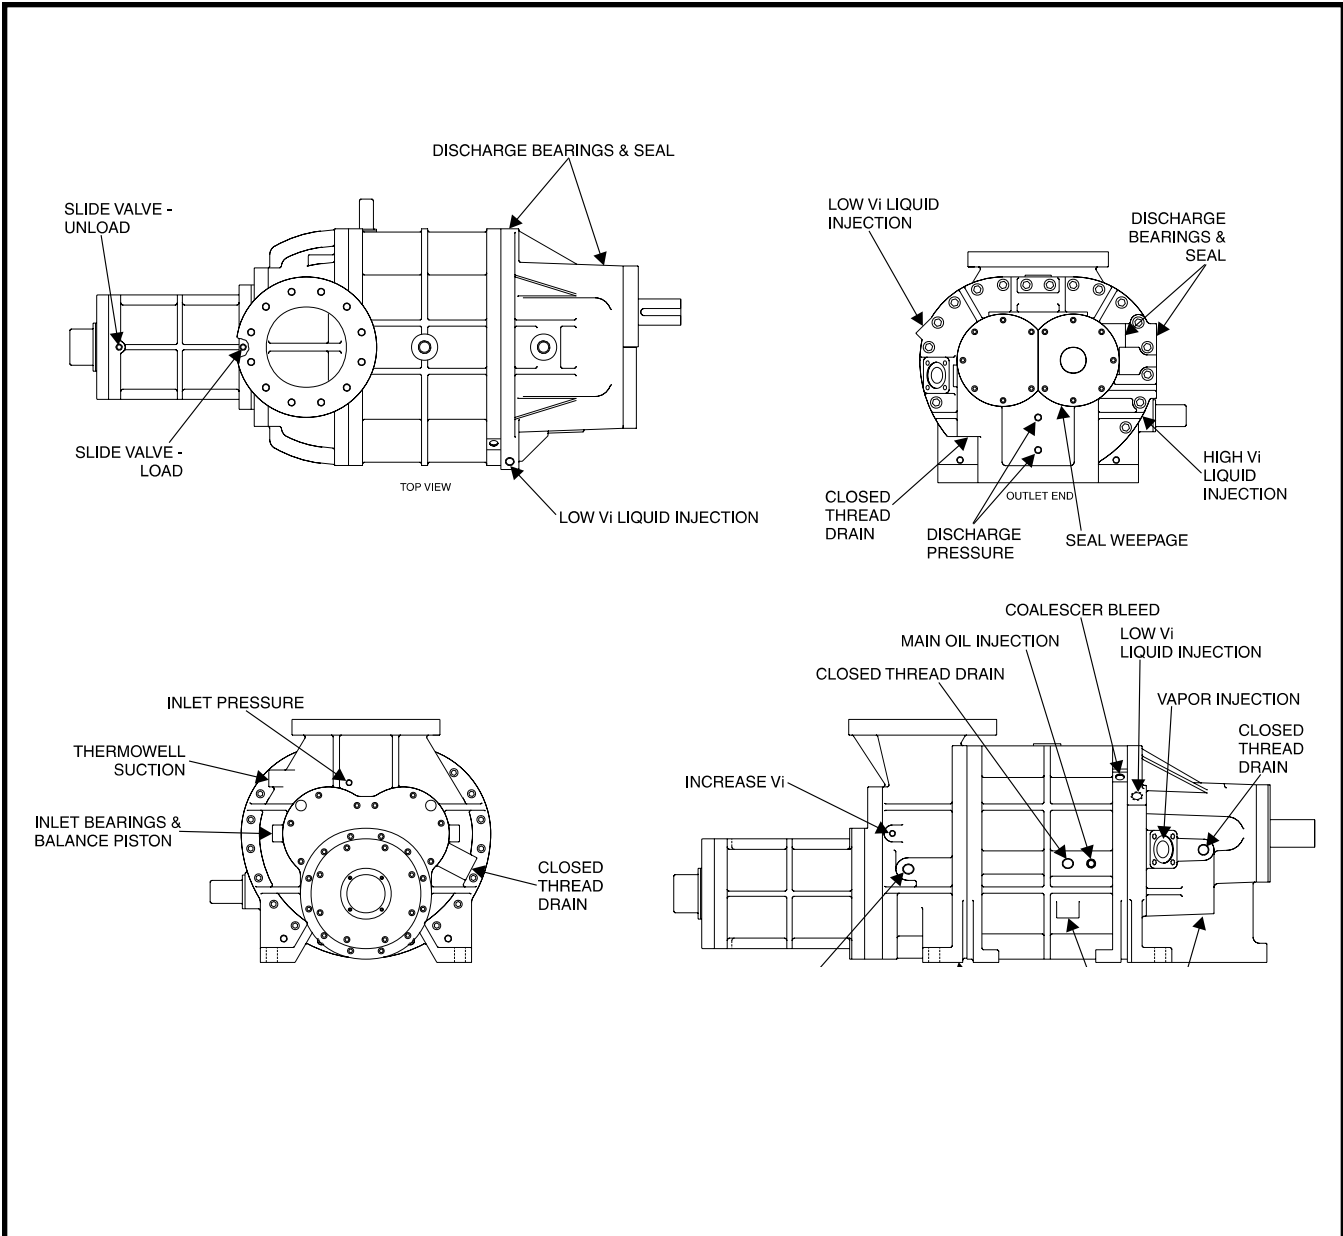

SYMBOL	SIZE	DESCRIPTION
SB-2	3/4-14 NPTF	INLET BEARING & BALANCE PISTON
SB-3	1 11-1/2 NPTF	DISCHARGE BEARINGS & SEAL
SC-1	3/8-18 NPTF	SLIDE VALVE - UNLOAD
SC-2	3/8-18 NPTF	SLIDE VALVE - LOAD
SC-3	3/8-18 NPTF	MOVABLE SLIDE STOP
SC-4	1/2-14 NPTF	INLET OIL DRAIN
SC-5	3/8-18 NPTF	INLET PRESSURE
SC-6	3/8-18 NPTF	DISCHARGE PRESSURE
SC-7	1/8-27 NPTF	SEAL WEEPAGE
SC-8	1 11-1/2 NPTF	CLOSED THREAD DRAIN
SC-9	1 1/4 11-1/2 NPTF	CLOSED THREAD DRAIN
SD-1	1 1/16-12 UN-2B	COALESCER BLEED (STD. THD. / O-RING P/N 980A0012K66)
SL-1	1 11-1/2 NPTF	LOW Vi LIQUID INJECTION
SL-2	1 11-1/2 NPTF	HIGH Vi LIQUID INJECTION
SM-1	1 11-1/2 NPTF	MAIN OIL INJECTION
ST-1	3/4-14 NPTF	THERMOWELL SUCTION
SV-1	2 SO FLANGE	VAPOR INJECTION - TONGUE & GROOVE

Figure 5. 283S/Lmm Compressor Ports Locations

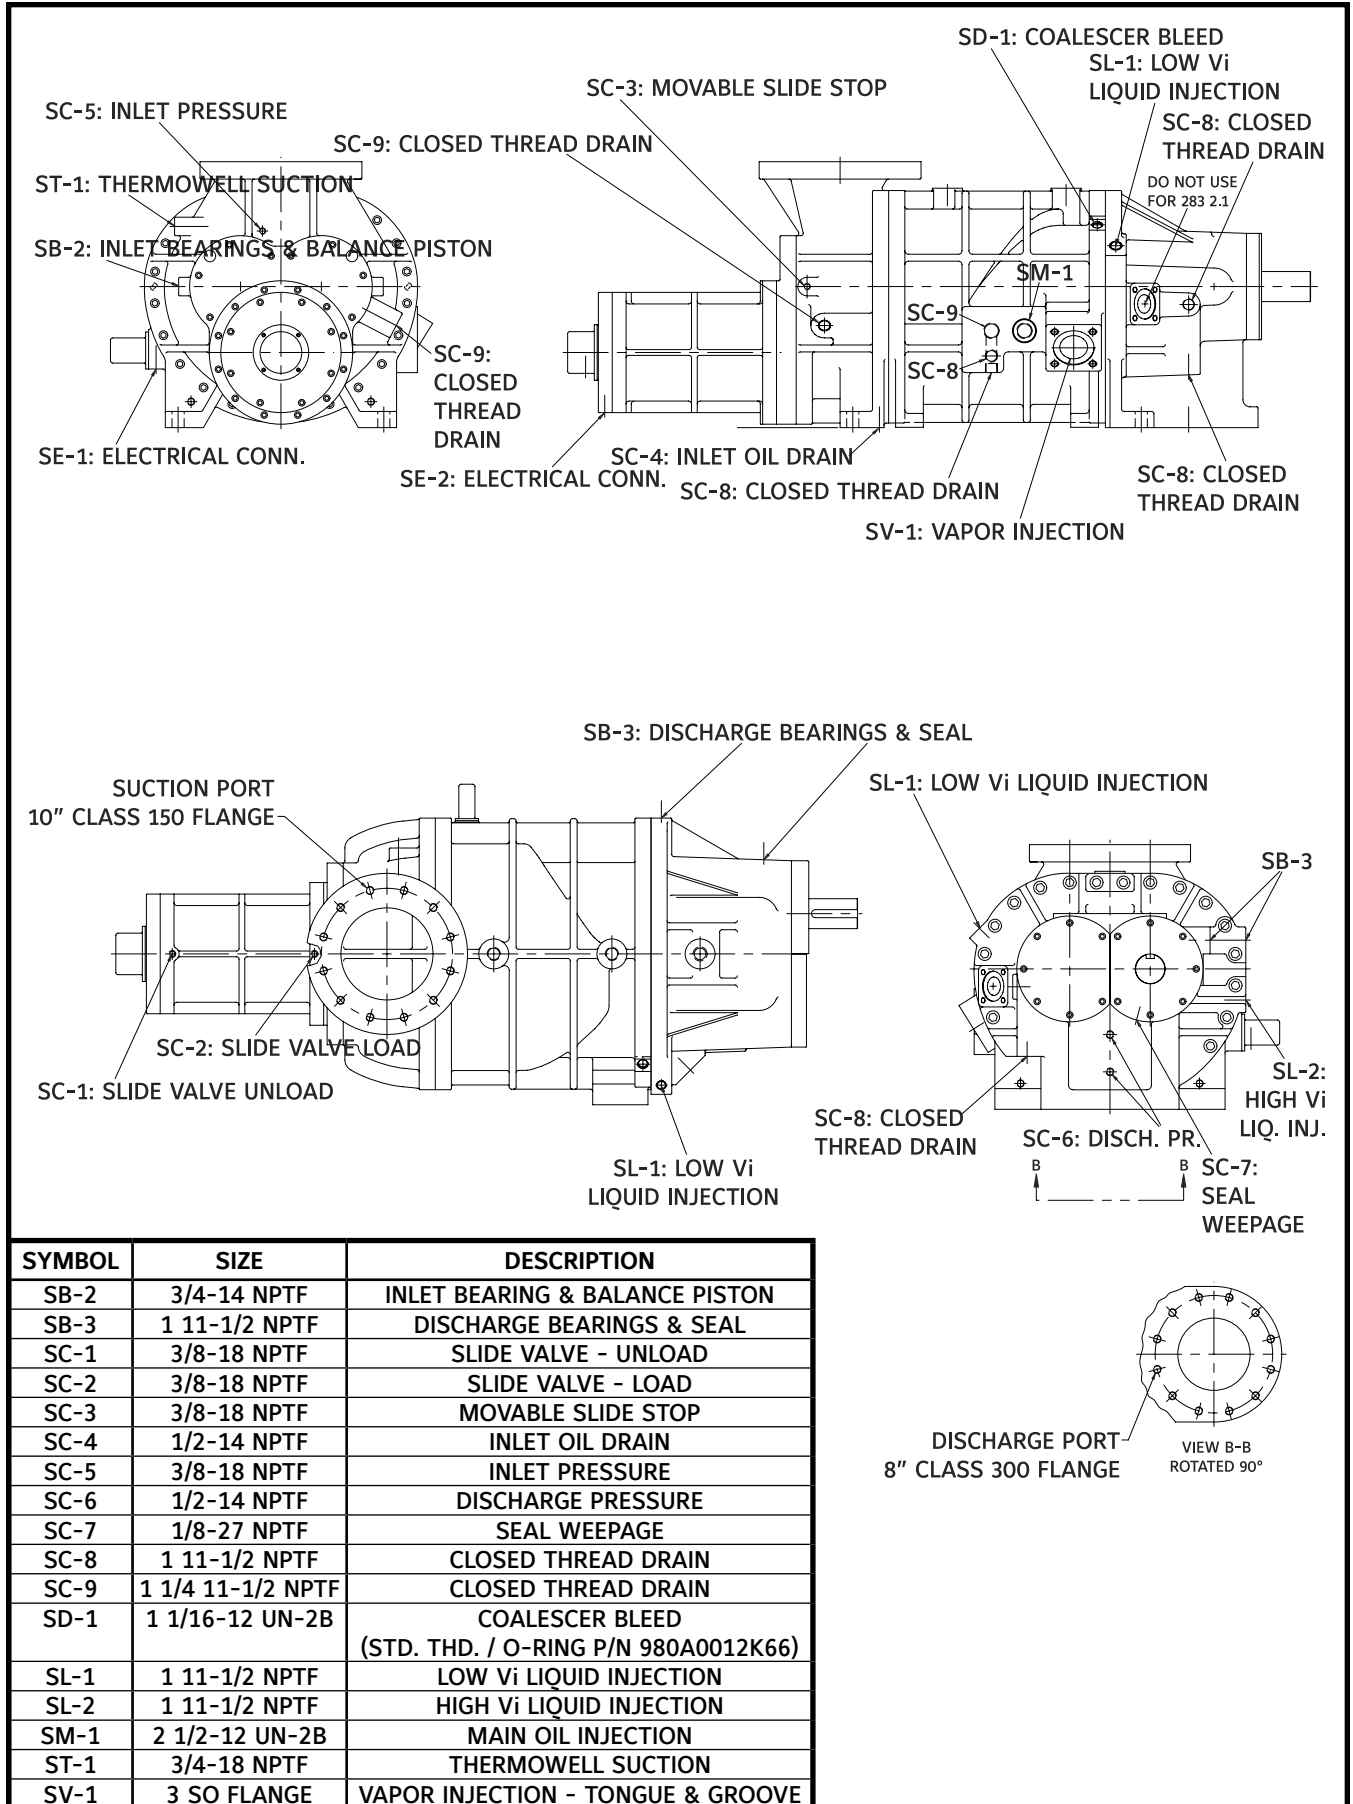


Figure 6. 283Sxmm Compressor Ports Locations

REPLACING TDSL 3-STEP WITH 4-STEP COMPRESSOR

When replacing a three-step RDB/TDSL compressor with a four-step machine, the increased heat of rejection while running at 25% to 50% capacity must be considered.

If the oil cooling process, or oil flow, is not sufficient to counter this increase in heat rejection, the first plug valve from the discharge end of the machine will need to be piped direct to the oil supply as shown in Fig. 7 & 9. When the machine starts, SP-3 will be closed, and will stay closed for the duration of the run. By piping the valve direct, there will be no need to add the third solenoid or make changes to the control sequence. For sequence see Table 2.

If the cooling process and oil flow is sufficient for this increase in heat rejection, and the customer would like to take advantage of the third plug valve, the following steps will need to be taken to utilize the third plug:

- On an RDB Plus panel the E-Prom Chips (U-4 & U-5) will need to be replaced with four-step chips to actuate the third solenoid valve. On a Quantum controller you will need to contact your Frick Factor to access "Factory Setup" and change the compressor to "RDB 4-Step."
- A third solenoid valve will need to be mounted to the package. Oil supply will need to be tubed to the solenoid valve and from the solenoid valve to the third plug valve. See Figures 8 & 10.

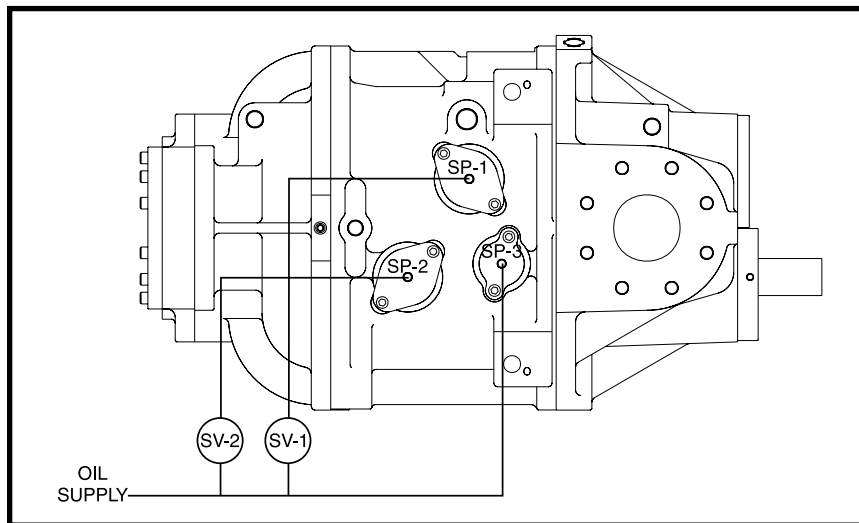


Figure 7. TDSL 283S & 283L 3-Step P & I Diagram with 4-Step Machine (bottom view)

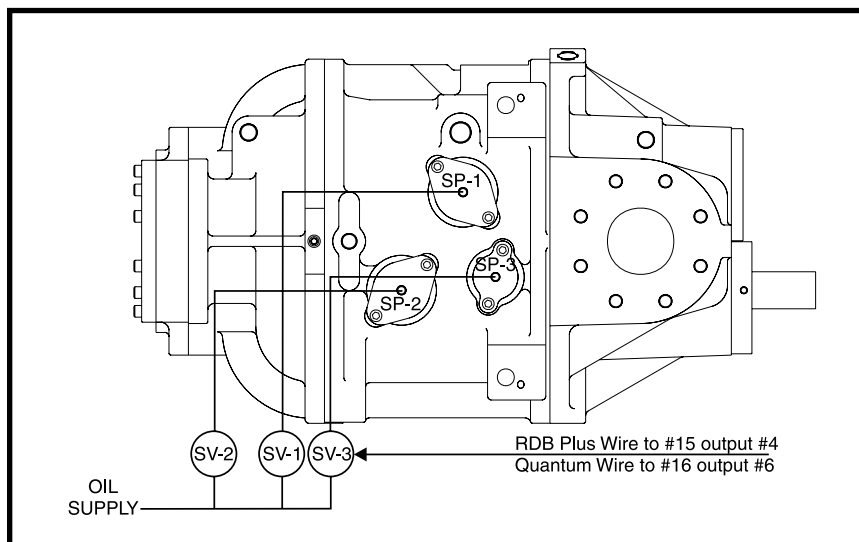


Figure 8. TDSL 283S/283L 4-Step P & I Diagram with 4-Step Machine (bottom view)

- On an RDB Plus panel, wire the added solenoid valve to wire #15, output four. On a Quantum™ controller, wire the solenoid to wire #16, output six. See Figure 8 & 10.
- On an RDB 546 with TDSL 283XL compressors, there are two plugs for each load position for a

total of six. The plugs are identified as SP1 and SP1a; SP2 and SP2a; SP3 and SP3a as shown in Figures 9 & 10. When piping to these plugs, ensure that each set are piped together as shown. The SP3 port on the TDSL 283XL can be connected independently to obtain the 25% as shown in Figure 7.

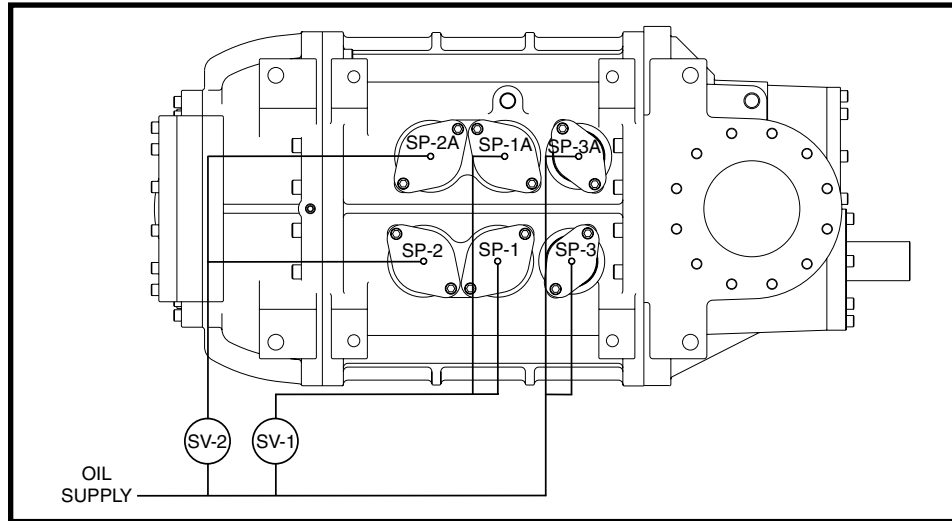


Figure 9. TDSL 283XL 3-Step P & I Diagram with 4-Step Machine (bottom view)

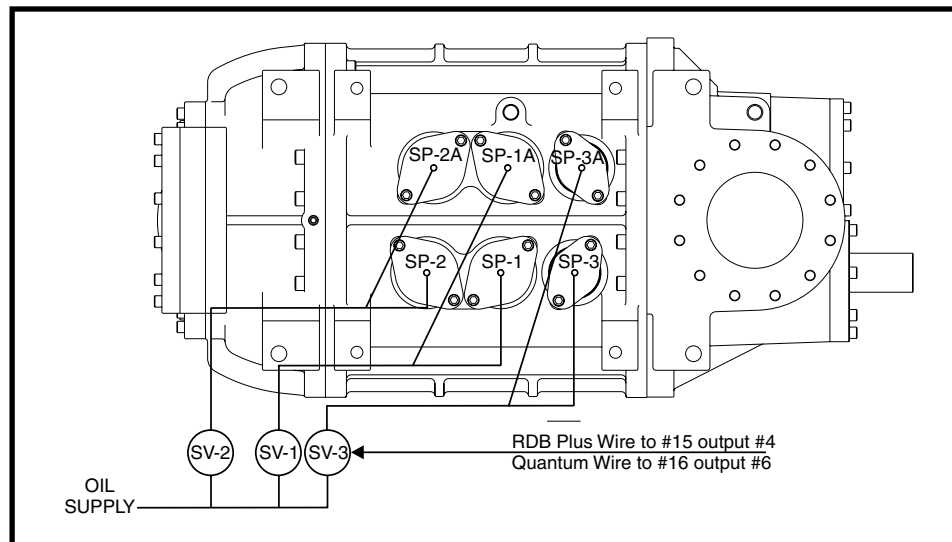


Figure 10. TDSL 283XL 4-Step P & I Diagram with 4-Step Machine (bottom view)

CAPACITY CONTROL SEQUENCE				
PORT	% FULL LOAD CAPACITY			
	25%	50%	75%	100%
Sol. - YY1	Deenergized	Deenergized	Energized	Energized
Port SP-1**	Open	Open	Closed	Closed
Sol. - YY2	Deenergized	Deenergized	Deenergized	Energized
Port SP-2**	Open	Open	Open	Closed
Sol. - YY3	Deenergized	Energized	Energized	Energized
Port SP-3**	Open	Closed	Closed	Closed

*Condition at start-up.
 **RDB 546 unit has two capacity control piston assemblies per step of control.
 When loading from minimum capacity (25% to 50% to 75% to 100%), solenoid YY1 must be energized before YY2.
 When unloading from full load (100% to 75% to 50% to 25%), YY2 must be deenergized before YY1 or YY3.

Table 2. RDB/TDSL Capacity Control Sequence

REPLACING TDSH 355 WITH TDSB 355

Due to the difference in the thrust bearing arrangement between the TDSH 355mm and TDSB 355mm compressors, changes to the balance piston piping and microprocessor chips are required. The following procedure explains the changes that must be completed:

OIL PIPING (See Figure 11 & Figure 12)

Remove the oil piping arrangement to the balance piston. TDSH 355 compressors in a high stage application are equipped with a regulating valve, solenoid valve and external orifice in the piping to the balance piston. A TDSH 355 compressor in a booster application has only a .125 inch orifice installed in the balance piston port SB-2. When replacing a TSDH 355 compressor used in either a booster, or high stage application with a TDSB 355, the balance piston piping must be changed to allow direct oil pressure from the oil manifold to the balance piston port SB-2. The regulating valve, solenoid valve, and orifice must be removed. A section of tubing needs to be installed in place of the valve arrangement removed. In the booster application, the orifice fitting at port SB-2 (Figure 11) must be removed and a standard size fitting installed. Port SB-2 is a 3/4 x 14 inch NPT connection.

PLUS MICROPROCESSOR

High stage TDSH 355 compressor units equipped with a RWBII Plus Microprocessor operates with a special

program that monitors the balance piston regulating devices. When installing a TDSB 355 compressor, the U-4 and U-5 micro chips must be replaced with new chips without the balance piston monitoring function. To order new chips, contact the Controls Department, at 717-762-2121. You will need to supply the information printed on the original chips, advise that the balance piston control function must be eliminated, and provide a purchase order number. A request can be made by fax to 717-762-0654 "E-Prom Chips Ordering."

QUANTUM™ MICROPROCESSOR

The "Balance Piston Setup" must be disabled. This can be done through the "Factory Setup" function. For "Factory Setup" function, contact your Frick® Factor.

REPLACING TDSH 355 WITH TDSH 355

In some cases*, packages were built with the bypass orifice (see Figure 11) sized to 3/16" instead of 1/8". This will not allow correct balance piston pressure when installing a new TDSH 355 compressor. It is important to then change the bypass orifice to 1/8". If in doubt the 1/8" orifice is acceptable in all applications using the TDSH 355 compressor. Remanufactured compressors do have the 1/8" orifice installed.

* TDSH 355 balance piston orifice was changed from 1/8" to 3/16" in December 1999. In July 2001 it was changed back to 1/8".

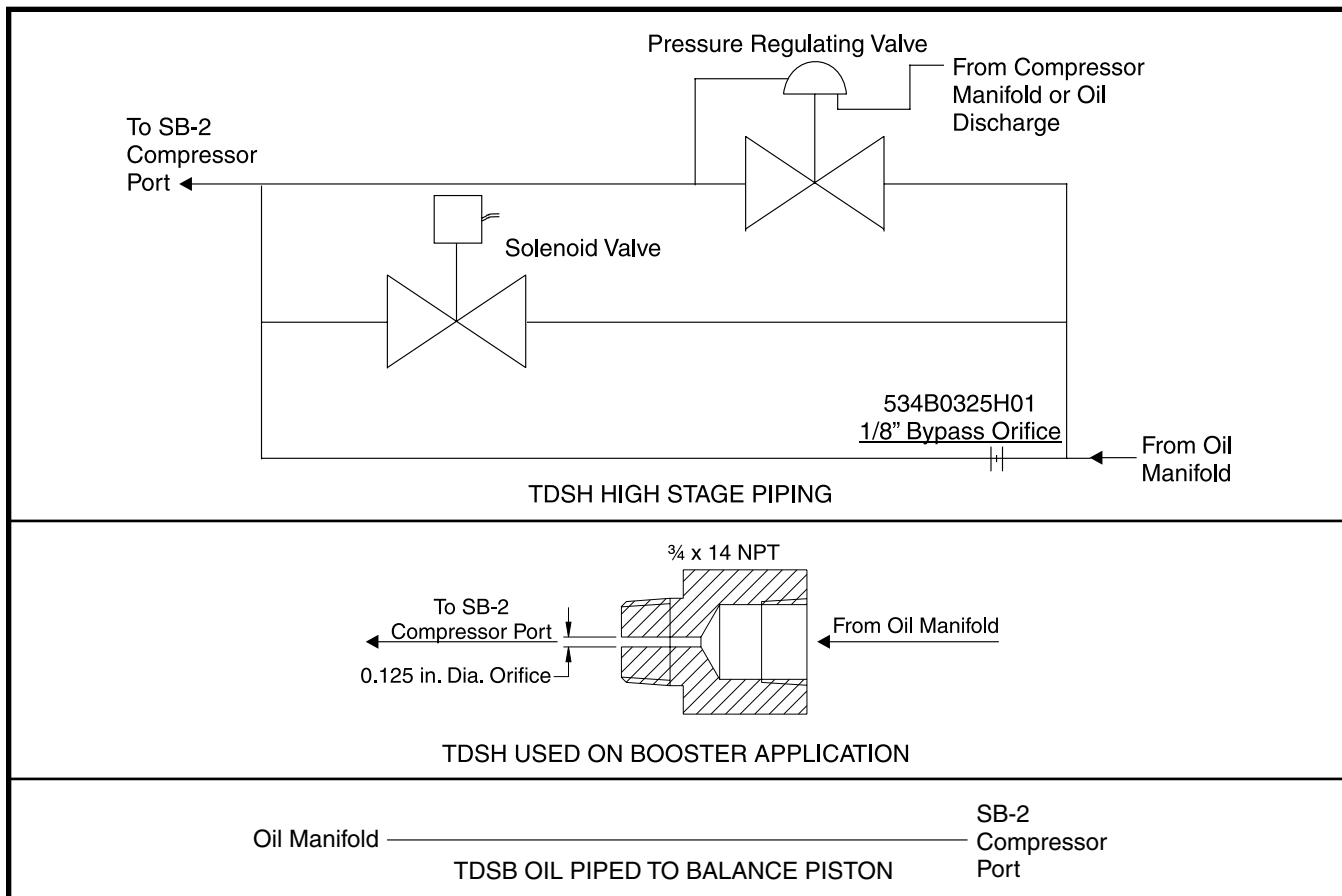


Figure 11. Booster 1/8" Orifice Fitting

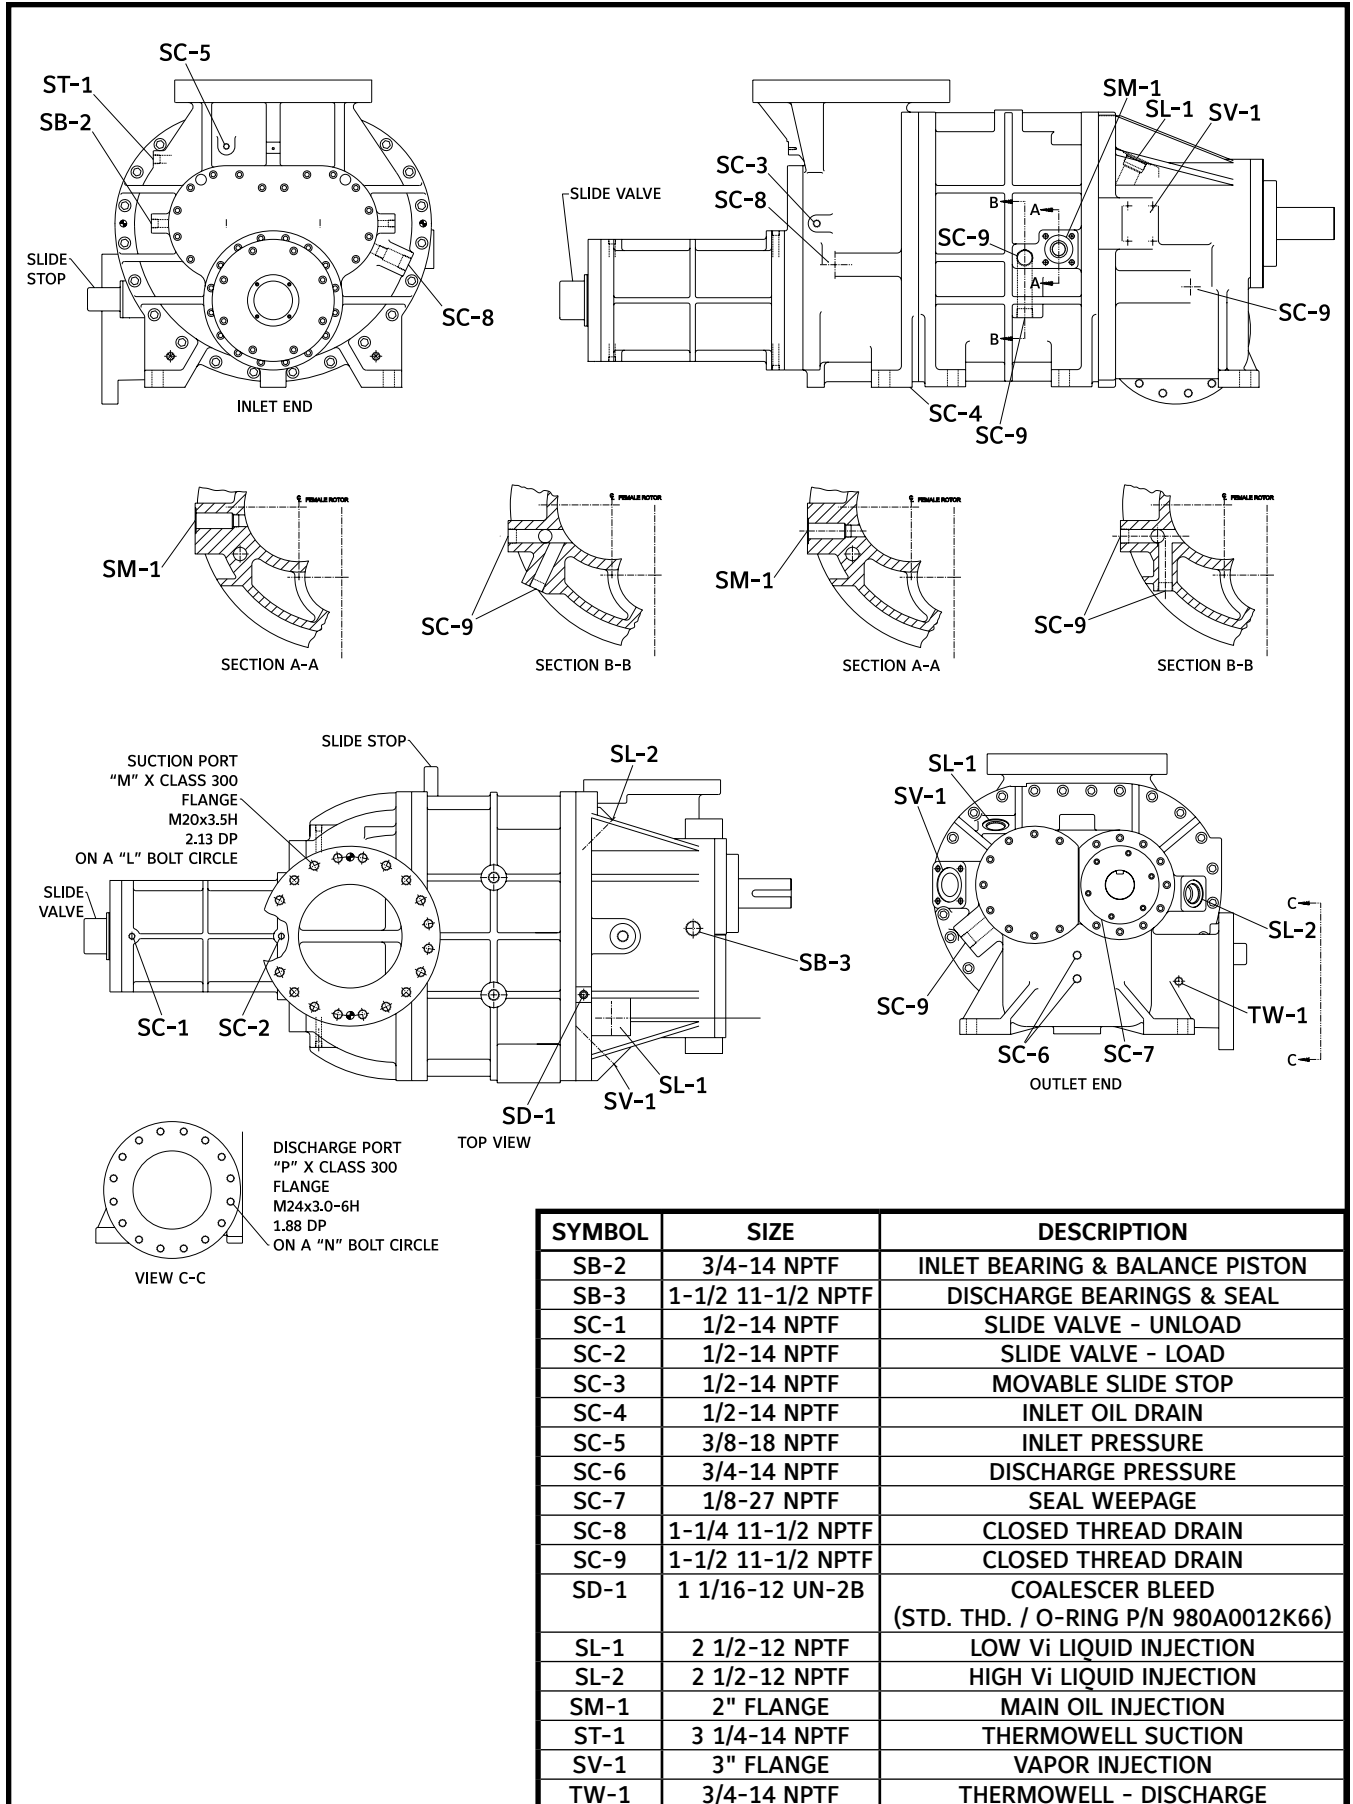


Figure 12. 355mm Compressor Ports Locations

NOTES

XJS COMPRESSOR REPLACEMENT

The following procedure is required when a compressor is replaced in the field:

NOTICE

Refer to current Installation-Operation-Maintenance Manual of your unit for detailed shutdown/start-up instructions.

1. Verify that main power to the unit is disconnected. Lockout and tag the switch.
2. Close suction and discharge service valves, also liquid injection and economizer service valves, as applicable.
3. Slowly vent separator to low-side system pressure using the bypass line on suction trap.

NOTICE

Recover or transfer all refrigerant vapor, in accordance with applicable ordinances, before opening to atmosphere. The separator must be equalized to atmospheric pressure.

⚠ CAUTION

To prevent injury or damage to components, and for complete details regarding pressurized refrigerant vapor transfer and recovery, see the current Installation-Operation-Maintenance Manual for your unit.

4. Remove all tubing, piping, and wiring that is connected to the compressor.
5. Disconnect the coupling from the motor shaft.
6. Support the compressor by attaching a crane, or similar lifting device, to the lifting eyebolts supplied with the compressor. Remove bolts from the compressor feet and discharge flange. Carefully remove compressor from base. See Table 12 for compressor weights.
7. Thoroughly clean the replacement compressor and motor feet and mounting pads of burrs and other foreign matter to ensure firm seating of the compressor.
8. Clean the discharge flange surfaces on the compressor and separator flange.
9. Support the new compressor in the same fashion as the old compressor. Remove the solid plate from the discharge flange. The gasket between the flange and solid plate will be used to seal the compressor to the separator flange. Make sure the gasket does not restrict gas flow. (Contact Baltimore Parts Center for replacement gaskets, Ph:800-336-7264)

10. Measure the clearance between the compressor feet and the base plate with a feeler gauge. Shim any compressor feet that exhibit a gap (gauge reading + .002"). A pry or jack can be used to lift the compressor .002". Reinstall and tighten bolts in feet. Prior to tightening discharge and suction flanges, check compressor feet for "soft foot". Tighten bolts in the discharge flange connection to the compressor using a star pattern. Lube bolts then make finger tight on all bolts. Next torque to 1/3 of table value in star pattern increasing by 1/3's to full torque. See Table 4. XJS/XJF Flange Bolt Torque.

11. Install tubing, piping and wiring. Use the suction gasket supplied with the new compressor. It is located between solid plate and suction port. Refer to the Installation, Operation and Maintenance manual for P & I diagram.

12. Reinstall drive coupling. See current Installation-Operation-Maintenance Manual of your unit for coupling alignment procedure.

NOTICE

If motor was disconnected or changed, motor rotation must be checked before drive coupling is installed.

13. The shaft alignment must be measured and aligned to .004" total indicator reading. Verification of the alignment is necessary after the compressor is operated for approximately four hours.

NOTICE

Failure to follow this procedure could result in binding of internal parts, i.e. slide valve, slide stop, and bearings which could result in improper operation or premature failure of machine.

XJS/XJF SLIDE VALVE SOLENOID VALVES

All replacement XJS/XJF compressors have a 2-1/4 x 2 inch block mounted on top of the discharge housing. This block covers the ports for the slide valve solenoid valve. If the compressor being replaced has the solenoid mounted on the discharge housing, remove the solenoid from the old compressor and remount on the new compressor. See Figure 13.

If the compressor being replaced has the slide valve solenoid mounted on the base of the unit, DO NOT remount the solenoid on the discharge housing. Reconnect the solenoid tubing in the same ports as was removed from the old compressor. See Figure 13.

Solenoid valves, coils, and gaskets changed after 13 June 2006. See the current version of 070.450-SPL XJS-XJF for the correct part numbers for your compressor.

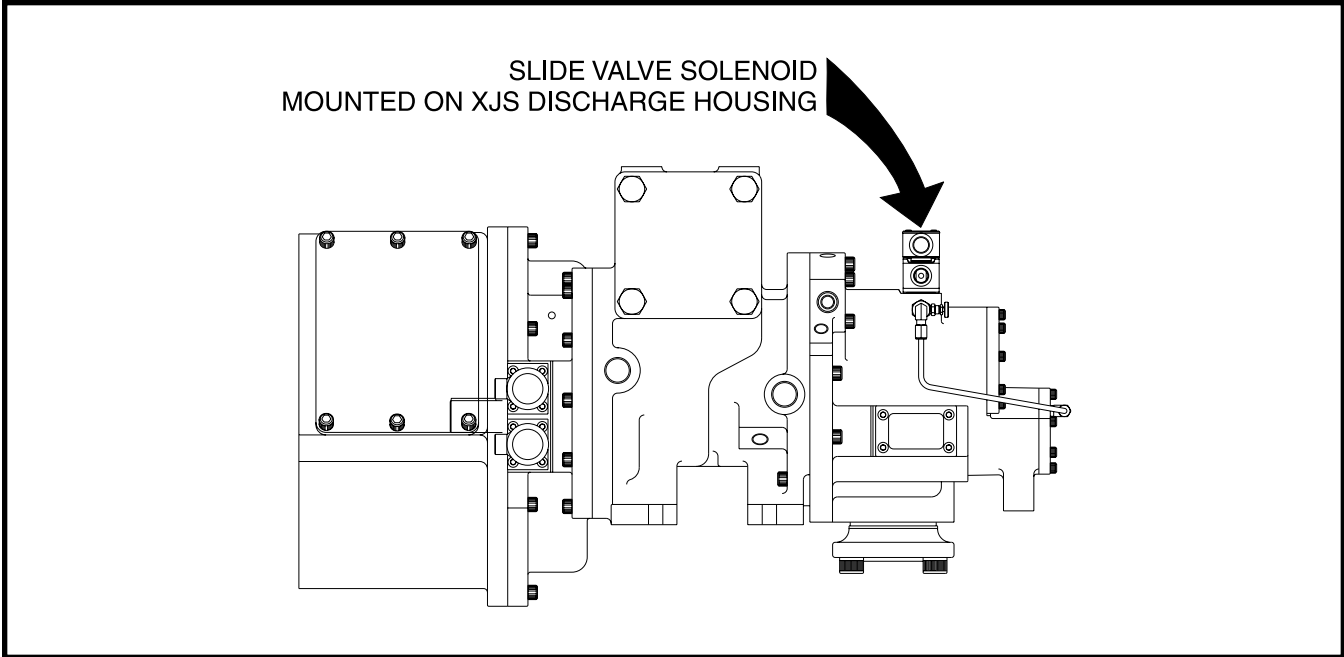


Figure 13. XJS Discharge Housing Mounted Solenoid

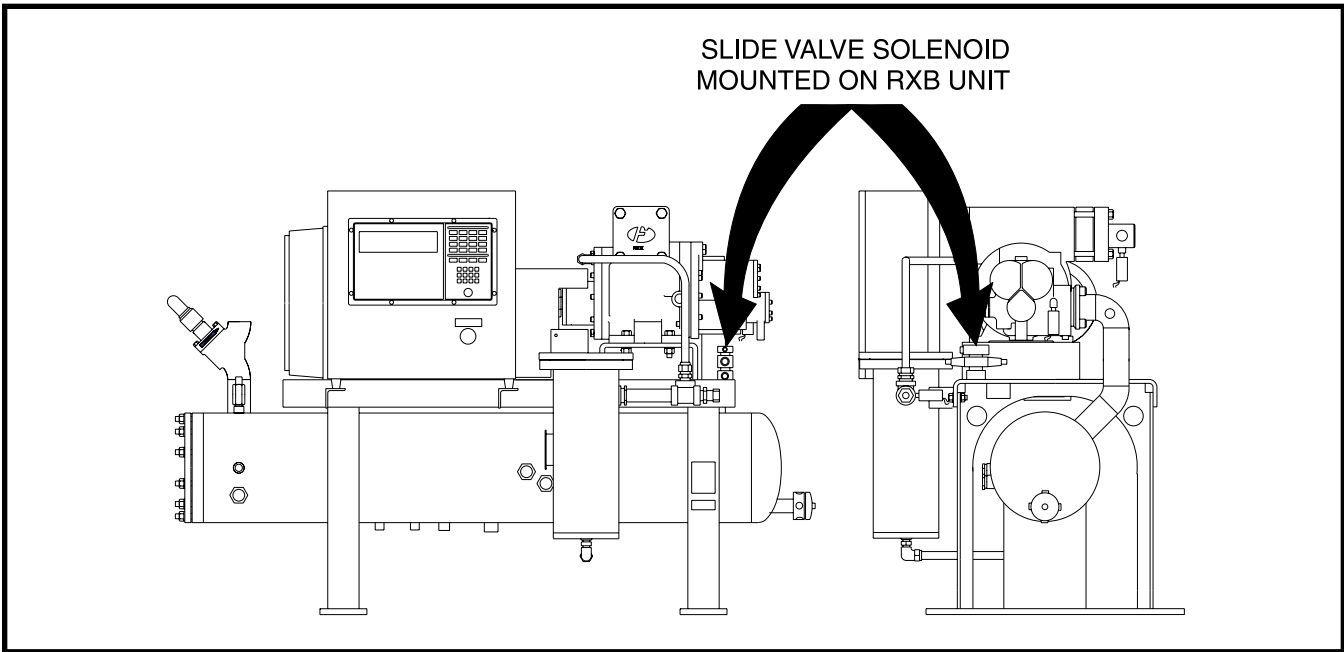


Figure 14. RXB Unit Housing Mounted Solenoid

RXF/XJF MOTOR & COMPRESSOR REPLACEMENT PROCEDURE

The purpose of this procedure is to outline the process for mounting replacement motors and compressors on RXF packages in the field. The goal is to ensure a stress-free compressor and motor arrangement to assure the designed life of the bearings and shaft seals. In addition, a stress-free arrangement will yield proper slide valve operation and minimize vibration.

Motor Replacement Procedure:

1. Verify that main power to the unit is disconnected. Lockout and tag the switch.
2. Prior to removing the motor from the RXF package, the compressor must be blocked up and properly supported. The entire weight of the compressor and tunnel must be supported. Reference Table 7 for compressor weights. Do not unbolt the compressor from the oil separator.
3. Remove the bolts between the motor and the compressor tunnel while supporting the motor weight. Then lift the motor from the compressor package. Reference Table 3 for motor weights.
4. Using a spring scale, weigh the replacement motor prior to assembly to the compressor. Reference Figure 15. If a spring scale is not available, contact factory or the motor manufacture for the weight of the motor (Table 3 may also be used as a guide).
5. Align the D-flange or C-face motor holes to the compressor tunnel holes while supporting the weight of the motor.
6. Insert the bolts through the flanged motor holes and into the compressor tunnel and tighten by hand.
7. Continue to support the motor weight by maintaining the same weight on the spring scale. If a spring scale



Figure 15. Weigh replacement motor

and/or overhead support is not available, then a hydraulic piston may be used underneath the center of the motor. Reference Figure 16. (Contact the Baltimore Parts Center for a Hydraulic Pump Kit, p/n 720A0029G01 - Ph:800-336-7264)

NOTICE

The motor weight must be supported to avoid stressing the compressor or motor. Do not over or under support the motor. The scale or pressure gage reading must be within +/- 10% of the motor weight.

8. If a hydraulic piston is used, then proceed with the following guidelines:
 - a. Determine the area of the piston ($\text{Pressure} = \pi r^2$) or ($\text{Piston Area} = \text{Pi} * \text{Piston Diameter}^2 / 4$).
 - b. Calculate the required pressure ($\text{Pressure} = \text{Weight of motor} * / \text{Piston Area}$). The cylinder manufacturer's website will show a chart giving the effective area.
* The hydraulic piston must support the motor weight, motor support/tunnel weight, plus 1/2 the compressor weight. Reference Table 3 & 12 for motor and compressor weights.
 - c. Using a pressure gage between the hydraulic piston and pump, increase the pressure until the gage reaches the calculated required pressure.
9. Torque the bolts between the motor and compressor tunnel to the required specification. Reference Table 4.
10. While the motor is still supported, shim the motor feet to less than .002 inch gap between each motor foot and the support base. Then, bolt the motor to the mounting base and torque the motor mounting bolts to 250 ft-lb.
11. The overhead support or hydraulic piston may now be removed. The blocks supporting the compressor may also be removed.
12. Verify motor rotation with coupling removed.

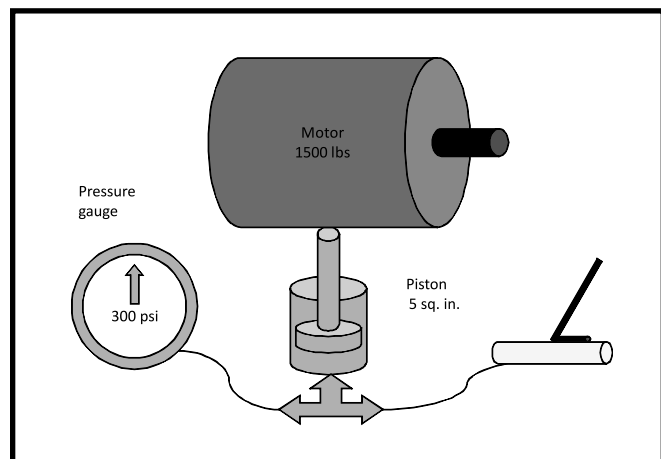


Figure 16. Hydraulic piston supports motor weight

Compressor Replacement Procedure:

1. Verify that main power to unit is disconnected. Lockout and tag the switch. Disconnect all wiring from the motor.
2. For compressor replacement, the motor and compressor must be removed as one assembly from the RXF Package.
3. Disconnect all tubing and pipe connections from the compressor. Support the assembly, including tunnel and motor. Support microprocessor as needed. Reference Table 3 & 12 for compressor and motor weights. Remove bolts and lift the assembly from the package. Tag and reuse any motor feet shims.

⚠ CAUTION

To prevent injury or damage to components, and for complete details regarding pressurized refrigerant vapor transfer and recovery, see the current Installation-Operation-Maintenance Manual for your unit.

4. Place a new gasket on the oil separator flange. (Contact the Baltimore Parts Center for replacement gaskets, Ph:800-336-7264). Assemble the new compressor to the tunnel and hand tighten the bolts in a star pattern. Then torque to 1/3 of table value in star pattern increasing by 1/3's to full torque. Refer to Table 4 for torque specifications.
5. Set the replacement compressor and motor assembly on the separator flange and align the oil separator

flange bolt holes to the compressor discharge flange bolt holes while supporting the assembly with a hydraulic piston underneath the motor. Reference Figure 18. The hydraulic piston must support the motor weight, motor support / tunnel weight, plus 1/2 the compressor weight. Reference Table 3 & 7 for motor and compressor weights. Follow the guidelines as outlined in step 7 of the motor mounting procedure above.

6. Insert the bolts through the oil separator flange and into the compressor discharge flange. Tighten bolts using a star pattern. Lube bolts then finger tight on all bolts, then torque to 1/3 of table value in star pattern increasing by 1/3's to full torque. Reference Table 4. XJS/XJF Flange Bolt Torques.
7. The motor feet should rise above the support base. If not, remove the compressor, add another gasket on top of the oil separator flange and repeat steps 4 & 5.
8. While the assembly is still supported, measure the clearance between the motor feet and base plate with a feeler gage. Shim the motor feet to gage reading plus .002" gap between each motor foot and the support base. Then, bolt the motor to the mounting base and torque the motor mounting bolts to 250 ft-lb. Reference Figure 17.
9. Reconnect all tubing and pipe connections to the compressor and all wiring to the motor.
10. Remove the lifting assembly.

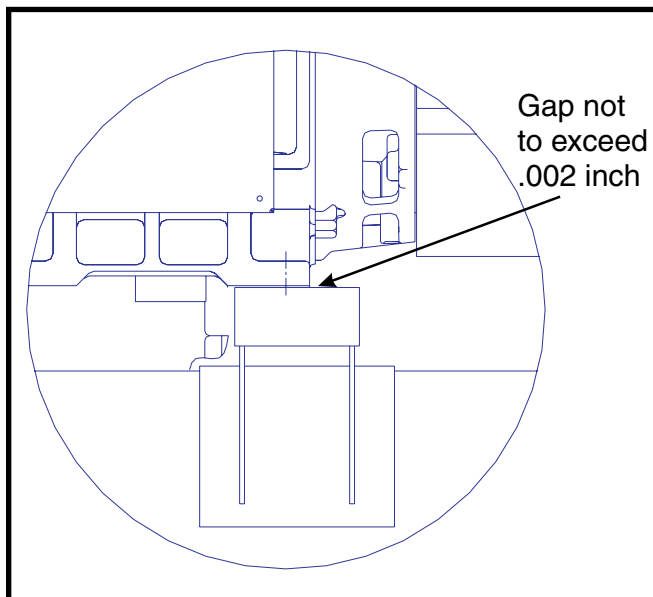


Figure 17. Shim motor feet to less than .002 inch gap

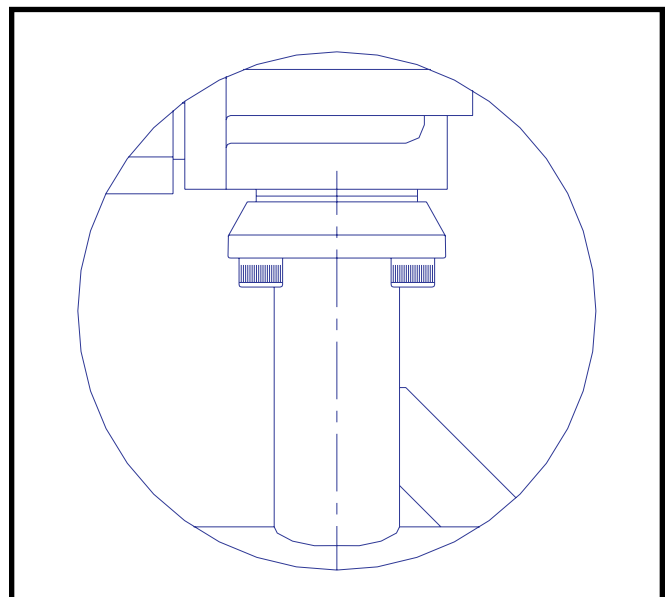


Figure 18. Set replacement compressor and motor assembly on separator flange

Motor HP	Frame	Weight Approx. lbs. (kg)
75	364TSC	630 (286)
100	365TSC	730 (331)
125	404TSC	930 (422)
125	LN405TDZ	1,000 (454)
134	LN405TDZ	1,000 (454)
150	405TSC	1,060 (481)
150	LN405TDZ	1,070 (485)
154	LN405TDZ	1,070 (485)
175	LN405TDZ	1,080 (490)
200	LN405TDZ	1,080 (490)
235	LN445TDZ	1,440 (653)
250	LN445TDZ	1,540 (699)
263	LN445TDZ	1,540 (699)
284	LN447TDZ	1,630 (739)
300	LN447TDZ	1,730 (785)
305	LN447TDZ	1,730 (785)
335	LN447TDZ	1,730 (785)
350	LN447TDZ	1,880 (853)
368	LN447TDZ	1,880 (853)
400	LN449TDZ	2,180 (989)
407	LN449TDZ	2,180 (989)
437	LN449TDZ	2,180 (989)
450	LN449TDZ	2,310 (1048)

XJS/XJF	Compressor Weight Approx. lbs. (kg)	Tunnel Weight Approx. lbs. (kg)
95	600 (272)	170 (77)
120	845 (383)	170 (77)
151	1,210 (549)	270 (122)

Table 3. XJS/XJF Motor / Compressor / Tunnel Weights

NOTE: The weights listed are for reference only and are approximate based on standard open drip proof motors operating at 60 Hz. Contact factory or the motor manufacturer to confirm the motor weight.

RXF Model	Compressor Model	Motor Flange to Compressor Tunnel		Discharge Flange to Separator Flange		Bolt Size (mm)	Suction Flange Torque (ft-lb)	Strainer Trap Torque (ft-lb)
		Bolt Size (in.)	Torque (ft-lb)	Bolt Size (mm)	Torque (ft-lb)			
12	XJF 95S	1/2 or 5/8	60	M20 X 2.5	80	M20 X 2.5	180	180
15	XJF 95M	1/2 or 5/8	60	M20 X 2.5	80	M20 X 2.5	180	180
19	XJF 95L	1/2 or 5/8	60	M20 X 2.5	80	M20 X 2.5	180	180
24	XJF 120S	1/2 or 5/8	60	M20 X 2.5	80	M22 X 2.5	250	250
30	XJF 120M	1/2 or 5/8	60	M20 X 2.5	80	M22 X 2.5	250	250
39	XJF 120L	1/2 or 5/8	60	M20 X 2.5	80	M22 X 2.5	250	250
50	XJF 120S	1/2 or 5/8	60	M20 X 2.5	80	M22 X 2.5	250	250
58	XJF 151A	5/8 or 3/4	145	M22 X 2.5	80	M24 X 3.0	300	470
68	XJF 151M	5/8 or 3/4	145	M22 X 2.5	80	M24 X 3.0	300	470
85	XJF 151L	5/8 or 3/4	145	M22 X 2.5	80	M24 X 3.0	300	470
101	XJF 151N	5/8 or 3/4	145	M22 X 2.5	80	M24 X 3.0	300	470

Table 4. XJS/XJF Flange Bolt Torque

NOTE:

1. Bolt torque requirements for the motor flange to compressor tunnel are based on metal to metal contact.
2. Bolt torque requirements for the compressor flange to separator flange are based on:
 - a. Gaskets: Garlock® Blue-Gard® 3300
 - b. Bolts: Class 8.8 or stronger hex head bolts, lightly oiled and clean

SLIDE VALVE POTENTIOMETERS vs LINEAR TRANSMITTERS FOR RXF/RXB UNITS.

Remanufactured XJF compressors are supplied with a slide valve linear transmitter. The linear transmitter is used only with the Quantum™ / Quantum™ LX microprocessor.

RXF/RXB Plus Microprocessors or Mini-micros:

If you are replacing an older compressor that has an RXF/RXB Plus microprocessor, or a Mini-micro, remove the slide valve potentiometer assembly and indicator rod assembly (See Fig. 19a) prior to returning the compressor. Save these parts. Remove the linear transmitter (See Fig. 19b) from the remanufactured compressor. Replace it with your parts saved from the original compressor.

It is recommended that you retain the old compressor until the new compressor is installed. However, if you have shipped the original compressor back before removing the parts, and the unit does not have a Quantum™ / Quantum™ LX microprocessor, you will need to order the following parts. (See Figure 19a):

Description	XJF 95	XJF 120	XJF 151	Item
Slide Valve Potentiometer Service Kit	111Q0045464	111Q0045464	111Q0045464	1
Indicator Rod	534B0185H01	534B0235H01	534B0516H01	2
Indicator Rod Guide	534C0382H01	534C0382H01	534C1064H01	3
Spring	534A0148H01	534A0148H01	534A0148H01	4
O-ring (Internal)	980A0012A11	980A0012A11	980A0012A11	5
O-ring (External)	980A0012K62	980A0012K62	980A0012K62	6

Quantum™ Controls:

If the original unit has a Quantum™ / Quantum™ LX microprocessor with a slide valve potentiometer, the linear transmitter (See Fig. 19b) on the remanufactured compressor may be used in place of the potentiometer. It will be necessary to install links or jumpers (P/N 333Q0001419) at link location J14, J16, and pins 1 & 2 of J15 on the older style analog board (May 2003 and earlier). If the Quantum™ has the current style analog board (June 2003 and later), this is done with a channel type selection in Factory Setup. Contact your Frick® Factor for access and instruction. The linear transmitter needs to be set to 0-20 mA. It will also be necessary to have a DIN connector (P/N 649A0890H01) and Gasket (P/N 649A0890H11) to connect the existing wire to the transmitter. Make sure the connector is wired as shown in publication S90-010 M Quantum™ Control Panel Maintenance or 090.020-M Quantum™ LX Control Panel Maintenance for the RXF unit. (See Figure 19c).

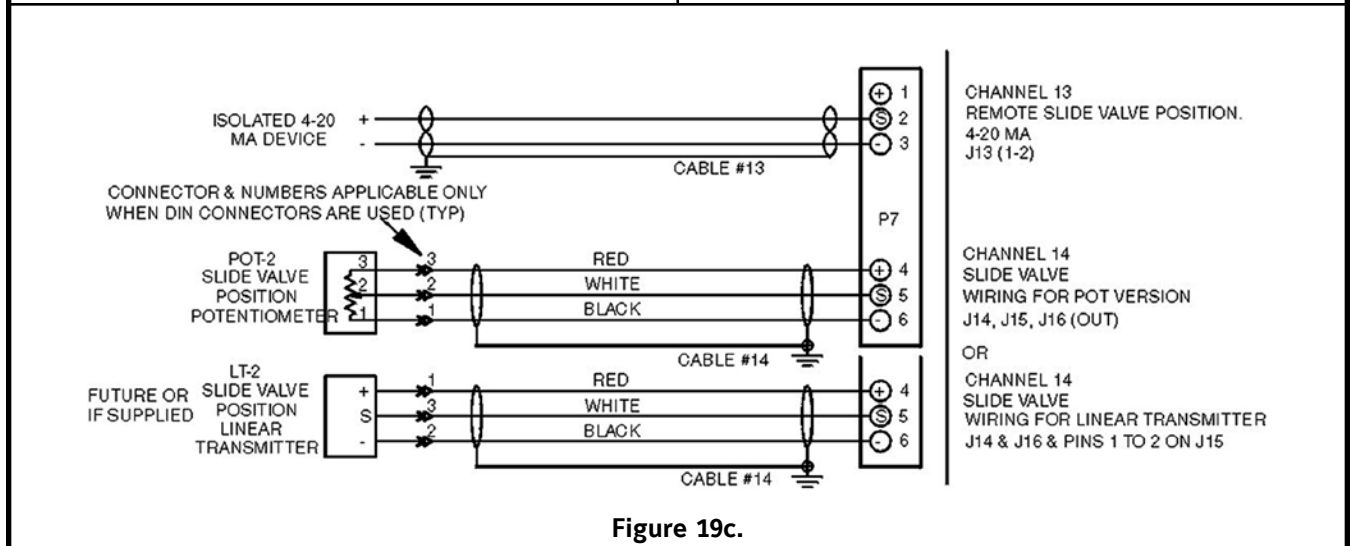
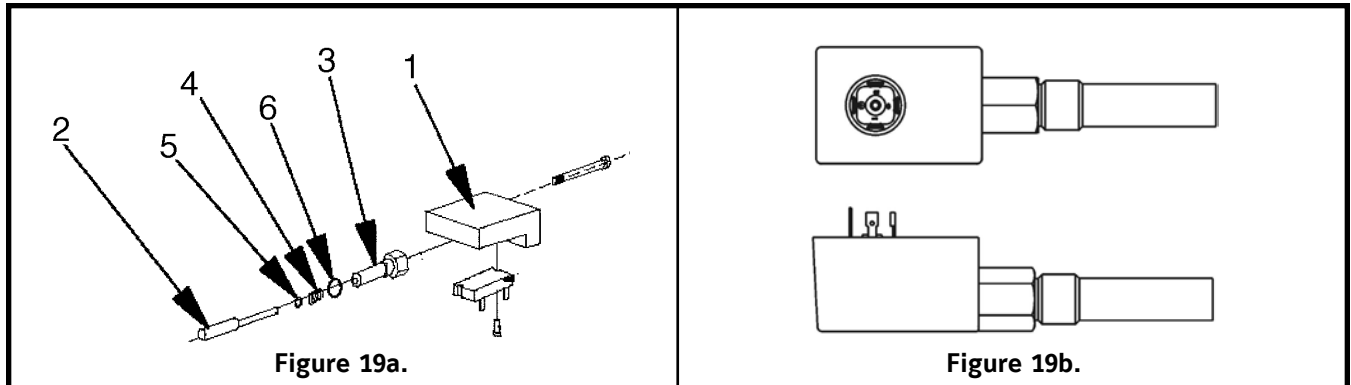


Figure 19. Slide Valve Potentiometers vs Linear Transmitters on Remanufactured XJF Compressors

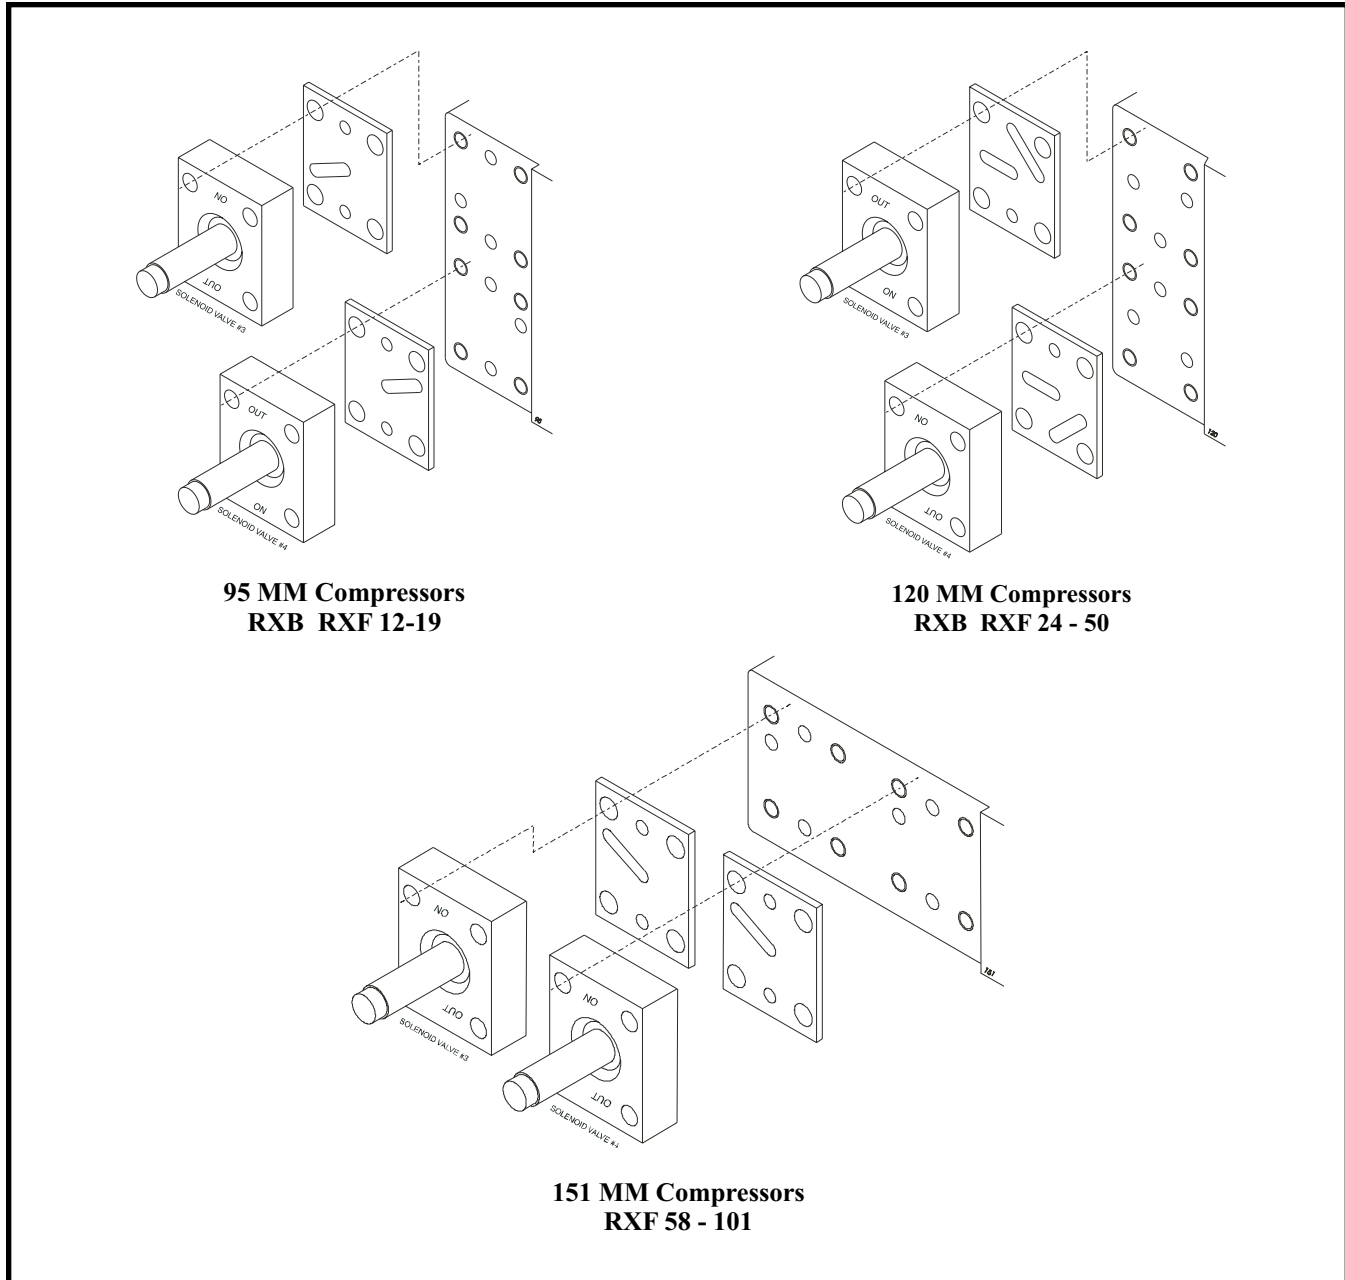


Figure 20. Installation of Precision Engineering Vi Control Valves and Gaskets, RXB & RXF Packages

Vi CONTROL VALVES AND GASKETS

Proper installation of the Vi control valves and gaskets on XJS and XJF compressor models (RXB and RXF packages) is essential to the operation of this equipment. Incorrectly installed parts may cause the compressor to operate at the wrong Vi, or to load or unload improperly. Operation at the wrong compressor Vi can cause excessive power consumption, noise, vibration, or excessive oil foaming.

The following chart provides the logic of solenoid valve operation to adjust the compressor volume ratio. Solenoid valve #3 and #4 are referenced in the IOM manuals as YY3 and YY4 or SV3 and SV4 respectively.

Vi	Solenoid Valve #3	Solenoid Valve #4
2.2	Energized	Energized
3.5	De-Energized	Energized
5	De-Energized	De-Energized

Figures 20 and 21 show the correct installation of gaskets and valves. Note the "NO" (normally open) and "OUT" (vent) labels on the solenoid valves. Position valves as shown to insure proper operation of compressor.

NOTICE

Valve positions are different on the different compressor sizes.




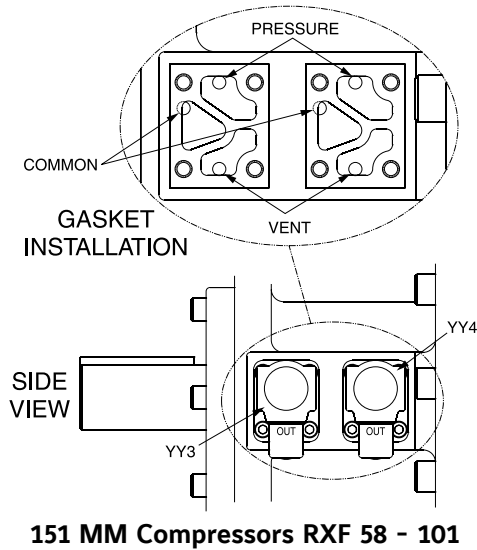


Figure 21. Installation of Danfoss Vi Control Valves and Gaskets, RXB & RXF Packages

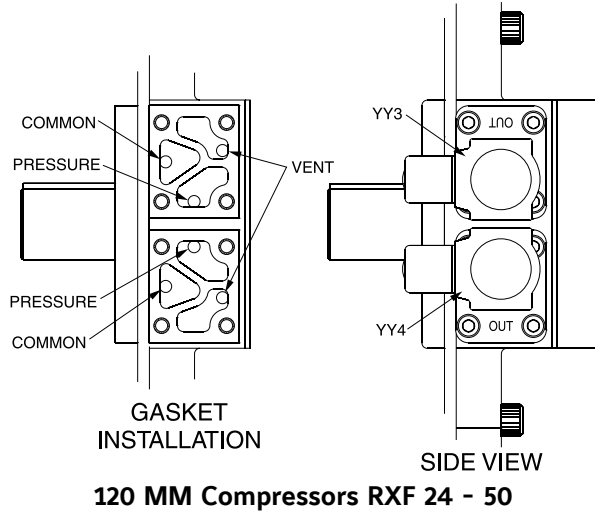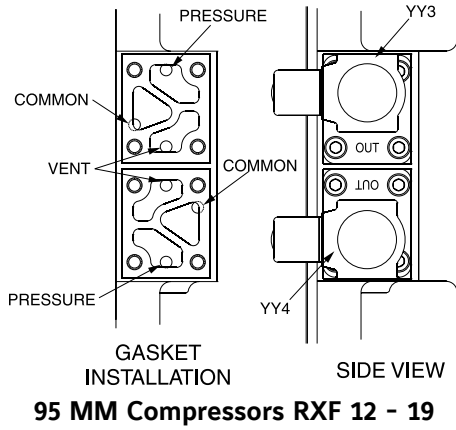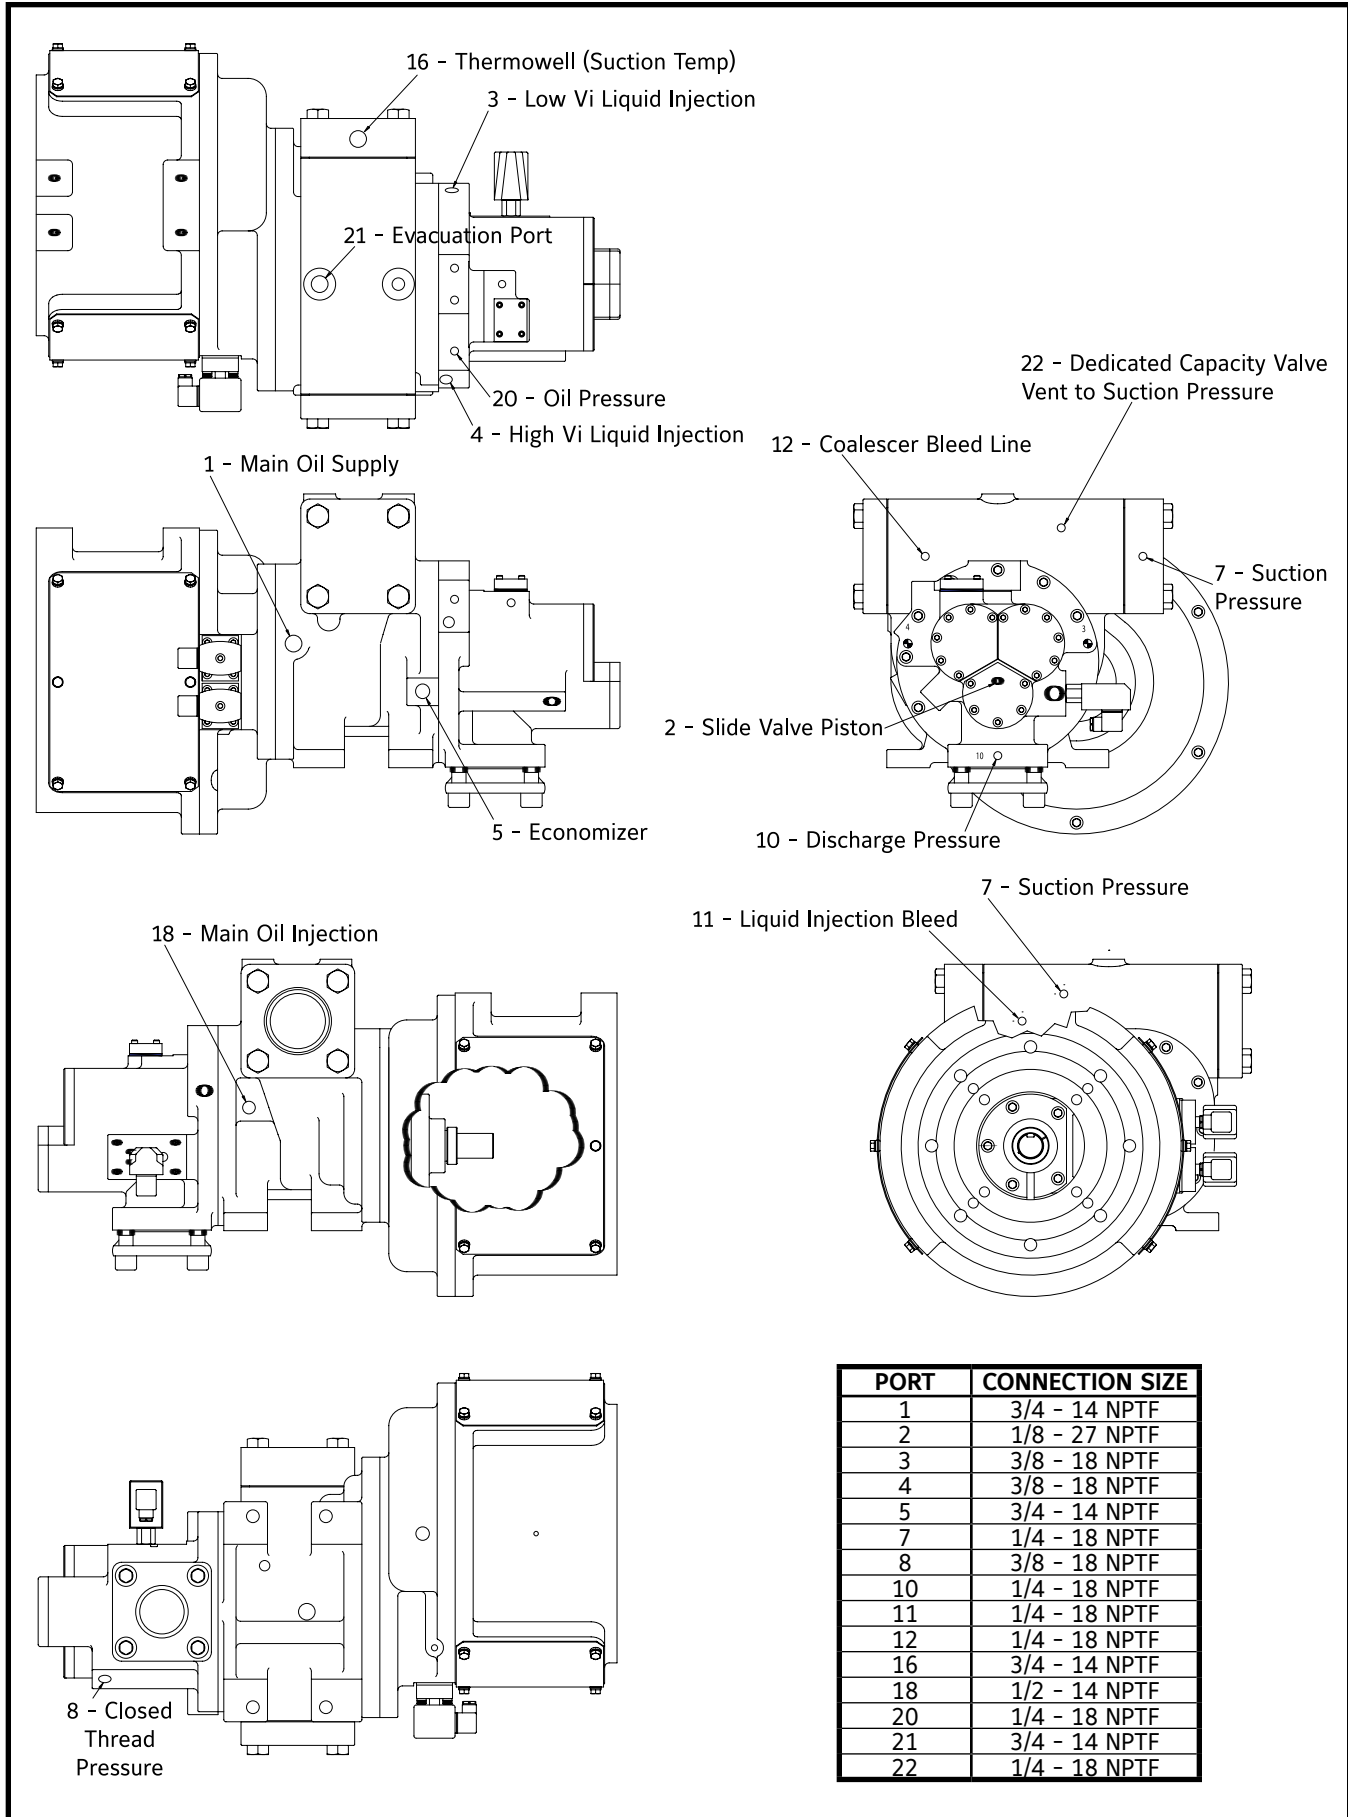

PORT	CONNECTION SIZE
1	3/4 - 14 NPTF
2	1/8 - 27 NPTF
3	3/8 - 18 NPTF
4	3/8 - 18 NPTF
5	3/4 - 14 NPTF
7	1/4 - 18 NPTF
8	3/8 - 18 NPTF
10	1/4 - 18 NPTF
11	1/4 - 18 NPTF
12	1/4 - 18 NPTF
16	3/4 - 14 NPTF
18	1/2 - 14 NPTF
20	1/4 - 18 NPTF
21	3/4 - 14 NPTF
22	1/4 - 18 NPTF

Figure 22. RXF 12-19, XJF 95 Port Locations.

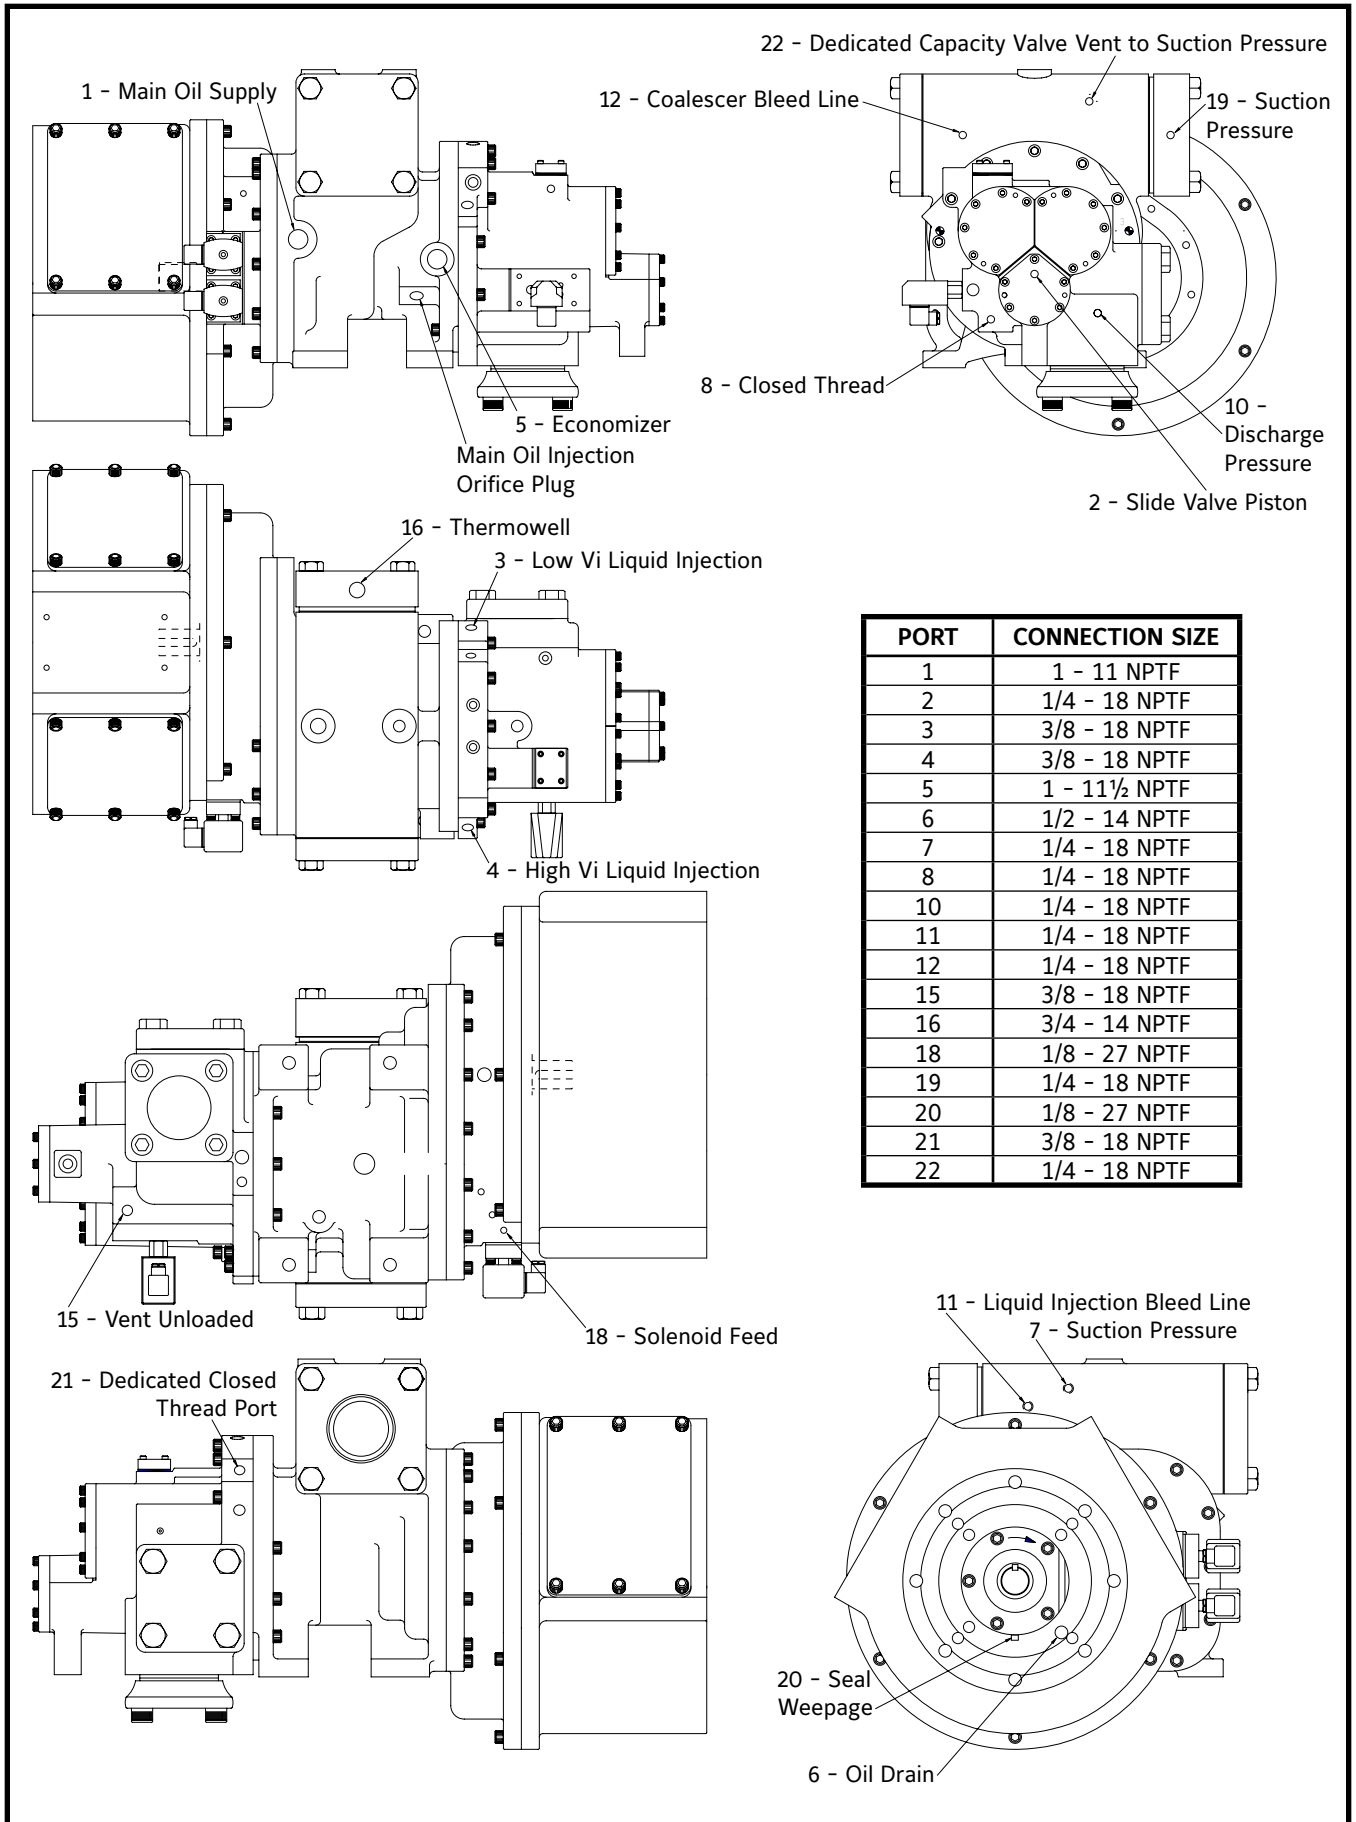


Figure 23. RXF 24-50, XJF 120 Port Locations.

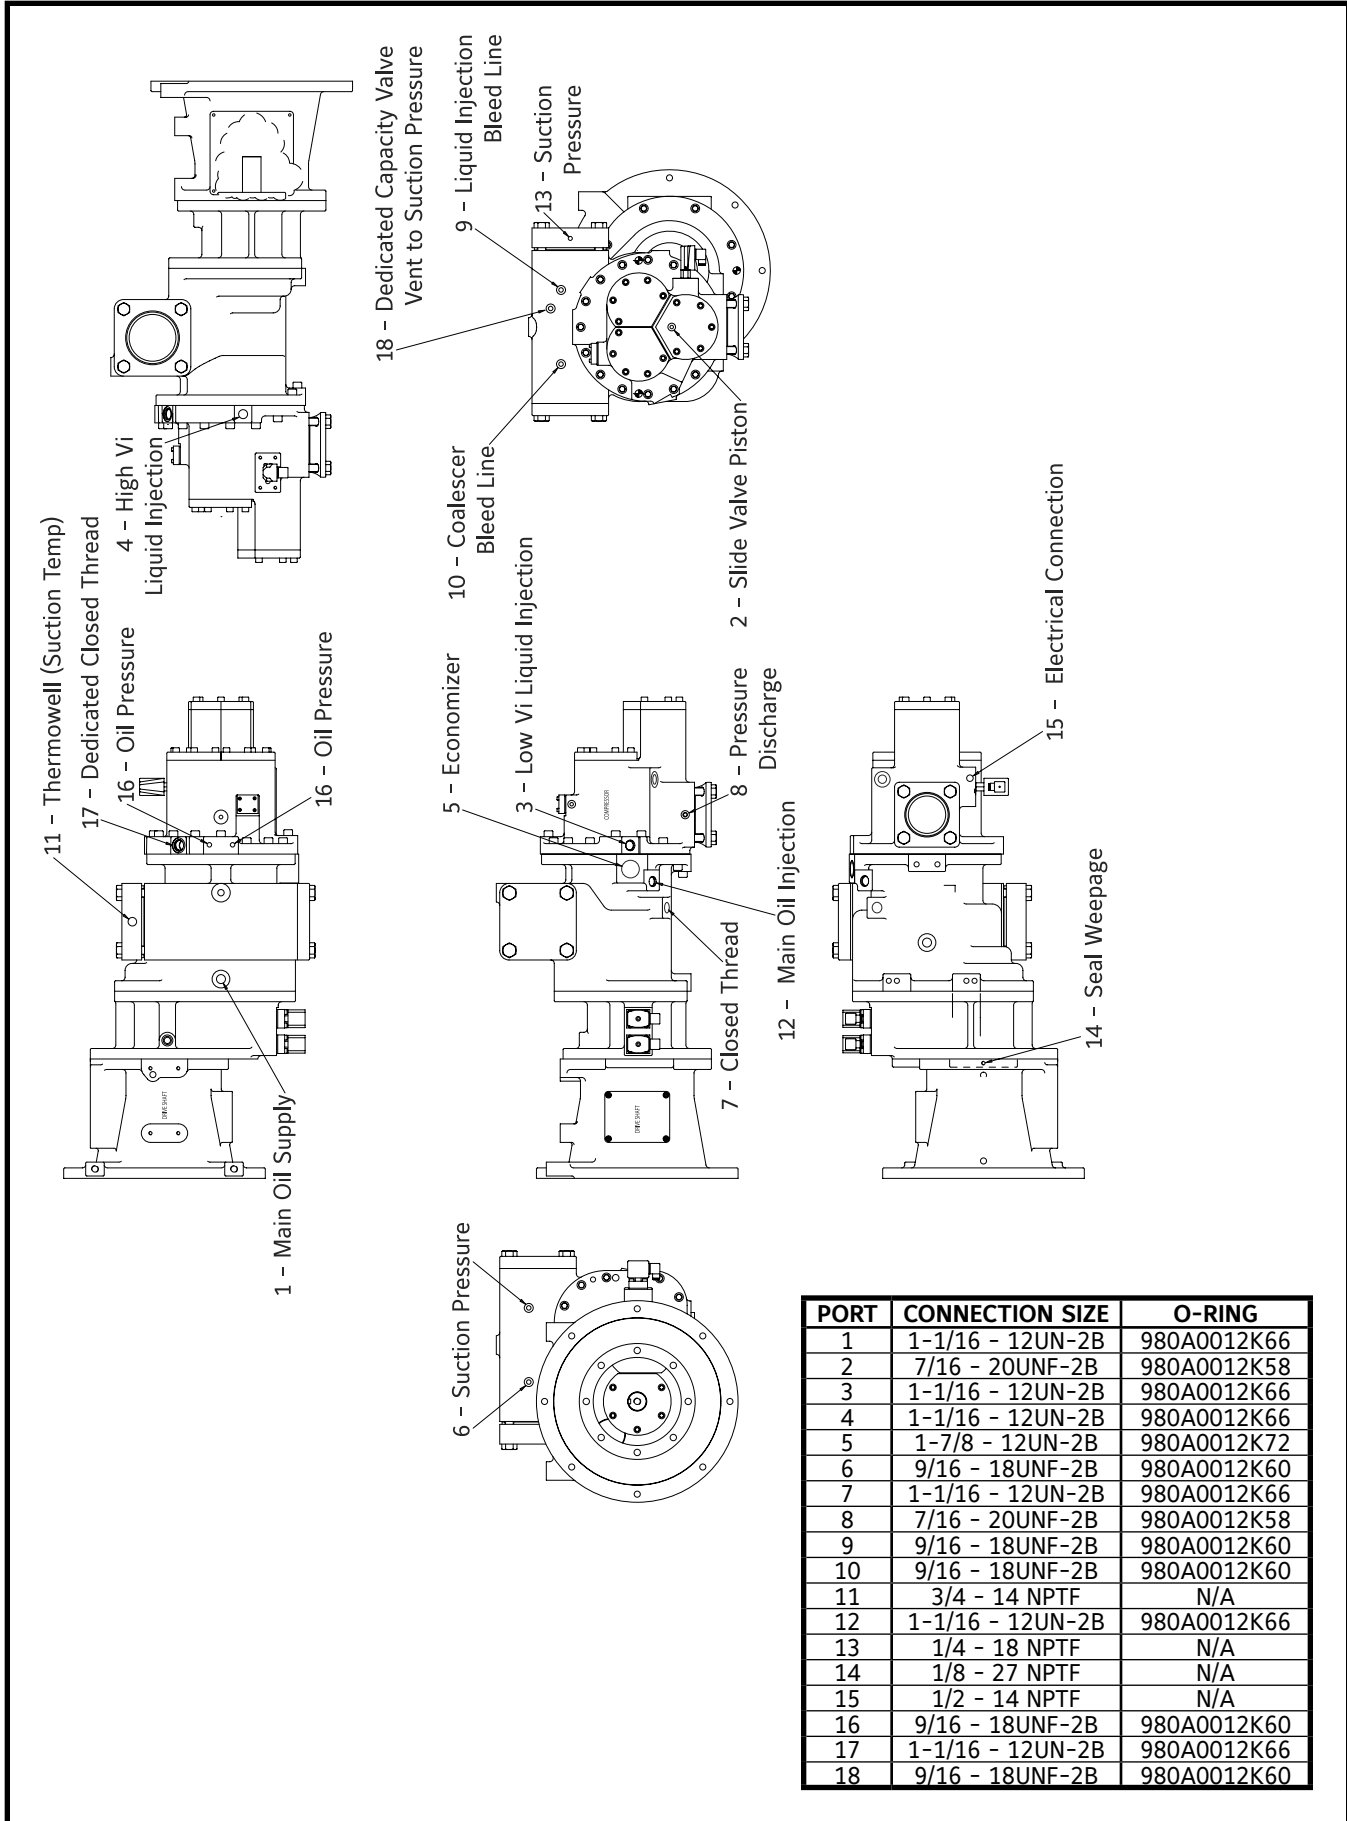


Figure 24. RXF 58-101, XJF 151 Port Locations & O-rings.

SAE STRAIGHT THREAD O-RING FITTINGS - ASSEMBLY PROCEDURE FOR RXF 58 - 101

When performing maintenance or replacing the compressor, the hydraulic tubing may need to be removed and re-installed. The following procedure outlines the proper installation of SAE straight thread fittings to SAE straight thread ports.

The male and female ends of SAE straight thread O-ring ports have UN/UNF straight threads. An elastomeric O-ring is fitted to the male end. On assembly, the O-ring is firmly sandwiched between the angular sealing surface of the female port and the shoulder of the male end. Sealing is thus affected and maintained by the O-ring compression which results from the clamping force generated by the tightening action. The straight threads do not offer sealing action; they provide the resistance (holding power) for service pressure.

1. Inspect components to ensure that male and female port threads and sealing surfaces are free of burrs, nicks and scratches or any foreign material.
2. If the O-ring is not pre-installed to the fitting on the male end, install the proper size O-ring.
3. Lubricate the O-ring with a light coating of system oil or petroleum jelly.

4. Screw the fitting into the female port until the hex flat contacts the port face. Light wrenching may be necessary.
5. Tighten to the appropriate torque value shown in the Assembly Torque Table.

Straight and Adjustable Fittings or Plugs (steel)			
Fitting Size	SAE Port Thread Size	Assembly Torque	
		Inch lb	Foot lb
2	5/16 - 24	65 ± 5	5.5 ± 0.5
3	3/8 - 24	130 ± 10	11 ± 1.0
4	7/16 - 20	170 ± 10	14 ± 1.0
5	1/2 - 20	260 ± 15	22 ± 1.0
6	9/16 - 18	320 ± 20	27 ± 2.0
8	3/4 - 16	500 ± 25	42 ± 2.0
10	7/8 - 14	720 ± 30	60 ± 2.5
12	1 1/16 - 12	960 ± 50	80 ± 5.0
16	1 5/16 - 12	1380 ± 75	115 ± 6.0
20	1 3/8 - 12	2700 ± 150	225 ± 12.0
24	1 7/8 - 12	3000 ± 160	250 ± 12.0

Table 5. Assembly Torque.

NOTES

RWF MOTOR & COMPRESSOR REPLACEMENT PROCEDURE

The purpose of this procedure is to outline the process for mounting replacement motors and compressors on RWF packages in the field. The goal is to ensure a stress-free compressor and motor arrangement to assure the designed life of the bearings and shaft seals. In addition, a stress-free arrangement will yield proper slide valve operation and minimize vibration.

Motor Replacement Procedure:

1. Verify that main power to the unit is disconnected. Lockout and tag the switch.
2. Remove the bolts between the motor and compressor tunnel while supporting the motor weight. Then lift the motor from the compressor package. Reference Table 7. Motor Weights
3. Using a spring scale, weigh the replacement motor prior to assembly to the compressor. Reference Figure 25. If a spring scale is not available, contact factory or the motor manufacture for the weight of the motor (Table 5 may also be used as a guide).



Figure 25. Weigh replacement motor
(Contact the Baltimore Parts Center for a Hydraulic Pump Kit, p/n 720A0029G01 - Ph:800-336-7264)

4. Align the D-flange or C-face motor holes to the compressor tunnel holes while supporting the weight of the motor.
5. Insert the bolts through the flanged motor holes and into the compressor tunnel and tighten by hand.
6. Continue to support the motor weight by maintaining the same weight on the spring scale. If a spring scale and/or overhead support is not available, then a hydraulic piston may be used underneath the center of the motor.

NOTICE

The motor weight must be supported to avoid stressing the compressor or motor. Do not over or under support the motor. The scale or pressure gage reading must be within +/- 10% of the motor weight.

7. If a hydraulic piston is used, then proceed with the following guidelines:
 - a. Determine the area of the piston ($Pressure = \pi r^2$) or ($Piston\ Area = \pi * Piston\ Diameter^2 / 4$).
 - b. Calculate the required pressure ($Pressure = Weight\ of\ motor / Piston\ Area$). The cylinder manufacturer's website will show a chart giving the effective area.
 - c. Using a pressure gage between the hydraulic piston and pump, increase the pressure until the gage reaches the calculated required pressure.
8. Torque the bolts between the motor and compressor tunnel to the required specification (Reference Table 6).
9. While the motor is still supported, shim any feet that exhibit a gap (gauge reading + .002"). A pry or jack can be used to lift the compressor .002". Reinstall and tighten bolts in feet. Then, bolt the motor to the mounting base and torque the motor mounting bolts to 250 ft-lb. Reference Figure 27.
10. The overhead support or hydraulic piston may now be removed.

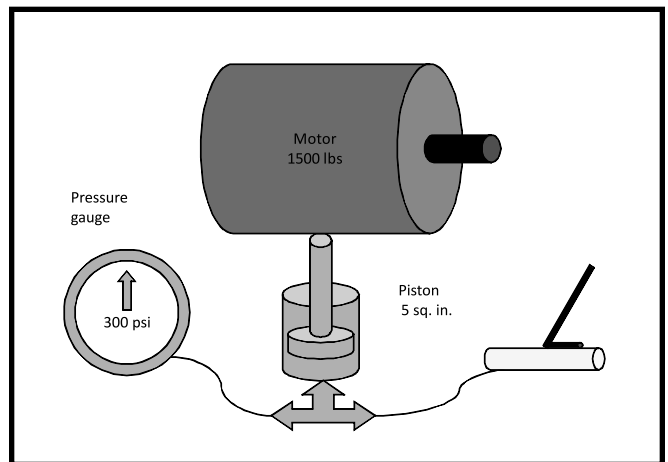


Figure 26. Hydraulic piston supports motor weight

Compressor Replacement Procedure:

1. Verify that main power to unit is disconnected. Lockout and tag the switch. Disconnect all wiring from the motor.
2. The motor must be blocked up and properly supported prior to removing the compressor from the RWF package. The entire weight of the motor must be supported.
3. Disconnect all tubing and pipe connections from the compressor. Remove the bolts and the drive coupling, and lift the compressor and tunnel assembly from the package. Reference Table 12 for compressor weights. The tunnel must be disconnected from the motor.

⚠ CAUTION

To prevent injury or damage to components, and for complete details regarding pressurized refrigerant vapor transfer and recovery, see the current Installation-Operation-Maintenance Manual for your unit.

4. Place a new gasket on the oil separator flange. (Contact the Baltimore Parts Center for replacement gaskets, Ph:800-336-7264)

5. Set the new compressor on the support base and align the oil separator flange bolt holes to the compressor discharge flange bolt holes.
6. Insert the bolts through the oil separator flange and into the compressor discharge flange. Torque the bolts to the required specification (reference Table 6).
7. The compressor feet should rise above the support base. If not, remove the compressor, add another gasket on top of the oil separator flange and repeat steps 4 & 5.
8. Shim any compressor feet that exhibit a gap (gauge reading + .002"). A pry or jack can be used to lift the compressor .002". Reinstall and tighten bolts in feet. Reference Figure 28. Then, bolt the compressor to the support base and torque the mounting bolts to 250 ft-lb.
9. Reconnect all tubing and pipe connections to the compressor.
10. Follow the motor mounting procedure as outlined above for attaching the motor to the compressor.

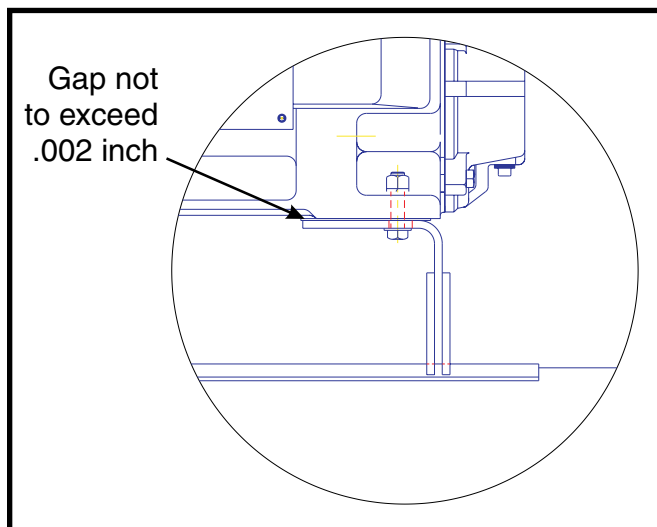


Figure 27. Shim motor feet to less than .002 inch gap

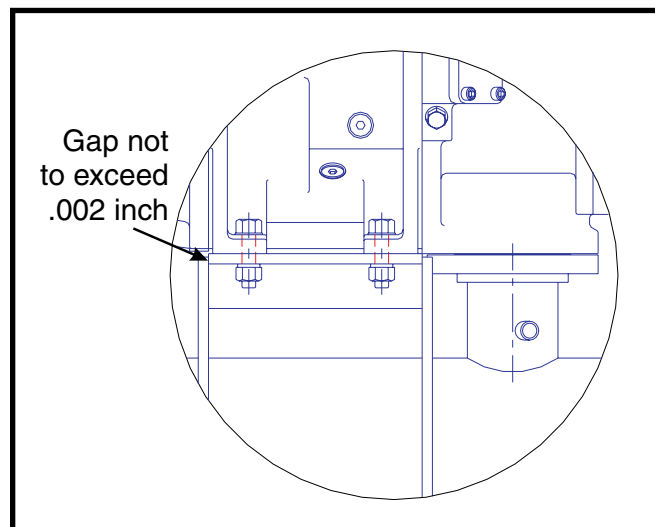


Figure 28. Set replacement compressor and motor assembly on separator flange

RWF Model	Compressor Model	Motor Flange to Compressor Tunnel ⁽¹⁾		Discharge Flange to Separator Flange ⁽²⁾		Suction Flange	Strainer Trap	Multi-Valve Inlet	
		Bolt Size ⁽³⁾	Torque ⁽⁴⁾	Bolt Size ⁽⁵⁾	Torque ⁽⁴⁾				
100	SGC 1913	3/4-10 UNC	144	M20 X 2.5	140	M20 X 2.5	180	180	-
134	SGC 1918	3/4-10 UNC	144	M20 X 2.5	140	M20 X 2.5	160	160	-
177	SGC 2313	3/4-10 UNC	144	M20 X 2.5	160	M20 X 2.5	160	160	-
222	SGC 2317	3/4-10 UNC	144	M20 X 2.5	160	M22 X 2.5	230	200	-
270	SGC 2321	3/4-10 UNC	144	M20 X 2.5	160	M22 X 2.5	230	220	-
316	SGC 2813	3/4-10 UNC	144	M22 X 2.5	230	M22 X 2.5	230	220	-
399	SGC 2817	3/4-10 UNC	144	M22 X 2.5	230	M24 X 3.0	240	220	-
480	SGC 2821	3/4-10 UNC	144	M22 X 2.5	230	M24 X 3.0	240	220	-
546	SGC 2824	3/4-10 UNC	144	M22 X 2.5	230	M24 X 3.0	240	220	-
496	SGCB/H 3511	3/4-10 UNC	144	M24 X 3.0	240	M30 X 3.5	350	250	250
676	SGCB/H 3515	3/4-10 UNC	144	M24 X 3.0	240	M30 X 3.5	350	250	250
856	SGCB/H 3519	3/4-10 UNC	144	M24 X 3.0	240	M30 X 3.5	350	250	250
1080	SGCB/H 3524	3/4-10 UNC	144	M24 X 3.0	240	M30 X 3.5	350	250	250

Table 6. SGC Flange Bolt Torque

1. Bolt torque requirements for the motor flange to compressor tunnel are based on metal to metal contact.
2. Bolt torque requirements for the compressor flange to separator flange are based on:
 - a. Gaskets: Garlock® Blue-Gard® 3300
 - b. Bolts: Class 8.8 or stronger hex head bolts, lightly oiled and clean
3. Measurements in inches (in.).
4. Measurements in foot-pounds (ft-lb).
5. Measurements in millimeters (mm.).

Motor HP	Frame	Aprox. Wt. lbs (Kg)
125	LN405TDZ	1,000 (454)
134	LN405TDZ	1,000 (454)
150	LN405TDZ	1,070 (485)
154	LN405TDZ	1,070 (485)
175	LN405TDZ	1,080 (490)
200	LN405TDZ	1,080 (490)
235	LN445TDZ	1,440 (653)
250	LN445TDZ	1,540 (699)
263	LN445TDZ	1,540 (699)
284	LN447TDZ	1,630 (739)
300	LN447TDZ	1,730 (785)
305	LN447TDZ	1,730 (785)
335	LN447TDZ	1,730 (785)
350	LN447TDZ	1,880 (853)
368	LN447TDZ	1,880 (853)
400	LN449TDZ	2,180 (989)
407	LN449TDZ	2,180 (989)
437	LN449TDZ	2,180 (989)
450	LN449TDZ	2,310 (1048)
482	LN449TDZ	2,310 (1048)
500	LN449TDZ	2,310 (1048)
529	LN449TDZ	2,310 (1048)
570	LN5008DZ	3,200 (1451)
600	LN5008DZ	3,200 (1451)
643	LN5010DZ	3,450 (1565)
687	LN5010DZ	3,990 (1810)

Table 7. SGC Motor Weights

NOTE: The weights listed are for reference only and are approximate based on standard open drip proof motors operating at 60 Hz. Contact factory or the motor manufacturer to confirm the motor weight.

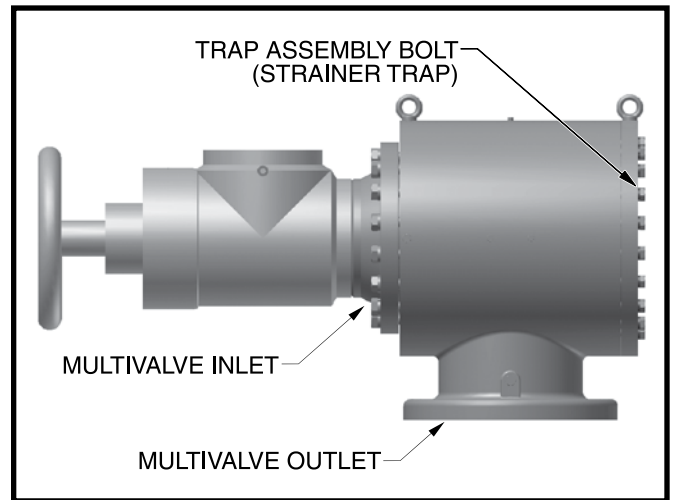


Figure 29. SGC/H 3511-3524 Multi-Valve Inlet.

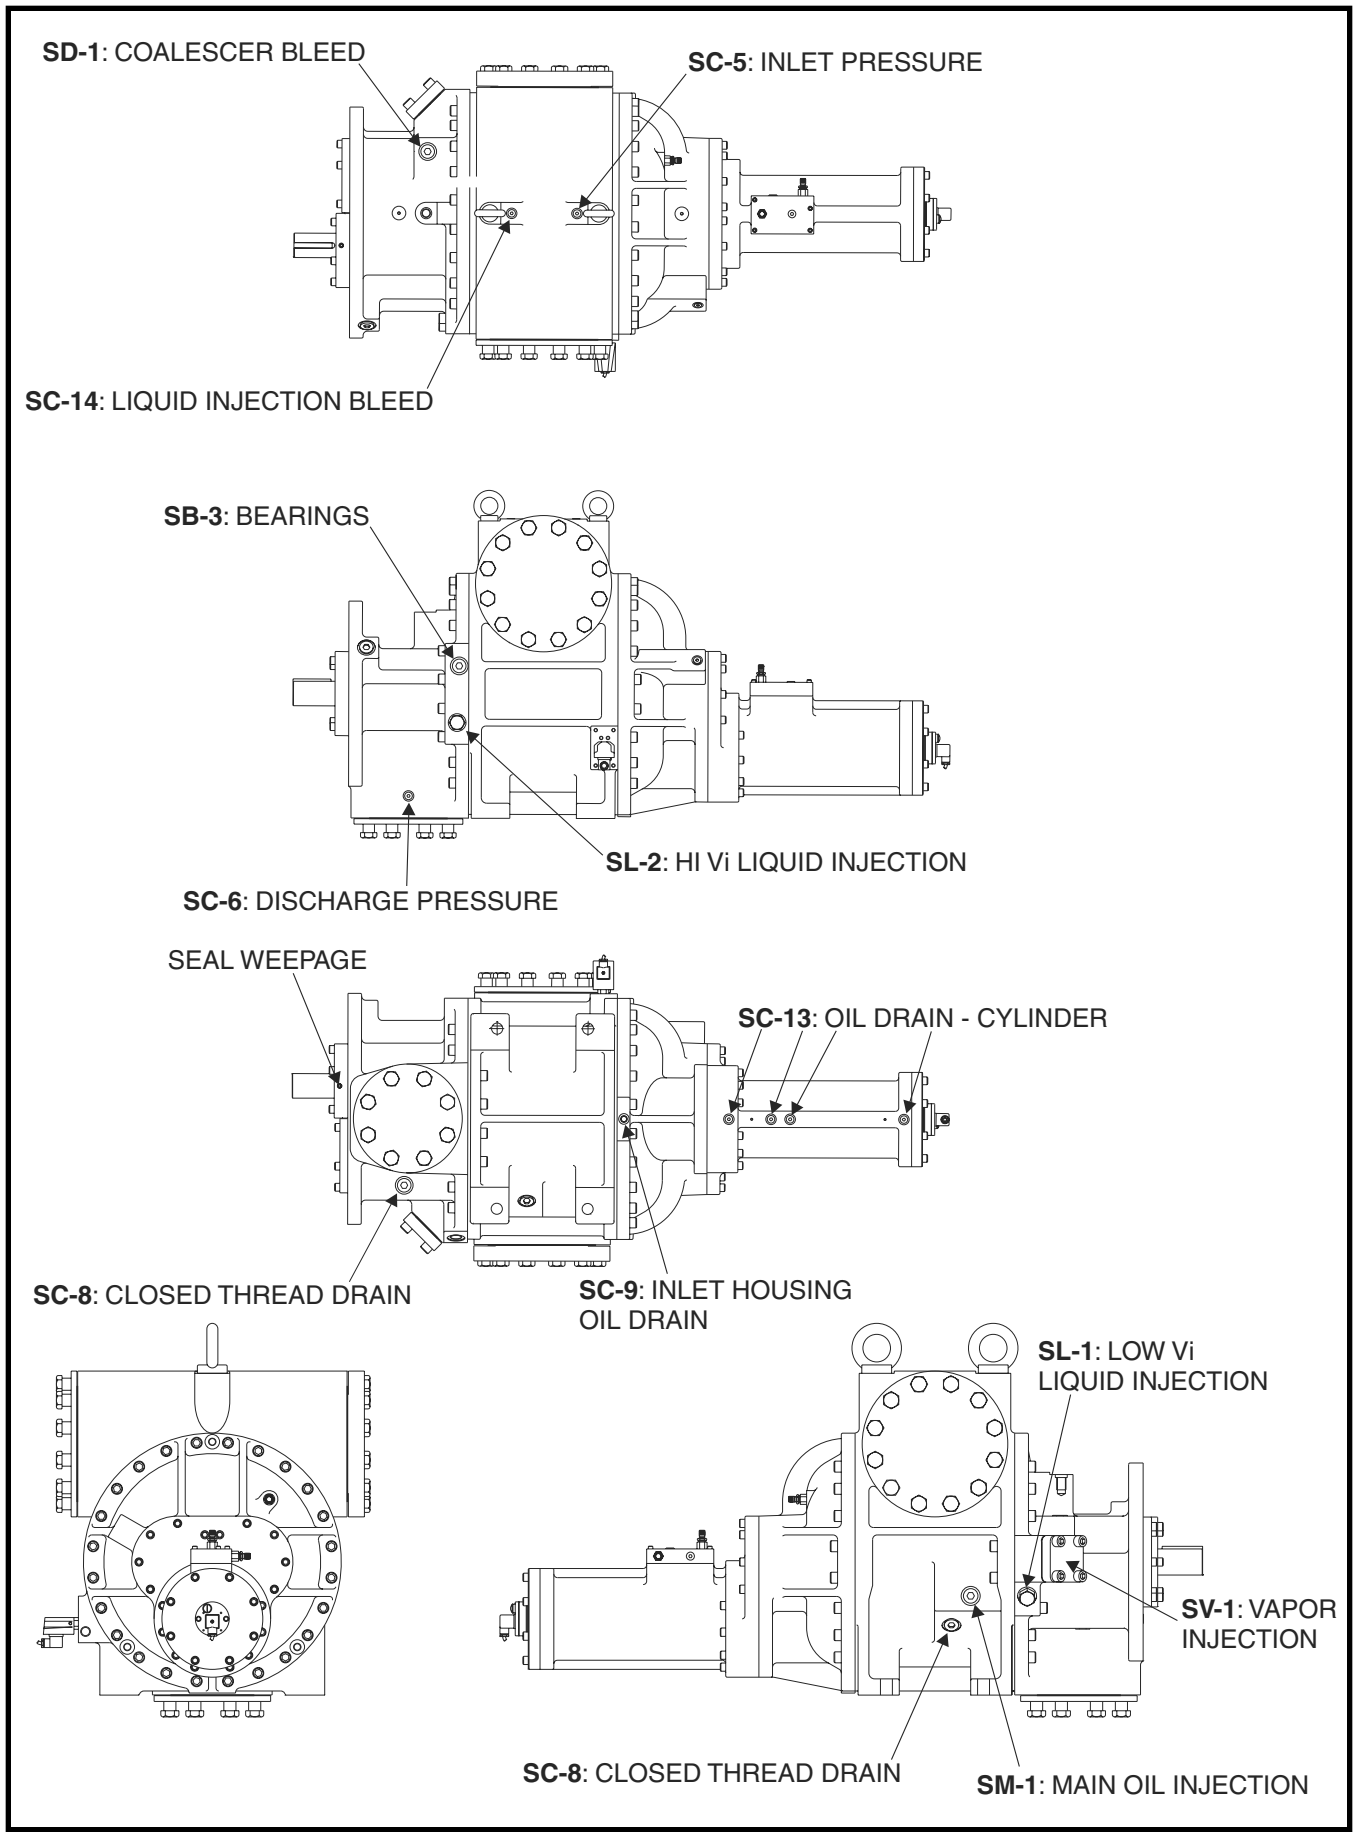


Figure 30. SGC 1913/1918 Compressor Ports Locations.

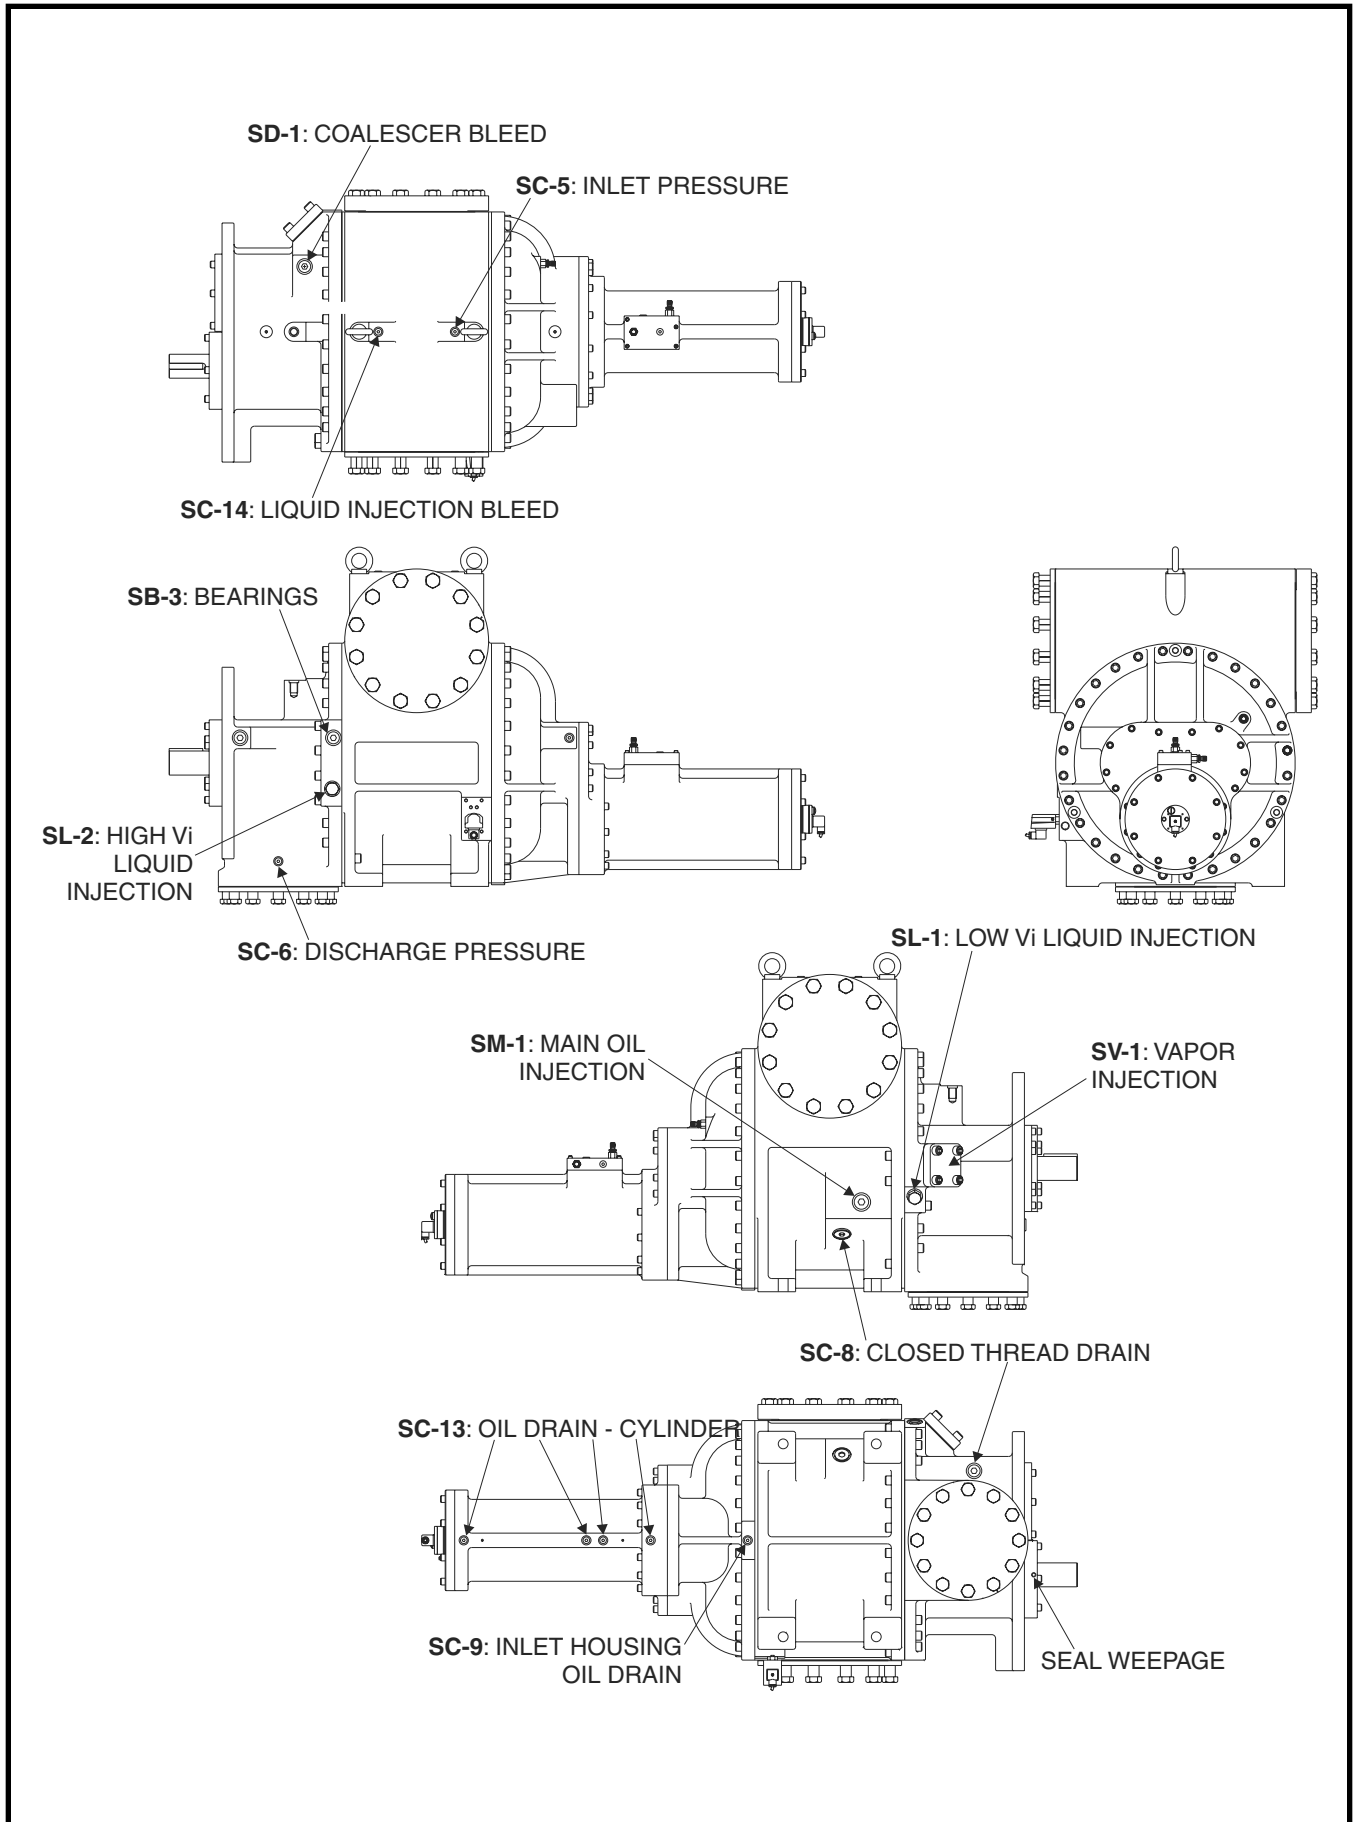


Figure 31. SGC 2313/2317 Compressor Ports Locations.

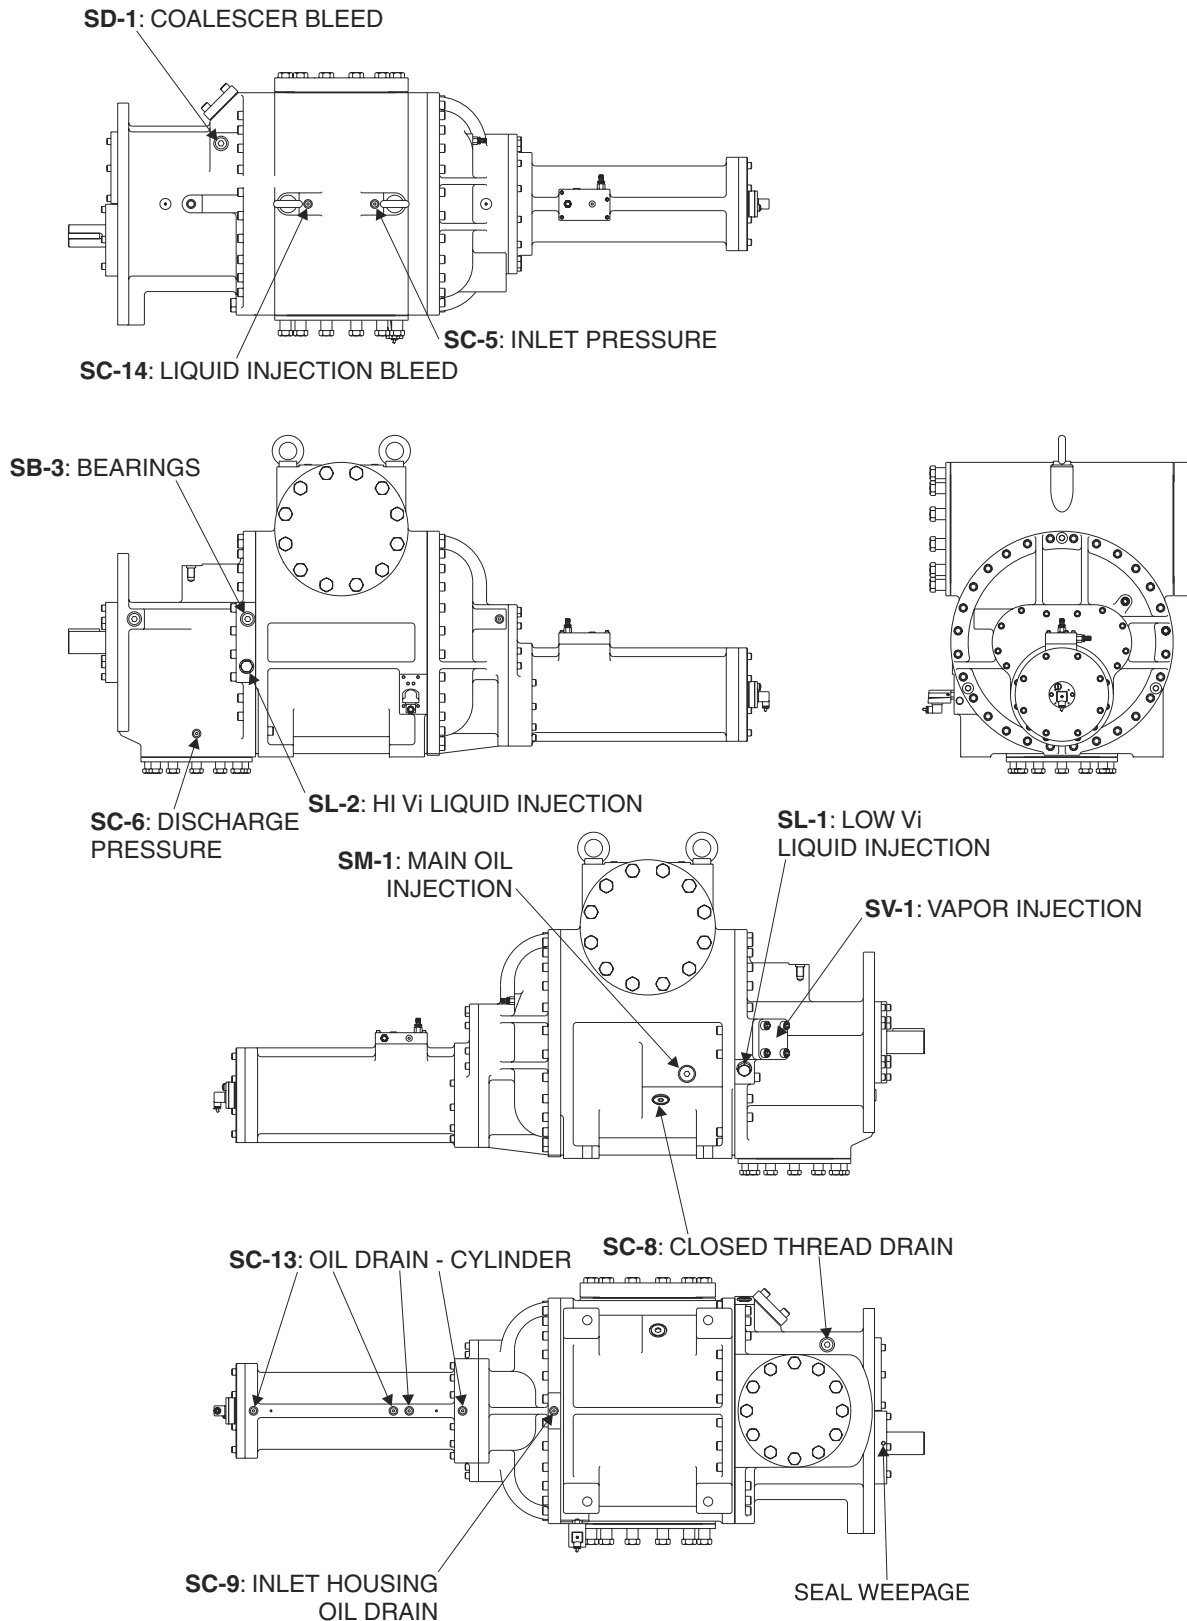


Figure 32. SGC 2321 Compressor Ports Locations.

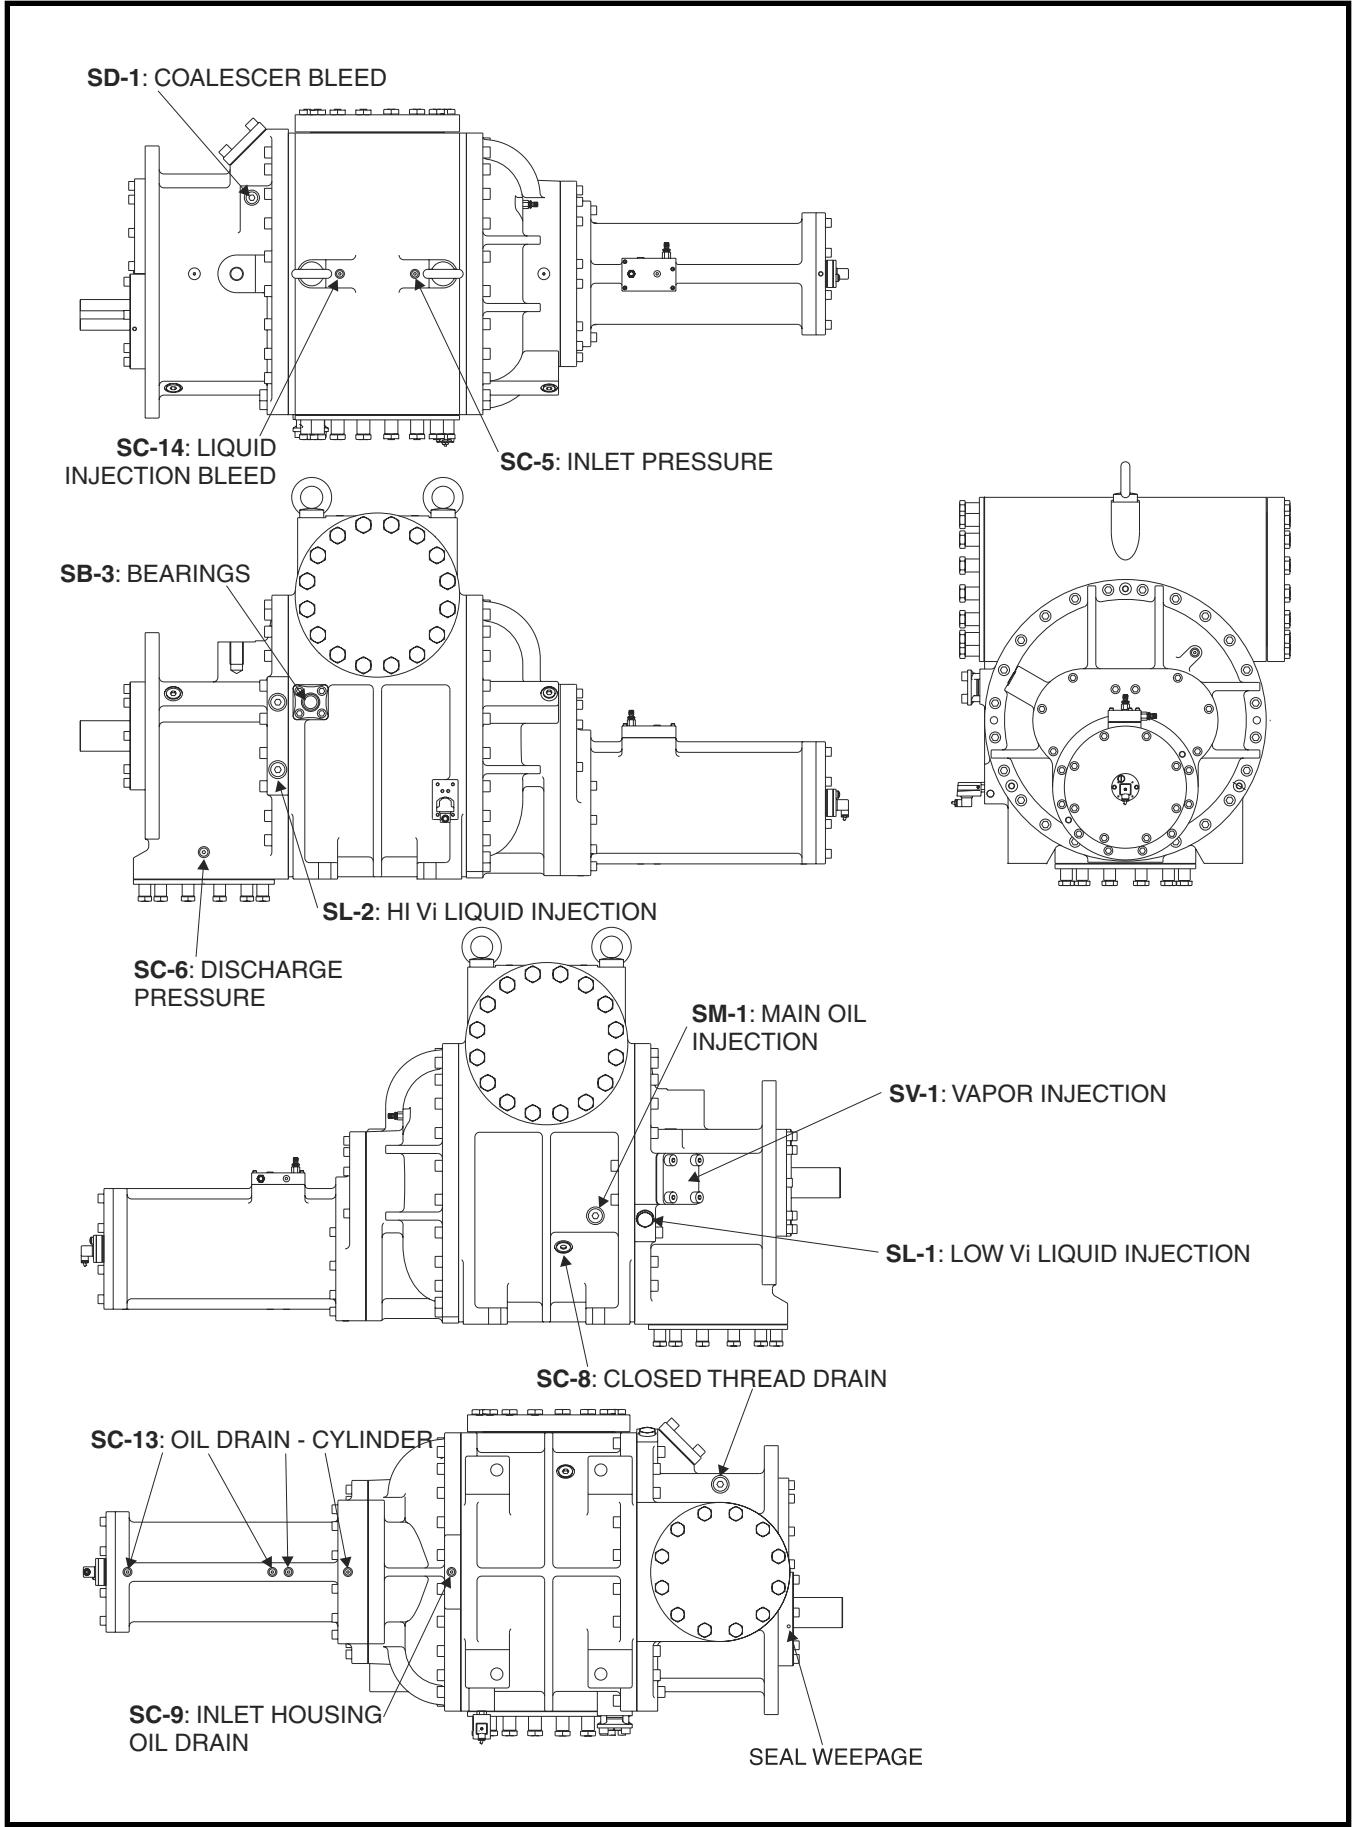


Figure 33. SGC 2813/2817 Compressor Ports Locations.

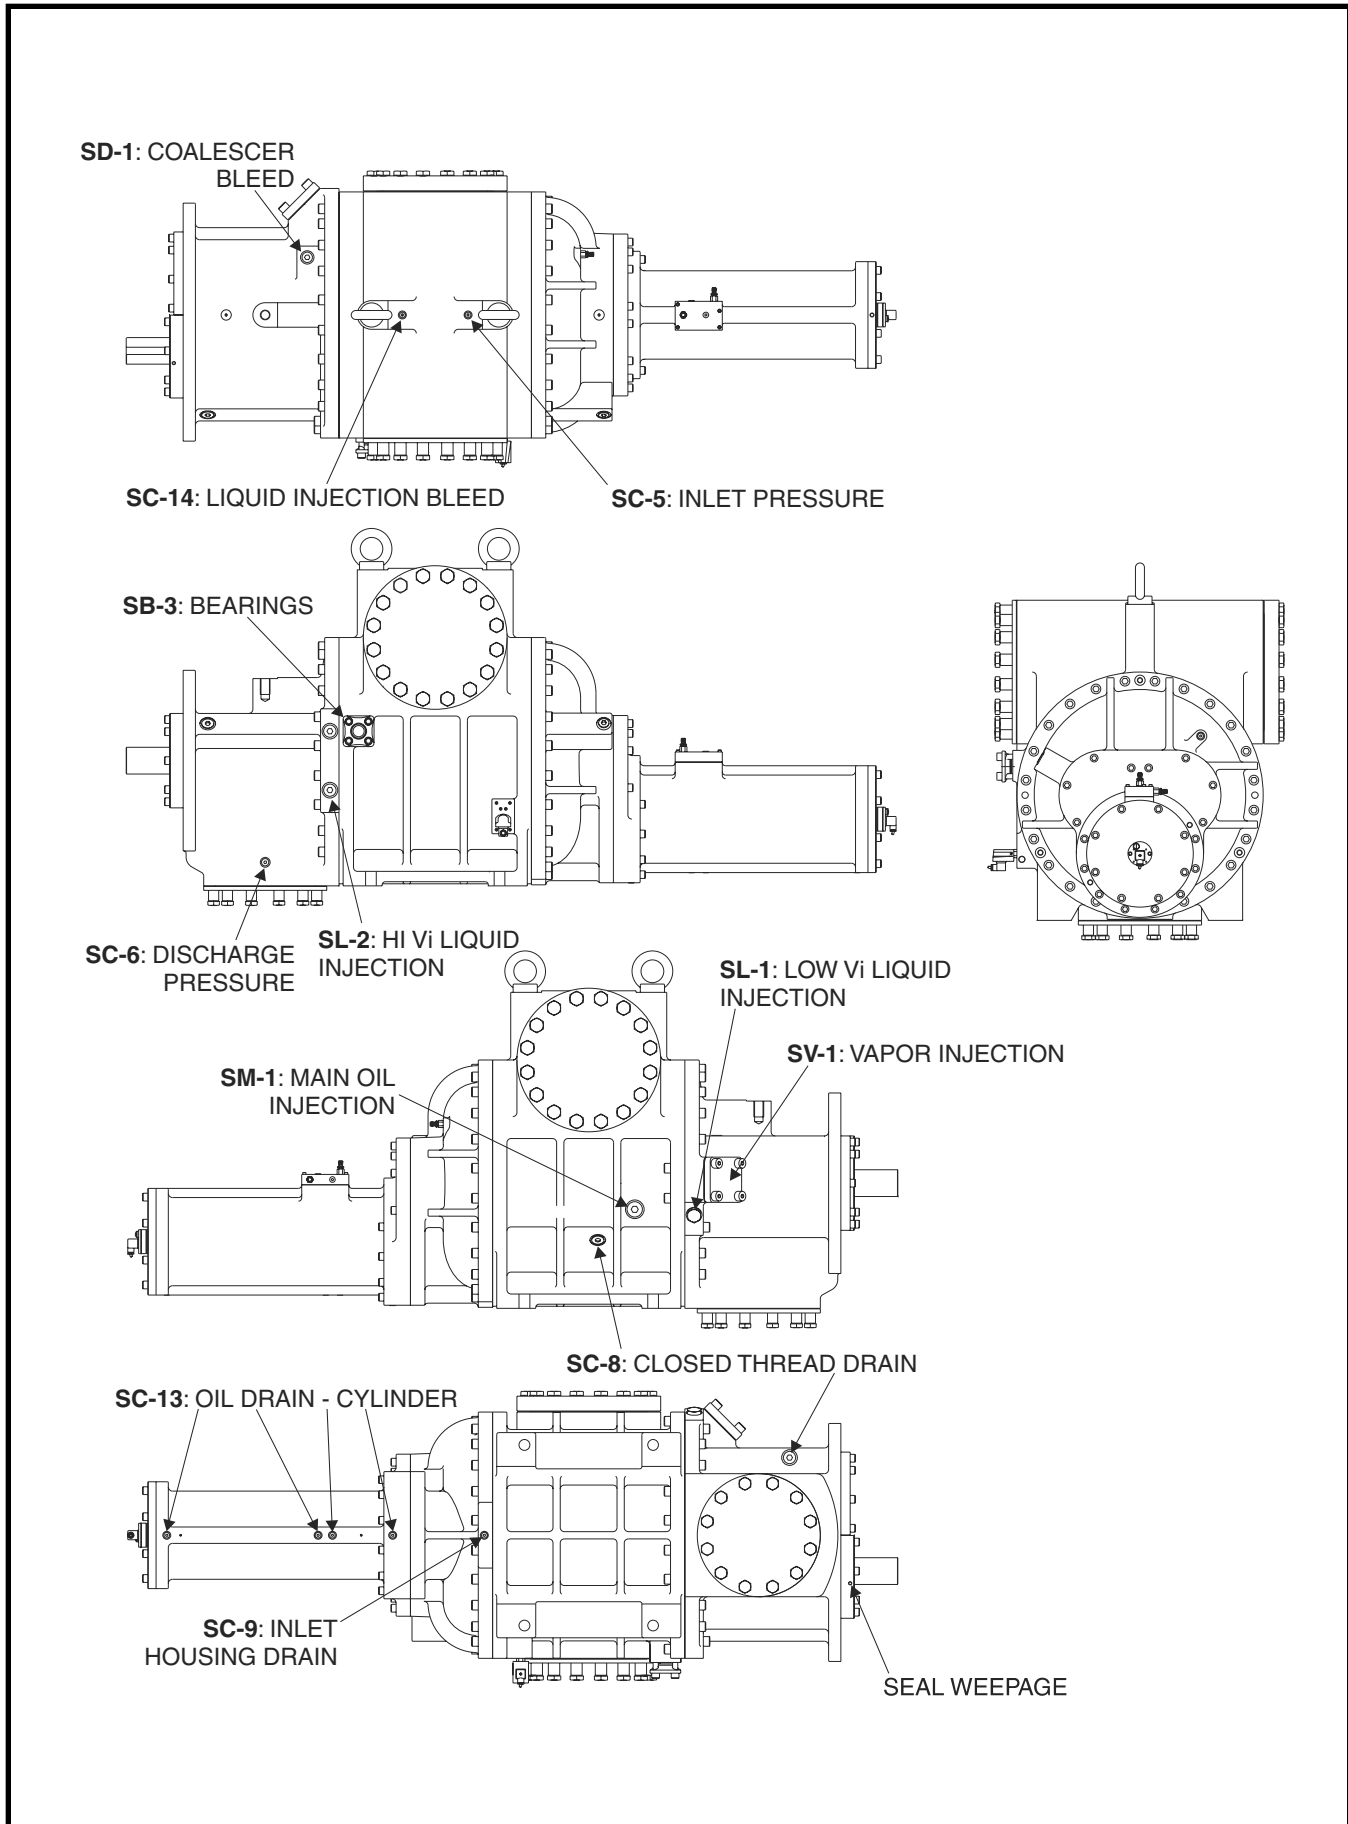


Figure 34. SGC 2821/2824 Compressor Ports Locations.

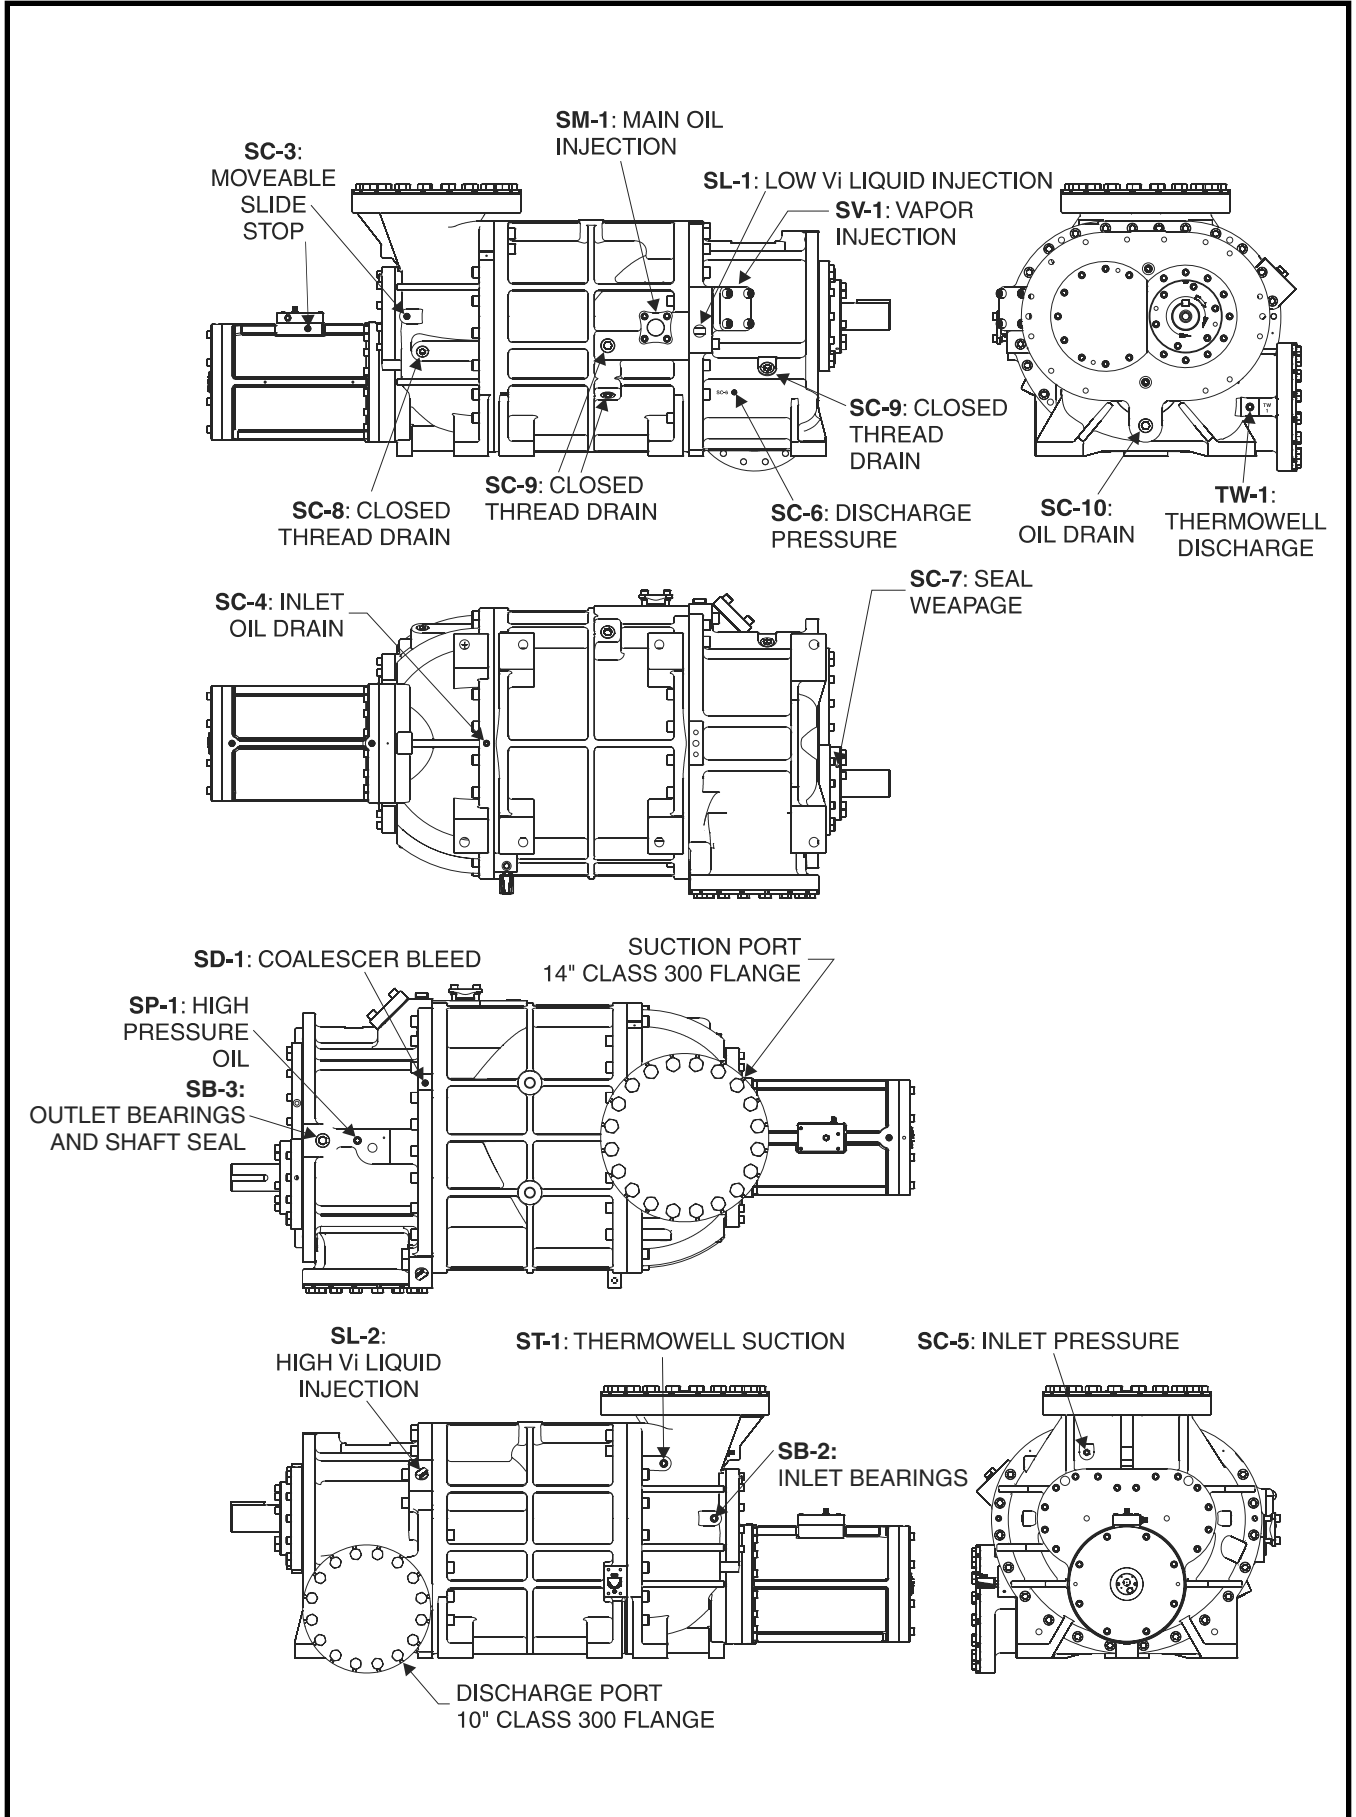


Figure 35. SGC 3511/3515/3519 Compressor Ports Locations.

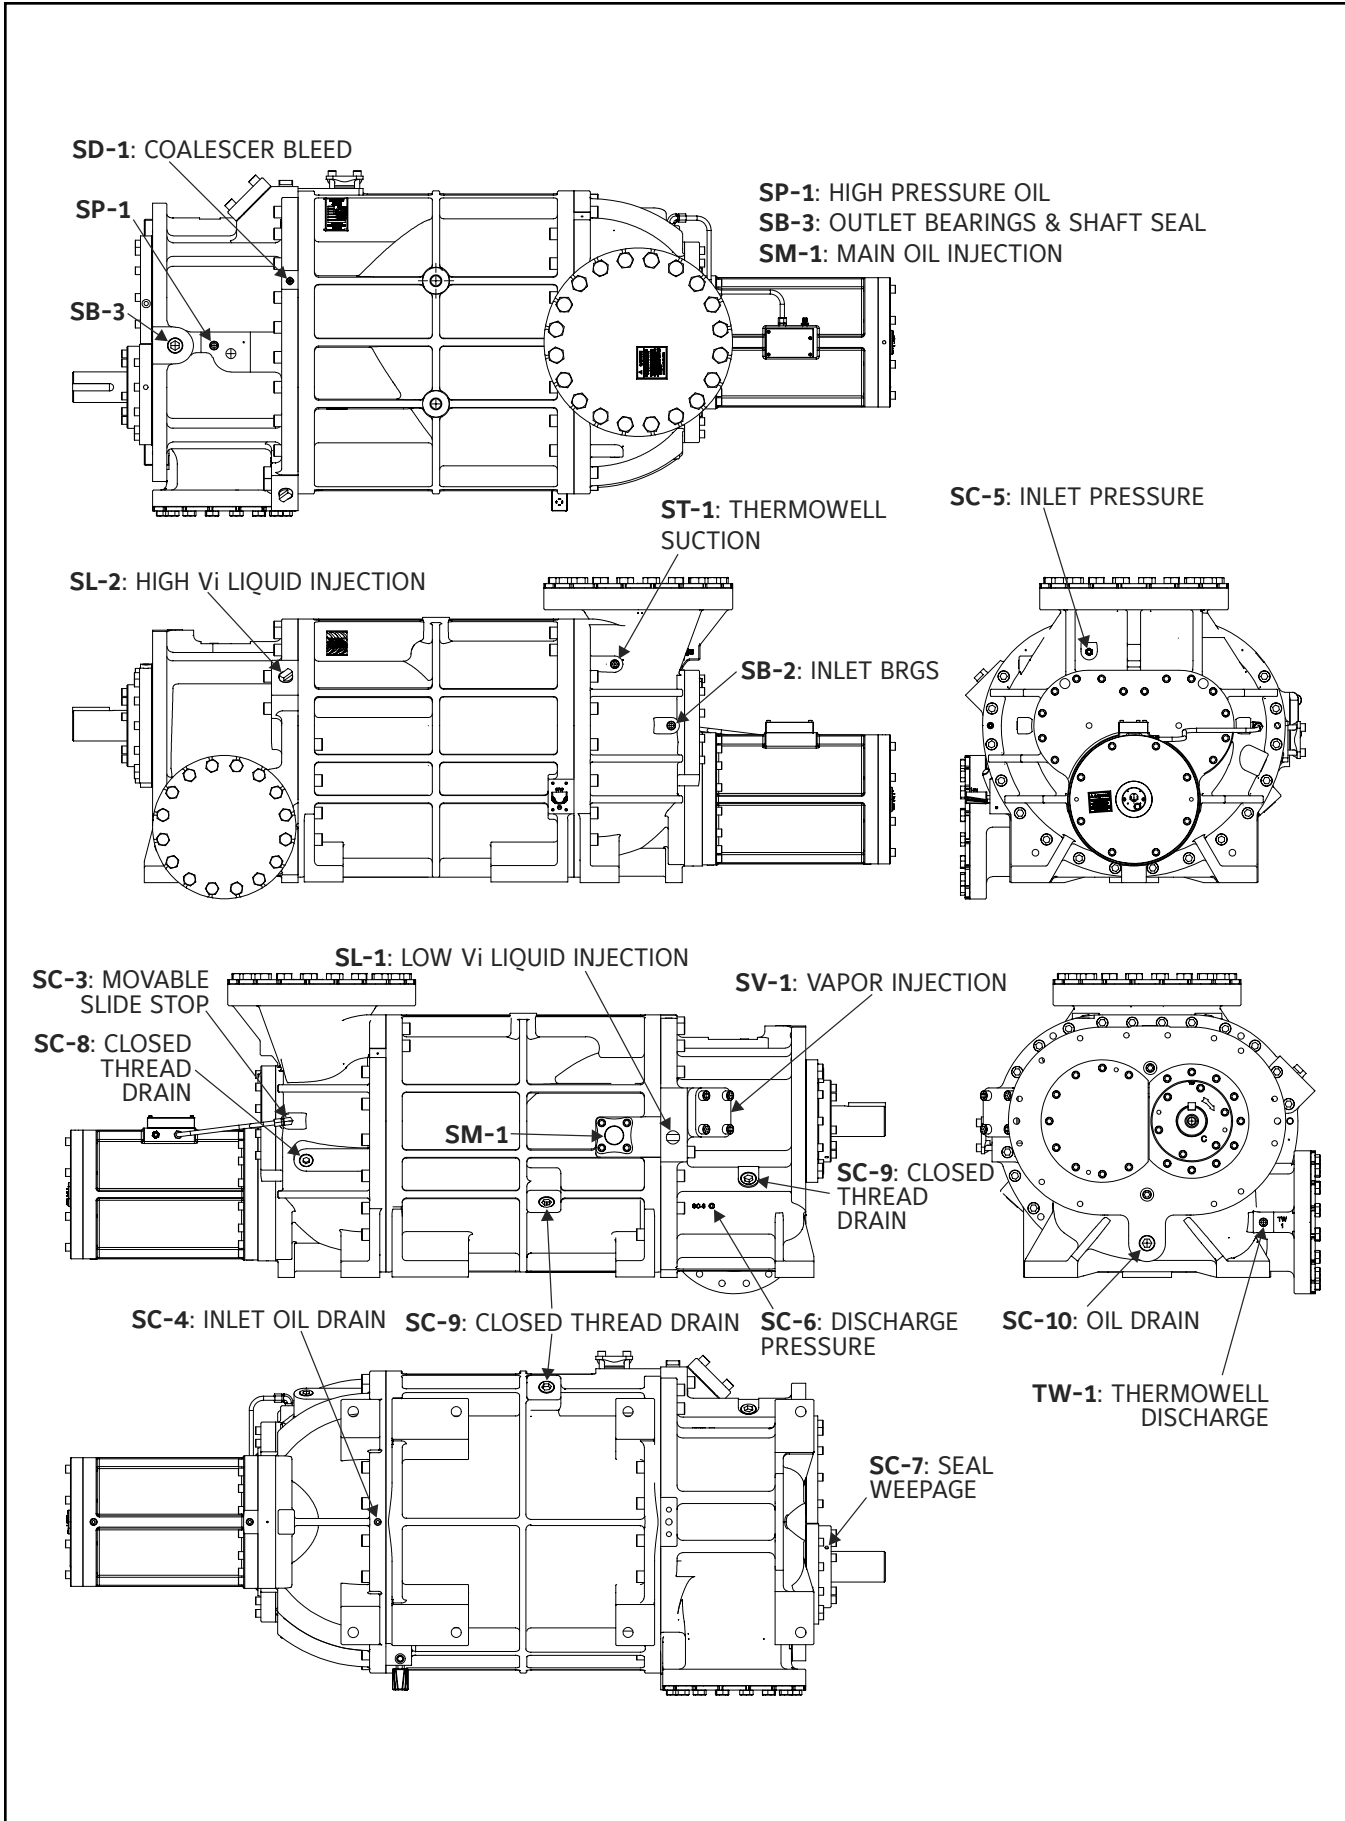


Figure 36. SGC 3524 Compressor Ports Locations.

193-283 COMPRESSOR PORTS & O-RINGS						
PORT	DESCRIPTION	1913-1918 O-RING	2313-2317 O-RING	2321 O-RING	2813-2817 O-RING	2821-2824 O-RING
SB-3	Bearings	980A0012K66	980A0012K66	980A0012K66	980A0012K69	N/A
SC-5	Inlet Pressure	980A0012K60	980A0012K60	980A0012K60	980A0012K60	980A0012K60
SC-6	Discharge Pressure	980A0012K60	980A0012K60	980A0012K60	980A0012K60	980A0012K60
SC-8	Closed Thrd Drain	980A0012K66	980A0012K66	980A0012K66	980A0012K69	980A0012K69
SC-9	Inlet Hsg Oil Drain	980A0012K60	980A0012K60	980A0012K60	980A0012K60	980A0012K60
SC-13	Oil Drain Cylinder	980A0012K60	980A0012K60	980A0012K60	980A0012K60	980A0012K60
SC-14	Liquid Inj Bleed	980A0012K60	980A0012K60	980A0012K60	980A0012K60	980A0012K60
SD-1	Coalescer Bleed	980A0012K66	980A0012K66	980A0012K66	980A0012K66	980A0012K66
SL-1	Low Vi Liq Injection	980A0012K66	980A0012K66	980A0012K66	980A0012K69	980A0012K69
SL-2	High Vi Liq Injection	980A0012K66	980A0012K66	980A0012K66	980A0012K69	980A0012K69
SM-1	Main Oil Injection	980A0012K66	980A0012K66	980A0012K69	980A0012K69	980A0012K71
SV-1	Vapor Injection	N/A	N/A	N/A	N/A	N/A

193-283 COMPRESSOR PORTS & SIZES						
PORT	DESCRIPTION	1913-1918 STRGHT THD ⁽¹⁾	2313-2317 STRGHT THD ⁽¹⁾	2321 STRGHT THD ⁽¹⁾	2813-2817 STRGHT THD ⁽¹⁾	2821-2824 STRGHT THD ⁽¹⁾
SB-3	Bearings	1 1/16-12UN-2B	1 1/16-12UN-2B	1 1/16-12UN-2B	1 1/4 Sq Flg	1 1/4 Sq Flg
SC-5	Inlet Pressure	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B	3/4-16UNF-2B	3/4-16UNF-2B
SC-6	Discharge Pressure	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B
SC-8	Closed Thrd Drain	1 1/16-12UN-2B	1 1/16-12UN-2B	1 1/16-12UN-2B	1 5/16-12UN-2B1	5/16-12UN-2B
SC-9	Inlet Hsg Oil Drain	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B
SC-13	Oil Drain Cylinder	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B
SC-14	Liquid Inj Bleed	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B	9/16-18UNF-2B
SD-1	Coalescer Bleed	1 1/16-12UN-2B	1 1/16-12UN-2B	1 1/16-12UN-2B	1 1/16-12UN-2B	1 1/16-12UN-2B
SL-1	Low Vi Liq Injection	1 1/16-12UN-2B	1 1/16-12UN-2B	1 1/16-12UN-2B	1 5/16-12UN-2B	1 5/16-12UN-2B
SL-2	High Vi Liq Injection	1 1/16-12UN-2B	1 1/16-12UN-2B	1 1/16-12UN-2B	1 5/16-12UN-2B	1 5/16-12UN-2B
SM-1	Main Oil Injection	1 1/16-12UN-2B	1 5/16-12UN-2B	1 5/16-12UN-2B	1 5/16-12UN-2B	1 5/8-12UN-2B
SV-1	Vapor Injection	1 1/2 Sq Flg	2 Sq Flg	2 Sq Flg	2 1/2 Sq Flg	2 1/2 Sq Flg

355 COMPRESSOR PORTS & SIZES		
PORT	DESCRIPTION	3511-3524 NPTF SIZE ⁽¹⁾
SB-2	Inlet Bearings	3/4-14
SB-3	Outlet Brgs. / Shaftseal	1 1/2-11 1/2
SC-3	Moveable Slide Stop	1/2-14
SC-4	Inlet Oil Drain	1/2-14
SC-5	Inlet Pressure	3/8-18
SC-6	Discharge Pressure	3/8-18
SC-8	Closed Thread Drain	1 1/4-11 1/2
SC-9	Closed Thread Drain	1 1/2-11 1/2
SC-10	Oil Drain	1 1/2-11 1/2
SD-1	Coalescer Bleed	1/2-14
SL-1	Low Vi Liq Injection	1 1/4-11 1/2
SL-2	High Vi Liq Injection	1 1/4-11 1/2
SM-1	Main Oil Injection	2 Sq Flg
SP-1	High Pressure Oil	3/4-14
ST-1	Thermowell Suction	3/4-14
SV-1	Vapor Injection	3 Sq Flg
TW-1	Thermowell Discharge	3/4-14

1. Units In Inches

Table 8. Compressor Ports, Sizes & O-Rings.

SAE STRAIGHT THREAD O-RING FITTINGS - ASSEMBLY PROCEDURE FOR RWFII

When performing maintenance or replacing the compressor, the hydraulic tubing may need to be removed and re-installed. The following procedure outlines the proper installation of SAE straight thread fittings to SAE straight thread ports.

The male and female ends of SAE straight thread O-ring ports have UN/UNF straight threads. An elastomeric O-ring is fitted to the male end. On assembly, the O-ring is firmly sandwiched between the angular sealing surface of the female port and the shoulder of the male end. Sealing is thus affected and maintained by the O-ring compression which results from the clamping force generated by the tightening action. The straight threads do not offer sealing action; they provide the resistance (holding power) for service pressure.

1. Inspect components to ensure that male and female port threads and sealing surfaces are free of burrs, nicks and scratches or any foreign material.
2. If the O-ring is not pre-installed to the fitting on the male end, install the proper size O-ring.
3. Lubricate the O-ring with a light coating of system oil or petroleum jelly.

4. Screw the fitting into the female port until the hex flat contacts the port face. Light wrenching may be necessary.
5. Tighten to the appropriate torque value shown in the Assembly Torque Table.

Straight and Adjustable Fittings or Plugs (Steel)			
Fitting Size	SAE Port Thread Size	Assembly Torque	
		Inch lb	Foot lb
2	5/16 - 24	65 ± 5	5.5 ± 0.5
3	3/8 - 24	130 ± 10	11 ± 1.0
4	7/16 - 20	170 ± 10	14 ± 1.0
5	1/2 - 20	260 ± 15	22 ± 1.0
6	9/16 - 18	320 ± 20	27 ± 2.0
8	3/4 - 16	500 ± 25	42 ± 2.0
10	7/8 - 14	720 ± 30	60 ± 2.5
12	1 1/16 - 12	960 ± 50	80 ± 5.0
16	1 5/16 - 12	1380 ± 75	115 ± 6.0
20	1 5/8 - 12	2700 ± 150	225 ± 12.0
24	1 7/8 - 12	3000 ± 160	250 ± 12.0

Table 9. Assembly Torque.

Frick® Part Number	Tube OD ⁽¹⁾	Tube End UN/UNF-2A ⁽¹⁾	Port THD UN/UNF-2A ⁽¹⁾	O-Ring
944A0288H01	1/2	3/4-16	3/4-16	980A0012K62
944A0288H02	1/2	3/4-16	9/16-18	980A0012K60
944A0288H03	1/2	3/4-16	7/8-14	980A0012K64
944A0288H04	1/2	3/4-16	1 1/16 - 12	980A0012K66
944A0288H05	5/8	7/8-14	7/8-14	980A0012K64
944A0288H06	5/8	7/8-14	3/4-16	980A0012K62
944A0288H07	5/8	7/8-14	1 1/16 - 12	980A0012K66
944A0288H08	3/4	1 1/16 - 12	1 1/16 - 12	980A0012K66
944A0288H09	3/4	1 1/16 - 12	3/4-16	980A0012K62
944A0288H10	3/4	1 1/16 - 12	7/8-14	980A0012K64
944A0288H11	3/4	1 1/16 - 12	1 5/16 - 12	980A0012K69
944A0288H12	7/8	1 3/16 - 12	1 3/16 - 12	980A0012K68
944A0288H13	1	1 5/8 - 12	1 5/16 - 12	980A0012K69
944A0288H14	1	1 5/16 - 12	1 1/16 - 12	980A0012K66
944A0288H15	1 1/4	1 5/8 - 12	1 5/8 - 12	980A0012K71
944A0288H16	1 1/2	1 7/8 - 12	1 7/8 - 12	980A0012K72

Table 10. 90° ELBOW ADAPTERS / O-RINGS STRAIGHT THREAD TO TUBE.

Frick® Part Number	Straight Thread Size ⁽¹⁾	NPTF Size ⁽¹⁾	O-Ring
944A0246H20	7/16-20	1/4-18	980A0012K58
944A0246H01	9/16-18	1/4-18	980A0012K60
944A0246H02	3/4-16	1/4-18	980A0012K62
944A0246H03	3/4-16	3/8-18	980A0012K62
944A0246H04	3/4-16	1/2-14	980A0012K62
944A0246H05	7/8-14	1/4-18	980A0012K64
944A0246H06	7/8-14	3/8-18	980A0012K64
944A0246H07	7/8-14	1/2-14	980A0012K64
944A0246H08	7/8-14	3/4-14	980A0012K64
944A0246H09	1 1/16 - 12	1/2-14	980A0012K66
944A0246H10	1 1/16 - 12	3/4-14	980A0012K66
944A0246H11	1 3/16 - 12	1/2-14	980A0012K68
944A0246H12	1 3/16 - 12	3/4-14	980A0012K68
944A0246H13	1 5/16 - 12	1/2-14	980A0012K69
944A0246H14	1 5/16 - 12	3/4-14	980A0012K69
944A0246H15	1 5/16 - 12	1-11 1/2	980A0012K69
944A0246H16	1 5/8 - 12	1-11 1/2	980A0012K71
944A0246H17	1 5/8 - 12	1 1/4-11 1/2	980A0012K71
944A0246H18	1 7/8 - 12	1-11 1/2	980A0012K72
944A0246H19	1 7/8 - 12	1 1/2-11 1/2	980A0012K72

Table 11. STRAIGHT ADAPTERS / O-RINGS STRAIGHT THREAD TO NPTF.

1. Units In Inches

RETURNING THE OLD COMPRESSOR

1. Prior to returning a compressor to the factory, a Return Material Authorization Number (RMA) must be obtained by calling Baltimore Parts Center, at 800-336-7264. Attach the RMA to the compressor. Ship the compressor prepaid to:

Johnson Controls
100 C.V. Ave.
Waynesboro, PA 17268
Attn: RMA # _ _ _ _ _

2. Do not return the old compressor until the new compressor arrives. External components from the old compressor will need to be installed on the new compressor.
3. Mount the old compressor on the wooden skid in which the new compressor arrived.
4. Ensure that all openings are plugged prior to returning the compressor. Utilize pipe plugs and blank flanges received on the new compressor.

⚠ CAUTION
IMPORTANT: Do not attempt to dismantle and re-assemble compressor prior to shipping. Improper assembly may result in injury to our technicians during disassembly.

Compressor Model	Approx. Weight	Approx. Weight	Lifting Rings
	lbs.	kg.	
163S	1,220	553	901A0196H07
163L	1,280	580	
193S	1,720	780	
193L	1,895	859	
233S	2,670	1,211	
233L	2,950	1,338	
233XL	3,070	1,392	
283S	4,100	1,859	
283L	4,400	1,995	901A0196H12
283SX	4,700	2,132	
355S	7,200	3,265	
355L	8,240	3,737	
355XL	9,200	4,172	
355U	9,465	4,293	
408S	14,000	6,350	901A0196H16
408L	15,500	7,030	
408XL	16,400	7,438	
TDSL	lbs.	kg.	
193S	1,570	712	901A0196H07
193L	1,730	785	
233S	2,435	1,104	
233L	2,690	1,220	
283S	3,750	1,701	901A0196H12
283L	4,000	1,814	
283XL	4,710	2,136	
HPSH	lbs.	kg.	
1510	810	367	901A0196H07

Compressor Model	Approx. Weight	Approx. Weight	Lifting Rings
	lbs.	kg.	
XJS/XJF/XJB			
95	600	272	901A0196H07
120	650	295	
151	1,025	465	
SGC	lbs.	kg.	
1913	1,830	830	901A0196H11*
1918	2,050	930	
2313	2,690	1,220	901A0196H07
2317	2,990	1,356	901A0196H09
2321	3,115	1,413	901A0196H11
2813	4,505	2,043	901A0196H12
2817	4,585	2,079	
2821	6,030	2,735	
2824	6,440	2,921	
3511	8,525	3,866	
3515	9,000	4,082	
3519	9,500	4,308	
3524	10,000	4,535	

Compressor Model	Approx. Weight	Approx. Weight	Lifting Rings
	lbs.	kg.	
XJF			
151XP	1,441	654	-
151XQ	1,443	654	-
151XR	1,446	656	-
151XS	1,449	657	-
151XT	2,453	659	-

Table 12. Compressor Weights with Skid & Lifting Rings (less coupling).

* Lifting Lugs for 1913 & 1918 were changed from 901A0196H07 to 901A0196H11 in March 2002.

COMPRESSOR MODEL AND PACKAGE DESIGNATIONS

Compressor Model	Package Designation	Driver Speed	Compressor Model	Package Designation	Driver Speed
XJS	RXB	RPM	HPSH	HPS	RPM
95S	12	1,750	1510	36	3,550
95M	15	3,550			
95L	19	3,550	TDSH	RWB II	
120S	24	1,750	163S	30	1,750
120M	30	3,550	163L	38	1,750
120L	39	3,550	163S	60	3,550
120S	50	3,550	163L	76	3,550
			193S	100	3,550
XJF	RXF		193L	134	3,550
95S	12	1,750	233S	177	3,550
95M	15	3,550	233L	222	3,550
95L	19	3,550	233XL	270	3,550
120S	24	1,750	283S	316	3,550
120M	30	3,550	283L	399	3,550
120L	39	3,550	283SX	480	3,550
120S	50	3,550	355S	496	3,550
151A	58	3,550	355L	676	3,550
151M	68	3,550	355XL	856	3,550
151L	85	3,550	TDSB	RWB II	
151N	101	3,550	355S	496	3,550
			355L	676	3,550
SGC*	RWF / RWF II		355XL	856	3,550
SGC 1913	100	3,550	355U	1080	3,550
SGC 1918	134	3,550			
SGC 2313	177	3,550	TDSH	RWH II	
SGC 2317	222	3,550	408S	852	3,550
SGC 2321	270	3,550	408L	1179	3,550
SGC 2813	316	3,550	408XL	1395	3,550
SGC 2817	399	3,550			
SGC 2821	480	3,550	TDSL	RDB	
SGC 2824	546	3,550	193S	50	1,750
SGCH 3511	496	3,550	193L	67	1,750
SGCB 3511	496	3,550	193S	100	3,550
SGCH 3515	676	3,550	193L	134	3,550
SGCB 3515	676	3,550	233S	177	3,550
SGCH 3519	856	3,550	233L	222	3,550
SGCB 3519	856	3,550	283S	316	3,550
SGCB 3524	1080	3,550	283L	399	3,550
			283XL	546	3,550

Table 13. Compressor Package/Model Cross-reference.

INDEX BY NAME

R

Returning The Old Compressor	
Baltimore Parts Center	41
Compressor Weights	41
Return Material Authorization	41
RWF Compressor Replacement	
Compressor feet	30
Drive coupling	30
Lockout and tag	30
Main power	30
Separator flange	30
RWF Motor Replacement	
Lockout and tag	29
Main power	29
Support motor weight	29
Weigh replacement motor	29
RXF/RXB - XJS/XJF	
Logic of solenoid valve operation	22
Vi Control Valves and Gaskets.....	22
RXF/XJF Compressor Replacement	
Discharge flange	19
Lockout and tag	19
Main power	19
Separator flange	19
Shim motor feet	19
RXF/XJF Motor Replacement	
Lockout and tag	18
Main power	18
Support motor weight	18
Verify motor rotation	18
Weigh replacement motor	18

S

SAE Straight Thread O-Ring Fittings	27, 40
Slide Valve Potentiometers vs Linear Transmitters	
Quantum Controls	
Linear transmitter	21
Slide valve potentiometer	21
RXF/RXB Plus Microprocessor	
Linear transmitter	21
Slide valve potentiometer	21

T

TDSH 163 & 193 Ports and Plugs	
Economizer Plugs	4
TDSL 3-Step to 4-Step Compressor Replacement	
E-Prom Chips	10
Factory Setup	10
Heat of rejection	10
Solenoid	10
TDSH 355 to TDSB 355 Compressor Replacement	
E-Prom Chips	12
Oil piping	12
Plus Microprocessor	12
Quantum	12
TDSH 355 to TDSH 355 Compressor Replacement	
Bypass orifice	12
TDSH/TDSL	
Compressor feet	3
Coupling	3
Discharge flange	3
Economizer	3
Liquid injection	3
Lockout and tag	3
Main power	3
Motor rotation	3
Refrigerant vapor	3
Separator flange	3
Service valves	3
Shaft alignment	3
Suction gasket	3
Vent separator	3

X

XJS Compressor Replacement	
Compressor feet	15
Coupling	15
Discharge flange	15
Economizer	15
Liquid injection	15
Lockout and tag	15
Main power	15
Motor rotation	15
Refrigerant vapor	15
Separator flange	15
Service valves	15
Shaft alignment	15
Solenoid Valves	15
Vent separator	15

Form 070.660-SM (2013-12) Rev (2014-01)
Supersedes: 070.660-SM (2012-08)
Subject to change without notice
Published in USA · PDF
© 2014 Johnson Controls Inc. - ALL RIGHTS RESERVED



JOHNSON CONTROLS
100 CV Avenue
Waynesboro, PA USA 17268-1206
Phone: 717-762-2121 · FAX: 717-762-8624
www.jci.com/frick