


| | | |
|--|------------------------------|------|
|  | Form No.: 201.18-NM1 (LS1) | 1200 |
| | Supersedes: None | |
| LITERATURE SUPPLEMENT | File with: 201.18-NM1 (1298) | |
| Subject: Literature Error Regarding Priming Of YCAS Series F Compressors | | |

COMMISSIONING, COMPRESSOR OIL

Page 35 of Form 201.18-NM1 (1298) incorrectly states that compressor lubrication systems must be primed before first time start-up. **The YCAS Series F compressor does not require priming**, has no oil sump, and no facilities for pumping oil into the compressor. Fittings on the compressor (see FIG. 1, below) should not be used for pumping oil into the system. If it is necessary to add oil, it should always be pumped into the oil separator.

MAINTENANCE, OIL FILTER CARTRIDGE

When changing the oil filter cartridge, it is necessary to evacuate the compressor at both locations due to an internal check valve.

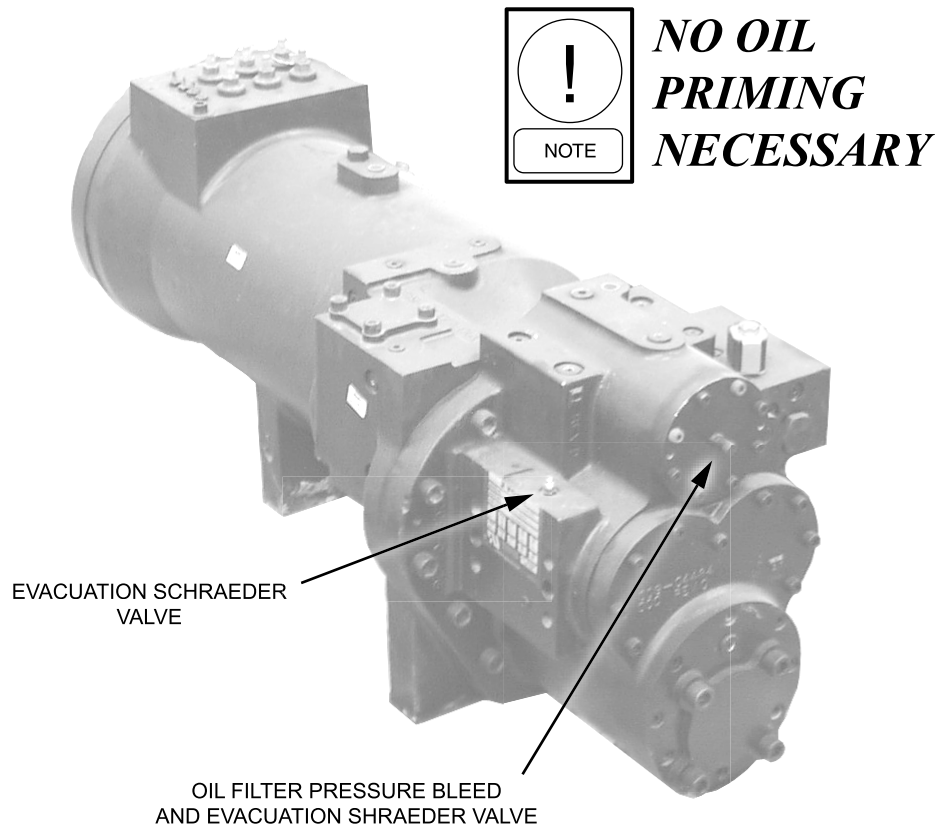


FIG. 1 - YCAS SERIES F COMPRESSOR