



Controls Start-Up, Operation, Service, and Troubleshooting

SAFETY CONSIDERATIONS

Installing, starting up, and servicing this equipment can be hazardous due to system pressures, electrical components, and equipment location (roof, elevated structures, etc.). Only trained, qualified installers and service mechanics should install, start up, and service this equipment.

When working on this equipment, observe precautions in the literature, and on tags, stickers, and labels attached to the equipment, and any other safety precautions that apply. Follow all safety codes. Wear safety glasses and work gloves. Use care in handling, rigging, and setting this equipment, and in handling all electrical components.

⚠ WARNING

Electrical shock can cause personal injury and death. Shut off all power to this equipment during installation and service. There may be more than one disconnect switch. Tag all disconnect locations to alert others not to restore power until work is completed.

⚠ WARNING

This unit uses a microprocessor-based electronic control system. Do not use jumpers or other tools to short out components, or to bypass or otherwise depart from recommended procedures. Any short-to-ground of the control board or accompanying wiring may destroy the electronic modules or electrical components.

⚠ WARNING

To prevent potential damage to heat exchanger tubes always run fluid through heat exchangers when adding or removing refrigerant charge. Use appropriate brine solutions in cooler and condenser fluid loops to prevent the freezing of heat exchangers when the equipment is exposed to temperatures below 32 F (0° C).

DO NOT VENT refrigerant relief valves within a building. Outlet from relief valves must be vented outdoors in accordance with the latest edition of ANSI/ASHRAE (American National Standards Institute/American Society of Heating, Refrigeration and Air Conditioning Engineers) 15 (Safety Code for Mechanical Refrigeration). The accumulation of refrigerant in an enclosed space can displace oxygen and cause asphyxiation. Provide adequate ventilation in enclosed or low overhead areas. Inhalation of high concentrations of vapor is harmful and may cause heart irregularities, unconsciousness or death. Misuse can be fatal. Vapor is heavier than air and reduces the amount of oxygen available for breathing. Product causes eye and skin irritation. Decomposition products are hazardous.

⚠ WARNING

DO NOT attempt to unbrazed factory joints when servicing this equipment. Compressor oil is flammable and there is no way to detect how much oil may be in any of the refrigerant lines. Cut lines with a tubing cutter as required when performing service. Use a pan to catch any oil that may come out of the lines and as a gage for how much oil to add to system. DO NOT re-use compressor oil.

CONTENTS

	Page
SAFETY CONSIDERATIONS.....	1
GENERAL.....	2,3
MAJOR SYSTEM COMPONENTS.....	3
Processor Module (PSIO-1)	3
DSIO-HV Relay Module.....	3
Electronic Expansion Device Module.....	3
Compressor Protection Module (CPM)	3
PSIO-2 (8052) Module	3
Keypad and Display Module (Also Called HSIO-II)	3
Control (LOR) Switch.....	3
OPERATION DATA.....	3-44
Electronic Expansion Device (EXD)	3
• EXV OPERATION	
• ECONOMIZER OPERATION	
Oil Pumps.....	4
Motor Cooling.....	4
Back Pressure Valve (30GX and 30HXA only).....	4
Sensors	4
Compressor Protection Module (CPM)	4
• OUTPUTS	
• INPUTS	
Wye-Delta vs Across-the-Line (XL)	
Starting Option	7
Capacity Control	7
• MINUTES LEFT FOR START	
• MINUTES OFF TIME	
• LOADING SEQUENCE	
• CLOSE CONTROL	
• LEAD/LAG DETERMINATION	
• CAPACITY SEQUENCE DETERMINATION	
• MINIMUM LOAD VALVE	
• CAPACITY CONTROL OVERRIDES	
Head Pressure Control	10
• GENERAL	
• AIR-COOLED UNITS (30GX)	
• WATER-COOLED UNITS (30HXC)	
• CONDENSERLESS UNITS (30HXA)	
• 09DK CONDENSING UNITS	
• ADJUSTING PID ROUTINES	

CONTENTS (cont)

	Page
Cooler and Condenser (30HXC)	
Pump Control	14
• COOLER PUMP CONTROL	
• CONDENSER PUMP CONTROL	
Cooler Heater Control	15
Oil Heater Control	15
Keypad and Display Module	
(Also Called HSIO-II)	15
• ACCESSING FUNCTIONS	
AND SUBFUNCTIONS	15
• AUTOMATIC DEFAULT DISPLAY	15
• STATUS FUNCTION	19
• TEST FUNCTION	27
• HISTORY FUNCTION	27
• SET POINT FUNCTION	27
• SERVICE FUNCTION	32
• SCHEDULE FUNCTION	39
Temperature Reset	41
• EXTERNAL TEMPERATURE RESET	
• EXTERNALLY POWERED RESET	
• RETURN FLUID TEMPERATURE RESET	
Demand Limit	41
• DEMAND LIMIT (Switch Controlled, 30GX Only)	
• EXTERNALLY POWERED DEMAND LIMIT	
• DEMAND LIMIT (CCN Loadshed Controlled)	
TROUBLESHOOTING	45-54
Checking Display Codes	45
Unit Shutoff	45
Complete Unit Stoppage	45
Single Circuit Stoppage	45
Restart Procedure	45
• POWER FAILURE EXTERNAL TO THE UNIT	
Alarms and Alerts	45
Compressor Alarm/Alert Circuit	46
EXD Troubleshooting Procedure	52
• INSPECTING/OPENING ELECTRONIC	
EXPANSION VALVES	
• INSPECTING/OPENING ECONOMIZERS	
SERVICE	54-68
Servicing Coolers and Condensers	54
• TUBE PLUGGING	
• RETUBING	
• TIGHTENING COOLER/CONDENSER	
HEAD BOLTS	
Inspecting/Cleaning Heat Exchangers	55
• COOLERS	
• CONDENSERS (30HX Only)	
Water Treatment	55
Condenser Coils (30GX Only)	55
• COIL CLEANING	
Condenser Fans (30GX Only)	56
Refrigerant Charging/Adding Charge	56
Oil Charging/Low Oil Recharging	57
Oil Filter Maintenance	58
• REPLACING THE EXTERNAL OIL FILTER	
• REPLACING THE INTERNAL OIL FILTER	
Compressor Changeout Sequence	58
• BURNOUT CLEAN-UP PROCEDURE	
Moisture-Liquid Indicator	60
Filter Drier	60
Liquid Line Service Valve	60
Thermistors	61
• LOCATION	
• THERMISTOR REPLACEMENT	
Pressure Transducers	61
• PRESSURE TRANSDUCER CALIBRATION	
• TROUBLESHOOTING	
Safety Devices	64

• COMPRESSOR PROTECTION	
• OIL SEPARATOR HEATERS (30GX)	
• COOLER PROTECTION	
Relief Devices	64
• PRESSURE RELIEF VALVES	
Control Modules	65
• PROCESSOR MODULE (PSIO-1), COMPRESSOR	
PROTECTION MODULE (CPM), HIGH VOLTAGE	
RELAY MODULE (DSIO-HV), AND EXV DRIVER	
MODULE (DSIO-EXV), 12/6 MODULE (PSIO-2)	
• RED LED	
• GREEN LED	
• CONTROL MODULE BATTERY REPLACEMENT	
Carrier Comfort Network (CCN) Interface	66
• PROCESSOR MODULE (PSIO-1)	
• HIGH VOLTAGE RELAY MODULE (DSIO-HV)	
Replacing Defective Processor Module	68
Winter Shutdown Preparation	68
PRE-START-UP PROCEDURE	69
System Check	69
START-UP AND OPERATION	69
Actual Start-up	69
Operating Sequence	69
FIELD WIRING	70-75
APPENDIX A	
(Compressor Must Trip Amps)	76-80
APPENDIX B	
(Capacity Loading Sequence)	81-85
APPENDIX C (Available Accessories)	86,87
APPENDIX D (Building Interface)	88-92
APPENDIX E (Cooler and	
Condenser Pressure Drop)	93-96
APPENDIX F	
(Typical System Components)	97,98
INDEX	99
START-UP CHECKLIST	CL-1 to CL-8

GENERAL

IMPORTANT: The 30GX,HX units use refrigerant R-134a. Compressor oil used with R-134a is Polyolester oil.

This publication contains Start-Up, Service, Controls, Operation and Troubleshooting data for the 30GX080-350 and 30HXA,C076-271 screw chillers.

Circuits are identified as circuits A and B, and compressors are identified as A1 or A2 in circuit A, and B1 or B2 in circuit B.

The 30GX,HX Series chillers feature microprocessor-based electronic controls and electronic expansion devices (EXD) in each refrigeration circuit.

The control system cycles compressor loaders and/or compressors to maintain the selected leaving fluid temperature set point. The system automatically positions the EXD to maintain the specified refrigerant level in the cooler. The system also has capabilities to control a condenser water valve to maintain suitable leaving-water temperature for the 30HXC unit. Safeties are continuously monitored to prevent the unit from operating under unsafe conditions. A scheduling function can be programmed by the user to control the unit's occupied and unoccupied schedules. The control also operates a test function and a manual control function that allows the operator to check output signals and ensure components are operable.

The control system consists of a processor module (PSIO-1), an EXD driver module (DSIO-EXV), a high voltage relay module on 30GX units (DSIO-HV), 2 six-pack relay boards, a keypad and display module (also called HSIO-II), 2 electronic expansion devices (EXDs), 1 compressor protection module (CPM) per pair of compressors, a PSIO-2 module,

6 thermistors, and up to 10 transducers. A remote enhanced display is available as an accessory.

MAJOR SYSTEM COMPONENTS

Processor Module (PSIO-1) — This module is an upgrade to the original PSIO (8088) module, with superior electrical noise immunity capability. It contains the operating software and controls the operation of the machine. It has 12 input channels and 6 output channels.

The PSIO-1 continuously monitors input/output channel information received from all the modules and controls all output signals for all output channels. It also controls the relays on the six-pack relay board. The processor module also controls the EXD driver module, commanding it to open or close each EXD in order to maintain the proper cooler level. Information is transmitted between the processor module, CPM modules, the EXD driver module, and the HSIO-II standard display module through a 3-wire communications bus called COMM3. The remote enhanced display (accessory) is connected to the PSIO-1 module through a 3-wire communications bus, but uses a different communication bus called COMM1. The COMM1 bus is also used to communicate to other CCN (Carrier Comfort Network) devices when the unit is installed in a network application.

DSIO-HV Relay Module — The DSIO-HV module has 4 inputs and 8 outputs and is installed on 30GX units only. The module communicates the status of the inputs with the PSIO-1 module and operates the oil heater, outdoor fan, and minimum load control outputs.

Electronic Expansion Device Module — The electronic expansion device module has 4 inputs and 2 outputs. It receives signals from the PSIO-1 module and operates the electronic expansion devices. The electronic expansion device module also sends the PSIO-1 module the status of its 4 input channels.

Compressor Protection Module (CPM) — The compressor protection module monitors the high pressure switch status, running current, and motor temperature for each compressor. Each CPM controls up to 2 compressors. The CPM also controls the motor cooling solenoid, oil solenoid, and contactor outputs. A pre-punched configuration header for each compressor determines the must trip amps setting. Each CPM sends the PSIO-1 each compressor's motor temperature, relay status, and running current as a percentage of the must trip amps value. The CPM also communicates any alarm conditions as the feedback value.

PSIO-2 (8052) Module — This module is used as an input/output module only, as there is no unit software loaded in the module. This module has 12 input channels and 6 output channels.

Keypad and Display Module (Also Called HSIO-II) — This device consists of a keypad with 8 function keys, 4 operative keys, 12 numeric keys, and a 2-line 24-character alphanumeric LCD (liquid crystal display). Key usage is explained in the Accessing Functions and Subfunctions section on page 15.

Control (LOR) Switch — Control of the chiller is defined by the position of the LOCAL/OFF/REMOTE (LOR) switch. This is a 3-position manual switch that allows the chiller to be put under the control of its own controls (LOCAL), manually stopped (OFF), or controlled through a set of remote contacts (REMOTE). This switch is different than the switch

that is used in the Flotronic™ II controls configuration. The CCN control is enabled through the HSIO-II. The switch allows unit operation as shown in Table 1.

In the LOCAL position, the chiller is allowed to operate and respond to the scheduling configuration, CCN configuration, and set point data. In the remote position, the unit operates similarly to the LOCAL position, except the remote contacts must be closed for the unit to operate.

Table 1 — Unit Mode from LOR Switch and CCN State

SWITCH POSITION	REMOTE CONTACTS	CCN CONFIGURATION	CCN STATE	UNIT MODE
LOCAL	NR	DISABLE	NR	LOCAL ON
		ENABLE	RUN	CCN ON
OFF	NR	NR	STOP	CCN OFF
			NR	LOCAL OFF
REMOTE	OPEN	NR	NR	LOCAL OFF
		DISABLE	NR	LOCAL ON
	CLOSED	ENABLE	RUN	CCN ON
			STOP	CCN OFF

LEGEND

CCN — Carrier Comfort Network
NR — Input Not Read by Processor

NOTE: If the unit is configured for a clock, then the unit is under clock control if it is in an ON mode.

OPERATION DATA

Electronic Expansion Device (EXD) — The microprocessor controls the EXD through the EXD driver module. The EXD will either be an EXV (electronic expansion valve) or an economizer. Inside both these devices is a linear actuator stepper motor.

EXV OPERATION — High-pressure liquid refrigerant enters the valve through the bottom. A series of calibrated slots are located inside the orifice assembly. As refrigerant passes through the orifice, the pressure drops and the refrigerant changes to a 2-phase condition (liquid and vapor). To control refrigerant flow for different operating conditions, the sleeve moves up and down over the orifice, thereby changing orifice size. The sleeve is moved by a linear stepper motor. The stepper motor moves in increments and is controlled directly by the processor module. As the stepper motor rotates, motion is transferred into linear movement by the lead screw. Through the stepper motor and lead screw, 1500 discrete steps of motion are obtained. The large number of steps and long stroke result in very accurate control of refrigerant flow.

Each circuit has a liquid level sensor mounted vertically in the top of the cooler shell. The level sensor consists of a small electric resistance heater and 3 thermistors wired in series, positioned at different heights inside the body of the well. The heater is designed so that the thermistors read approximately 200 F (93.3 C) in dry air. As the refrigerant level rises (falls) in the cooler, the resistance of the closest thermistor(s) will increase (decrease) as it is cooled by the rising liquid refrigerant (heated by the heater). This large resistance difference allows the control to accurately maintain a specified level.

The level sensor monitors the refrigerant liquid level in the cooler and sends this information to the PSIO-1. At initial start-up, the EXV position is at zero. After that, the microprocessor keeps accurate track of the valve position in order to use this information as input for the other control functions. The processor does this by initializing the EXVs at start-up. The processor sends out enough closing pulses to the valve to move it from fully open to fully closed, then resets the position counter to zero. From this point on, until the next initialization, the processor counts the total number of open and closed steps it has sent to each valve.

ECONOMIZER OPERATION — Economizers are factory installed on 30GX105-350 units and 30HXA,C161-271 units. All other sizes use standard EXVs. The economizer improves both the chiller capacity and efficiency as well as providing compressor motor cooling. Inside the economizer are both a linear stepper motor (same as standard EXV motor) and a float valve. The stepper motor is controlled by the processor to maintain the desired liquid level in the cooler (as is done for chillers without economizers). The float valve maintains a liquid level in the bottom of the economizer.

Liquid refrigerant is supplied from the condenser through the end to the bottom of the economizer. A bubbler tube supplies a small amount of discharge gas to ensure that the float will be able to work properly. As the refrigerant passes through the EXD, its pressure is reduced to an intermediate level of about 75 psig (517 kPag). This pressure is maintained inside the economizer shell. Next, the refrigerant flows through the float valve where its pressure is further reduced to slightly above the pressure in the cooler.

The increase in performance is achieved when some of the refrigerant passing through the EXD flashes to vapor, further subcooling the liquid that is maintained at the bottom of the economizer. This increase in subcooling provides additional capacity. Also, since the additional power required to accomplish this is minimal, the efficiency of the machine improves. The vapor that flashes rises to the top of the economizer where it passes to the compressor and is used to provide motor cooling. After passing over the motor windings, the refrigerant reenters the cycle at an intermediate port in the compression cycle.

Oil Pumps — The 30GX,HX screw chillers use one externally mounted prelubricating oil pump per circuit. This pump is operated as part of the start-up sequence. On 30GX units, the pumps are mounted to the base rails on the oil separator side of the unit. The pumps are mounted to a bracket on the condensers of 30HXC units and to the oil separator on 30HXA units.

When a circuit is required to start, the controls energize the oil pump first and read the oil pressure transducer reading. The pump is operated for a period of 20 seconds, after which the oil solenoid is energized to open the oil inlet valve at the compressor. The control again reads the pressure from the oil pressure transducer. If the pump has built up sufficient oil pressure, the compressor is allowed to start.

Once the compressor has started, the oil pump is turned off within 10 seconds. If the pump is not able to build up enough oil pressure, the pump is turned off. Within 3 seconds, the pump is re-energized and makes one additional attempt to build oil pressure. The control generates an alarm if the second attempt fails.

The oil pump is also used to supplement system pressure under certain operating conditions. The oil flow requirements of the compressor vary based on pressure differential across the compressor. The oil pump is designed to provide differential oil pressure during low pressure differential conditions. It is not designed to overcome high pressure drop across filters during high pressure differential conditions.

If the differential oil pressure (oil pressure – economizer pressure) for a compressor is less than 13 psi then the oil pump will be started. Just before the oil pump is started the control measures the pressure differential between the discharge pressure and oil pressure (oil system pressure drop). The oil system pressure drop is saved and used to determine when the oil pump should be shut off.

When the oil pump is operating, it is capable of increasing oil pressure from 0 psi to 50 psi depending on the oil flow

requirements of the compressor. For example, if the compressor needs 2 gpm (high pressure differential condition) and the oil pump is capable of 1.2 gpm, there is no pressure rise and the oil flow will bypass the check valve and supply the 2 gpm to the compressor. If the compressor requires .75 gpm, the oil pump will increase pressure to satisfy the oil pressure requirement.

The pump will continue to operate until the discharge pressure minus economizer pressure is greater than 17 psi plus the oil system pressure drop.

Example:

Discharge pressure	80 psi
Oil pressure	65 psi
Oil system pressure drop	80 – 65 = 15 psi
Economizer pressure	55 psi
Suction pressure	42 psi

Based on the above conditions the oil pump will be started because differential oil pressure equals 10 psi.

The oil pump will continue to operate until the discharge pressure minus economizer pressure (which equals 25) is greater than 17 plus 15 (oil system loss before pump was started). The only way this can be satisfied is if the discharge pressure increases or the compressor unloads at which point the oil pump will be shut off.

Motor Cooling — Compressor motor winding temperatures are controlled to a set point of 200 F (93.3 C). The control accomplishes this by cycling the motor cooling solenoid valve to allow liquid refrigerant to flow across the motor windings as needed. On units equipped with economizers, flash gas leaves the top of the economizer and continually flows to the motor windings. All refrigerant used for motor cooling re-enters the rotors through a port located midway along the compression cycle and is compressed to discharge pressure.

Back Pressure Valve (30GX and 30HXA only) — This valve is located on the oil separator outlet on 30GX units and mounted on the oil separator shell of 30HXA units. The valve's function is to ensure that there is sufficient system differential pressure to allow for oil to be driven back to the compressor. A small copper line (economizer pressure) is connected to the top of the valve, which contains an internal spring that closes a piston if the pressure in the oil separator is not at least 15 psig greater than the economizer pressure.

Sensors — The 30GX,HX control system (based on the Flotronic™ II chiller control system) gathers information from sensors to control the operation of the chiller. The units use up to 10 standard pressure transducers, up to 8 standard thermistors (including 4 motor temperature thermistors), and 2 liquid level thermistors to monitor and control system operation. The sensors are listed in Table 2.

Compressor Protection Module (CPM) — One CPM controls up to 2 compressors. The CPM provides the following functions:

- compressor main contactor control
- Wye-Delta contactor transition
- compressor ground current protection
- motor temperature reading
- high-pressure protection
- reverse rotation protection
- current imbalance protection
- compressor oil solenoid control
- motor cooling solenoid control
- sensor bus communications
- starting and running overcurrent protection

The CPM has the following 4 output relays and 4 inputs:

OUTPUTS:

- compressor contactor
- compressor oil solenoid
- compressor motor cooling solenoid
- Wye-Delta transition relay

INPUTS:

- motor temperature
- three-phase current
- high-pressure switch

A diagram of the CPM board is (HN67LM101) shown in Fig. 1. One CPM board is installed on 30GX080-176 and 30HXA,C076-186 units, and 2 CPM boards are installed on 30GX205-350 and 30HXA,C206-271 units. The address for each CPM board is set using DIP (dual in-line package)

switches 3 and 4. For CPM1 (compressors A1 and B1), both DIP switches should be set to 0. For CPM2 (compressor A2, for 30GX205-265 and 30HXA,C206-271 units only and compressors A2 and B2 for 30GX281-350 only), both switches should be set to 1. See Table 3 for CPM board connections. The CPM has a reset button located between the DIP switch and the J10 connector. Pressing the reset button on the CPM will clear any current CPM alarms, but will not turn off any outputs from the CPM. Pressing the reset button on the CPM will NOT cause the board to go through initialization. Initialization period only occurs during power-up and lasts for approximately 2 minutes. Each compressor's MTA (must trip amps) setting is communicated to the PSIO-1 during the initialization period. Switches 1 and 2 should be set to 0. See Table 4 for DIP switch settings.

Table 2 — Thermistor and Transducer Locations

THERMISTORS			
Sensor	Description	Location	Connection Terminals
T1	Cooler Leaving Fluid Temp	Cooler Head Leaving Fluid Side	PSIO-2, J7 pins 2,3
T2	Cooler Entering Fluid Temp	Cooler Head Entering Fluid Side	PSIO-2, J7 pins 5,6
Motor Temp A1	Motor Temperature A1	Compressor A1 Junction Box	CPM1, plug J5
Motor Temp A2*	Motor Temperature A2	Compressor A2 Junction Box	CPM2, plug J5
Motor Temp B1	Motor Temperature B1	Compressor B1 Junction Box	CPM1, plug J9
Motor Temp B2†	Motor Temperature B2	Compressor B2 Junction Box	CPM1, plug J9
T5	Discharge Gas Temp A	Top of Oil Separator Circuit A	PSIO-2, J7 pins 8,9
T6	Discharge Gas Temp B	Top of Oil Separator Circuit B	PSIO-2, J7 pins 11,12
LL-A (T3)	Liquid Level Circuit A	Top of Cooler Circuit A	PSIO-1, J7 pins 5,6
LL-B (T4)	Liquid Level Circuit B	Top of Cooler Circuit B	PSIO-1, J7 pins 8,9
T7 (optional)**	Outdoor Air Thermistor	Outside Air Stream	PSIO-2, J7 pins 20,21
STP (optional)**	Space Temperature	Conditioned Space	PSIO-2, J7 pins 23,24
T8 (optional)**	Condenser Entering Water Thermistor	Condenser Entering Fluid Line	PSIO-2, J7 pins 14,15
T9 (optional)**	Condenser Leaving Water Thermistor	Condenser Leaving Fluid Line	PSIO-2, J7 pins 17,18
PRESSURE TRANSDUCERS			
Sensor	Description	Location	Connection Terminals
DPT-A	Discharge Pressure Circuit A	Top of Condenser Separator Circuit A	PSIO-1, J7 pin 22
SPT-A	Suction Pressure Circuit A	Top of Cooler Circuit A	PSIO-1, J7 pin 19
EPT-A	Economizer Pressure Circuit A	Economizer Line Entering Comp A	PSIO-1, J7 pin 10
OPT-A1	Oil Pressure Compressor A1	Compressor A1 Oil Connection	PSIO-1, J7 pin 25
OPT-A2*	Oil Pressure Compressor A2	Compressor A2 Oil Connection	PSIO-1, J7 pin 1
DPT-B	Discharge Pressure Circuit B	Top of Oil Separator Circuit B	PSIO-1, J7 pin 16
SPT-B	Suction Pressure Circuit B	Top of Cooler Circuit B	PSIO-1, J7 pin 31
EPT-B	Economizer Pressure Circuit B	Economizer Line Entering Comp B	PSIO-1, J7 pin 13
OPT-B1	Oil Pressure Compressor B1	Compressor B1 Oil Connection	PSIO-1, J7 pin 28
OPT-B2†	Oil Pressure Compressor B2	Compressor B1 Oil Connection	PSIO-1, J7 pin 16

*30HX206-271 and 30GX205-265 only.

†Sensors are available as accessories for field installation.

Table 3 — Compressor Protection Module (CPM) Plug Connections

CPM PLUG	DESCRIPTION
J1	24-vac Power Input
J2, J6	Compressor Contactor(s)
J3, J7	High Pressure Switch, Oil and Motor Cooling Solenoids
J4, J8	Current Sensor Input
J5, J9	Compressor Motor Temperature Input
J10, J11	Communication Connections

NOTE: Plugs J2-J5 are for compressors A1 (CPM1) or A2 (CPM2). Plugs J6-J9 are for compressor B1 (CPM1) or B2 (CPM2).

Table 4 — CPM Address DIP Switch Settings:

UNIT	CPM1				CPM2			
	1	2	3	4	1	2	3	4
30GX080-176 30HXA076-186 30HXC076-186	0	0	0	0	—	—	—	—
30GX205-350 30HXA206-271 30HXC206-271	0	0	0	0	0	0	1	1

To verify proper must trip amps header configuration, press **1** **SRVC** and use the up arrow key on the HSIO to locate the must trip amp values. Press the reset button on the control panel to update these values. See Appendix A. If the values do not match those in Appendix A, verify that the configuration headers have been properly punched out.

The CPM communicates on the COMM3 communication bus to the PSIO-1 module. Proper operation of the CPM board can be verified by observing the 2 LEDs (light-emitting diodes) located on the board. The red LED blinks at a rate of once every 1 to 2 seconds. This indicates that the module is powered and operating correctly. The green LED blinks when the module is satisfactorily communicating with the PSIO-1 module. The CPM communicates the status of its inputs and outputs, and reports 15 different alarm conditions to the PSIO-1. The alarms are listed in Table 5.

⚠ CAUTION

The CPM module has many features that are specifically designed to protect the compressor, including reverse rotation protection. Do not attempt to bypass or alter any of the factory wiring. Any compressor operation in the reverse direction will result in a compressor failure that will require compressor replacement.

The PSIO-1 will generate an alert when it receives an alarm input from the CPM. The alert will be generated in a y.xx format, where “y” refers to the compressor and “xx” to the alarm value in Table 5 (decimal point removed). For example, the HSIO might display Alarm 1.75 for a contactor failure occurring on compressor A1. Similarly, the display would read 5.85 for a motor overtemperature condition on compressor B1. Alerts for compressors A2 and B2 (if present) would be generated as “2.xx” and “6.xx,” respectively. Alarm codes 3 and 4 would not be used. Ending zeros are not displayed.

The high-pressure switch is wired in series with the relay coils of the 8 relays on the CPM. If this switch opens during operation, all relays on the CPM are deenergized and the compressor is stopped. The failure is reported to the PSIO-1 and the processor module locks off the compressor from restarting until the alarm is manually reset.

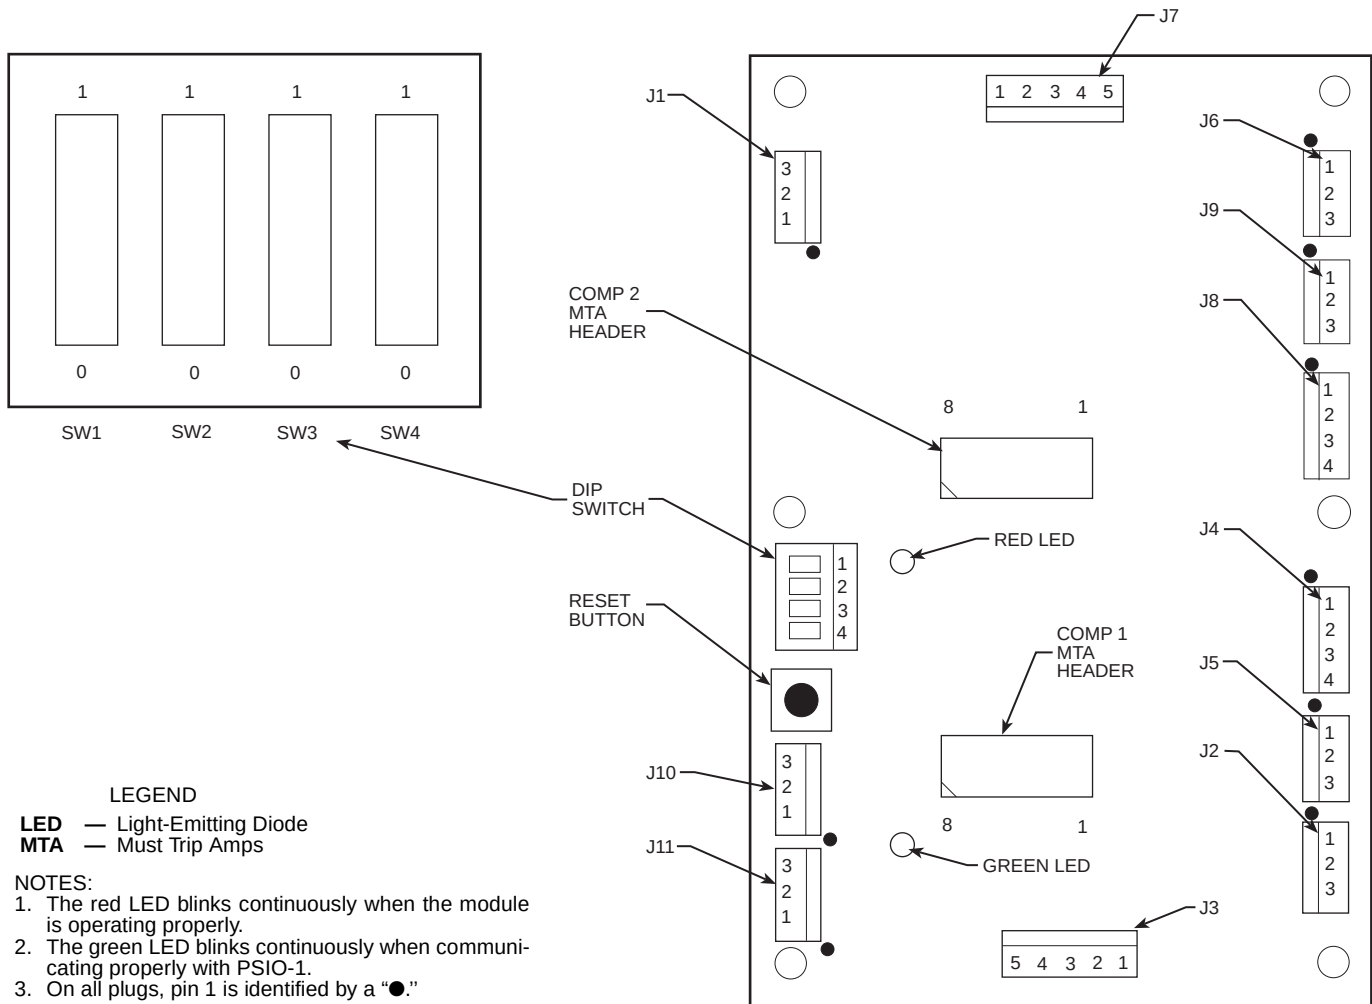


Fig. 1 — Compressor Protection Module (HN67LM101)

Table 5 — Compressor Protection Module Feedback Codes

ALARM CONDITION	VALUE
High Pressure Switch Trip	1.0
No Motor Current	2.0
Current Imbalance Alarm 10%	2.5
Current Imbalance Warning 10%	2.7
Current Imbalance 25%	3.0
Single Phase Current Loss	3.5
High Motor Current	4.0
Ground Fault	5.0
Contactors Failure	7.5
Current Phase Reversal	8.0
Motor Overtemperature	8.5
Open Thermistor	9.0
Configuration Header Fault	9.5
Shorted Thermistor	10.0
No Error	0

Wye-Delta vs Across-the-Line (XL) Starting Option — All 30GX,HX chillers operating at voltages of 208/230-3-60 or 230-3-50 (5 or 8 at Position 12 in model number) are supplied with factory installed Wye-Delta starters. All other voltage options can be ordered with either Wye-Delta or XL starting options. The XL starting method is the most cost effective and simply starts the compressor motor in a Delta configuration (the motors are designed for continuous operation in this configuration) using a single contactor. See Fig. 2. This is the simplest starting method to use and is ideal where starting current does not require limiting.

Where current limitations exist, the Wye-Delta option may be used. See Fig. 3. This option uses a factory-installed starter assembly for each compressor, which consists of 3 contactors labelled 1M, 2M, and S. As the compressor is started, the CPM module energizes contactors 1M and S, which connects and energizes the motor windings in a Wye configuration. The starting current required will be approximately 60% less than that required for an XL start due to the higher impedance of the motor windings when Wye connected. The compressor will attain about 100% of its normal operating speed (approximately 3 to 5 seconds) before the CPM module deenergizes the S contactor and energizes the 2M contactor, switching the compressor windings to a Delta wiring configuration. The S and 2M contactors in the starter assembly are both mechanically and electrically interlocked so that they will not both be energized at the same time.

Do not alter the factory-installed power wiring from the control box terminal block to the compressor junction block. Doing so will cause permanent damage to the compressor and will require that the compressor be replaced.

Capacity Control — The control system cycles compressors, loaders, and minimum load control valves to maintain the user-configured leaving chilled fluid temperature set point. Entering fluid temperature is used by the microprocessor to determine the temperature drop across the cooler and is used in determining the optimum time to add or subtract capacity stages. The chilled fluid temperature set point can be automatically reset by the return temperature reset or space and outdoor-air temperature reset features. It can also be reset from an external 4 to 20 mA signal (requires field-supplied 500-ohm, 1/2 watt resistor), or from a network signal.

The capacity control algorithm runs every 30 seconds. The algorithm attempts to maintain the Control Point at the desired set point. Each time it runs, the control reads the entering and leaving fluid temperatures. The control determines the rate at which conditions are changing and calculates 2 variables based

on these conditions. Next, a capacity ratio (Load/Unload Factor under) is calculated using the 2 variables to determine whether or not to make any changes to the current stages of capacity. This ratio value ranges from –100 to + 100%. If the next stage of capacity is a compressor, the control starts (stops) a compressor when the ratio reaches + 100% (–100%). If the next stage of capacity is a loader, the control energizes (deenergizes) a loader when the ratio reaches + 60% (–60%). Loaders are allowed to cycle faster than compressors, to minimize the number of starts and stops on each compressor. A delay of 90 seconds occurs after each capacity step change.

MINUTES LEFT FOR START — This value is displayed in the Status subfunction and represents the amount of time to elapse before the unit is started. This value can be zero without the machine running in many situations. This can include being unoccupied, LOR switch in the OFF position, CCN not allowing unit to start, Demand Limit in effect, no call for cooling due to no load, and alarm or alert conditions present. If the machine should be running and none of the above are true, a minimum off time may be in effect. The machine should start normally once the time limit has expired.

MINUTES OFF TIME () — This user configurable time period is used by the control to determine how long unit operation is delayed after power is applied/restored to the unit. It is also used to delay compressor restarts after the unit has shut off its lowest stage of capacity. Typically, this time period is configured when multiple machines are located on a single site. For example, this gives the user the ability to prevent all the units from restarting at once after a power failure. A value of zero for this variable does not mean that the unit should be running.

LOADING SEQUENCE — The 30GX,HX compressor efficiency is greatest at full load. Therefore, the following sequence list applies to capacity control.

1. The next compressor is not started until all others are running at 100%.
2. The second unloading stage is only used during initial capacity staging of the unit at start-up.
3. Whenever a compressor is started in a circuit, the loaders in the circuit are deenergized for 15 seconds before the compressor is started. The loaders are energized 90 seconds after the compressor is started.

CLOSE CONTROL () — When configured for Close Control, the control is allowed to use any loading/capacity control devices required to maintain better leaving fluid temperature regulation. All stages of unloading are available. See Appendix B for an example.

LEAD/LAG DETERMINATION () — This is a configurable choice and is factory set to be automatic. The value can be changed to Circuit A or Circuit B leading, as desired. Set at automatic, the control will sum the current number of logged circuit starts and one-quarter of the current operating hours for each circuit. The circuit with the lowest sum is started first. Changes to which circuit is the lead circuit and which is the lag are made when shutting off compressors.

On 30HX206-271 and 30GX205-350 units set for staged loading, the control fully loads the lead circuit before starting the lag circuit and unloads the lag circuit first. When these units are set for equal loading, the control maintains nearly equal capacities in each circuit when the chiller is loading and unloading.

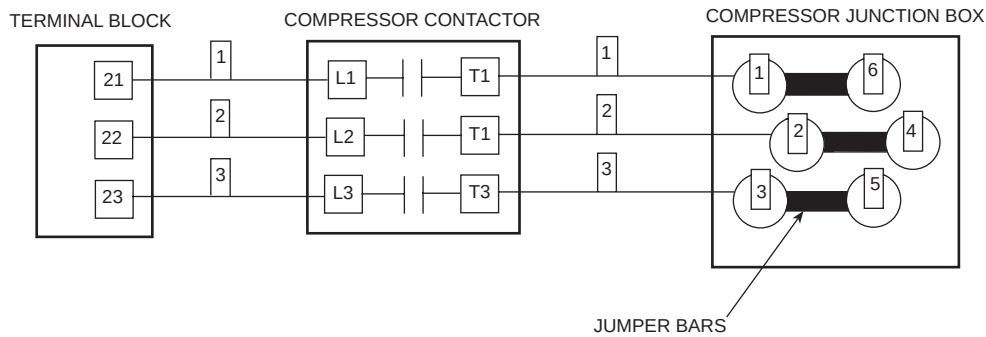


Fig. 2 — Across-the Line (XL) Compressor Wiring

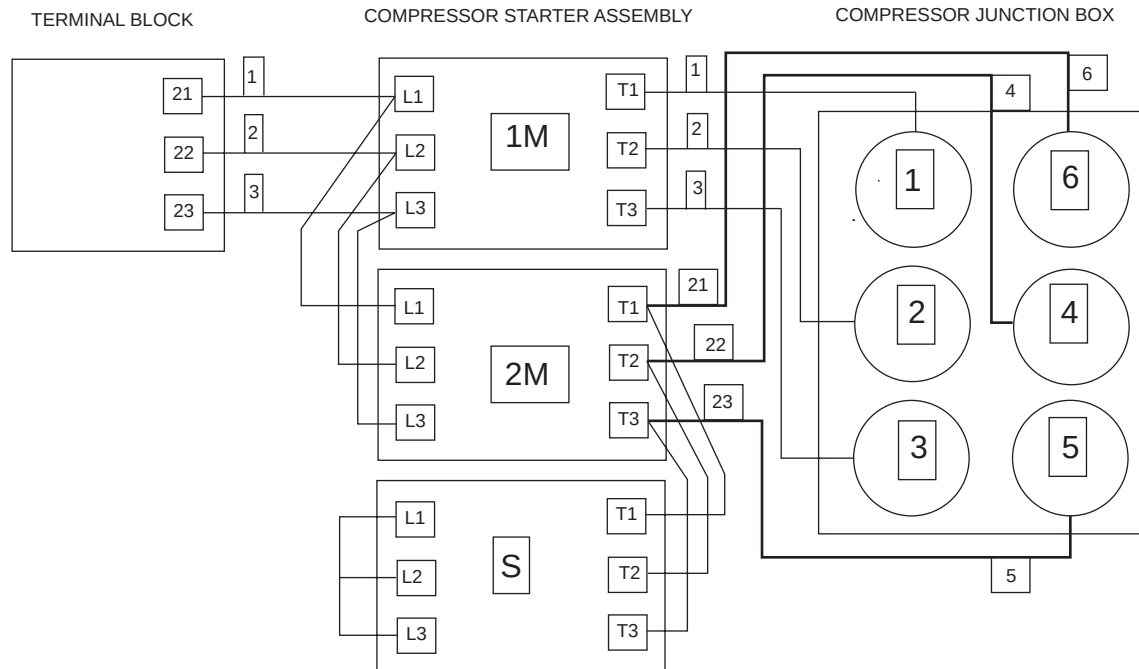


Fig. 3 — Wye-Delta Compressor Wiring

CAPACITY SEQUENCE DETERMINATION () —

This is configurable as equal circuit loading or staged circuit loading with the default set at staged. The control determines the order in which the steps of capacity for each circuit are changed. This control choice does NOT have any impact on machines with only 2 compressors.

MINIMUM LOAD VALVE () —

When this option is installed and configured, the first stage of capacity is altered by energizing the Minimum Load valve relay. Once the control requires more capacity, the minimum load valve is deenergized and normal capacity staging resumes with loaders and compressors. Similarly, the Minimum Load valve relay will be energized for the last stage of capacity to be used before the circuit is shut down.

Configure Unit for Minimum Load Control — The chiller must be configured for minimum load control operation. This may be done using the unit keypad (HSIO-2). Set the LOCAL/OFF/REMOTE (LOR) switch in the OFF position.

1. Press on the keypad.
2. Press the down arrow until the display reads:
MIN. LOAD VALVE SELECT
DISABLE
3. To enable the minimum load valve feature, press .
4. The display may read as follows. (If not, skip to Step 7.)
PASSWORD PROTECTED FUNCTION
ENTER PASSWORD
5. Press .
6. The HSIO-2 again displays the following:
MIN. LOAD VALVE SELECT
DISABLE
7. Press . The display changes to:
MIN. LOAD VALVE SELECT
ENABLE

The chiller is now configured for minimum load valve control.

Test Minimum Load Relay Outputs — After the unit is re-configured, test the operation of the relay and solenoid valve using the Quick Test software function. Test Circuit A as follows (the LOCAL/OFF/REMOTE (LOR) switch must be in the OFF position):

1. Press **1** **TEST ALRM** on the HSIO-2 keypad.
2. Press the down arrow **▼** until the display reads:
MIN. LOAD VALVE A
RELAY IS OFF
3. Press **1** **ENTER**.
4. The display may read as follows. (If not, skip to Step 7.)
PASSWORD PROTECTED FUNCTION
ENTER PASSWORD
5. Press **1** **1** **1** **1** **ENTER**.
6. The HSIO-2 again displays the following:
MIN. LOAD VALVE A
RELAY IS OFF
7. Press **1** **ENTER** to energize the relay. The display reads:
MIN. LOAD VALVE A
RELAY IS ON
An audible click will be heard. Verify that the solenoid valve for Circuit A is energized.
8. Press **2** **ENTER** to turn off the minimum load valve relay for Circuit A.

To check the operation of the solenoid valve on Circuit B, follow the same procedure as the preceding, but enter **2** **TEST ALRM** in Step 1, instead of **1** **TEST ALRM**. The display screens will be for Circuit B instead of A.

Adjust Setting of Minimum Load Ball Valve — The minimum load ball valve must be adjusted to suit the application. Calibrate one circuit at a time as follows:

1. Adjust the ball valve so that it is approximately half open.
2. Operate the chiller in Manual Control mode, with one circuit operating, and all compressor loaders deenergized. See Manual Control Mode section on page 32 for further information.
3. Record the cooler ΔT (the difference between cooler entering fluid temperature and cooler leaving fluid temperature) at this fully unloaded condition.
4. Use the Manual Control feature to enable the minimum load valve for the circuit that is operating.
5. Observe and record the cooler ΔT with the minimum load valve energized.
6. Adjust the minimum load ball valve until the cooler temperature difference reading from Step 5 is equal to half of the temperature difference reading from Step 3.
7. Open the ball valve to decrease the temperature difference or close the ball valve to increase the temperature difference (ΔT). When the valve is adjusted correctly, the difference between cooler entering and leaving fluid temperatures when the minimum load control is energized must be at least half of the temperature difference when the minimum load control is deenergized. For example, if the difference between the cooler entering and leaving water temperature is 3° F with the valve deenergized, then the difference between cooler entering and leaving water temperature must be at least 1.5° F with the valve energized.

Once the outputs have been tested and the ball valve adjusted, the installation is complete. Disable manual control and return chiller to desired operational status.

CAPACITY CONTROL OVERRIDES — The following overrides will modify the normal operation of the routine.

Deadband Multiplier — The user configurable Deadband Multiplier (**3** **SRVC**) has a default value of 1.0. The range is from 1.0 to 4.0. When set to other than 1.0, this factor is applied to the capacity Load/Unload Factor. The larger this value is set, the longer the control will delay between adding or removing stages of capacity. Figure 4 shows how compressor starts can be reduced over time if the leaving water temperature is allowed to drift a larger amount above and below the set point. This value should be set in the range of 3.0 to 4.0 for systems with small loop volumes.

First Stage Override — If the current capacity stage is zero, the control will modify the routine with a 1.2 factor on adding the first stage to reduce cycling. This factor is also applied when the control is attempting to remove the last stage of capacity.

Slow Change Override — The control prevents the capacity stages from being changed when the leaving fluid temperature is close to the set point (within an adjustable deadband) and moving towards the set point.

Ramp Loading (**3** **SRVC**) — Limits the rate of change of leaving fluid temperature. If the unit is in a Cooling mode and configured for Ramp Loading, the control makes 2 comparisons before deciding to change stages of capacity. The control calculates a temperature difference between the control point and leaving fluid temperature. If the difference is greater than 4° F (2.2° C) and the rate of change (°F or °C per minute) is more than the configured Cooling Ramp Loading value (**1** **SET**), the control does not allow any changes to the current stage of capacity.

Low Entering Fluid Temperature Unloading — When the entering fluid temperature is below the control point, the control will attempt to remove 25% of the current stages being used. If exactly 25% cannot be removed, the control removes an amount greater than 25%, but no more than necessary. The lowest stage will not be removed.

Low Discharge Superheat — If a circuit's discharge superheat is less than 15° F (8.3° C), the control does not increase the current capacity stage. If the discharge superheat is less than 5° F (2.8° C) and decreasing, the circuit is unloaded every 30 seconds until the superheat is greater than 5° F (2.8° C). The final capacity stage is not unloaded unless an alarm condition exists. This override is ignored for the first 3 minutes after a compressor is started.

Low Saturated Suction Temperature — To avoid freezing the cooler, the control will compare the circuit Saturated Suction temperature with a predetermined freeze point. If the cooler fluid selected is water, the freeze point is 28 F (–2.2 C). If the cooler fluid selected is brine, the freeze point is 8° F (4.4° C) below the cooling set point (lower of 2 cooling set points for dual configuration). If the saturated suction temperature is below the freeze point, the unit capacity is not allowed to increase.

For brine applications, the freeze point (Brine Freeze Point) can be entered by pressing **6** **SRVC** and scrolling 12 items down. The control will use the Brine Freeze Point value less 6° F (3.3° C) as the freeze point to compare with the Saturated Suction temperature. The default for the Brine Freeze Point is 34 F (1.1 C) which means the control will use 28 F (–2.2 C) as the freeze point. The brine freeze point is adjustable from –15 F to 34 F (–26.1 to 1.1 C).

For water [brine] circuits, if the Saturated Suction temperature falls below 34 F (1.1 C) [the Brine Freeze Point], the unit capacity will not increase. If the Saturated Suction temperature falls below 28 F (-2.2 C), [the Brine Freeze Point minus 6° F (3.3° C)], for 90 seconds, all loaders in the circuit are turned off. If this condition continues for a total of 3 minutes, the circuit will alarm and shut down.

High Condensing Temperature Unloading — Every 10 seconds the control checks for the conditions below. Loaders will be cycled as needed to control the saturated condensing temperature below the configured maximum condensing temperature. Configured maximums are 154 F (67.8 C) for 30GX, 152 F (66.7 C) for 30HXA, and 122 F (50 C) for 30HXC units. If a circuit's saturated condensing temperature is more than 12° F (6.7° C) below the maximum condensing temperature, the circuit capacity is not allowed to increase. If the saturated condensing temperature is more than 2° F (1.1° C) above the maximum condensing temperature for 60 seconds, a loader is turned off. If the saturated condensing temperature rises to more than 5° F (2.8° C) above the maximum condensing temperature during the 60 seconds, a loader is turned off immediately. If all the loaders were already off, the compressor is shut down and an alarm is generated.

MOP (Maximum Operating Pressure) Override — The control monitors saturated condensing and suction temperature for each circuit as well as differential oil pressure. Based on a configurable maximum operating set point (saturated suction temperature), set maximum condensing temperature, and minimum differential oil pressure, the control may reduce the number of capacity stages being used and/or may lower the EXD position when system pressures approach the set parameters.

Head Pressure Control

GENERAL — The microprocessor controls the condenser fans (30GX) or water valve (30HXC) to maintain the saturated condensing temperature to a configurable set point. The 30HXA condenserless units with a 09DK condenser use a combination of factory-supplied fan cycling pressure switches (shipped in the 30HXA control box), temperature switches, and an accessory Motormaster® (part no. 50DJ902801 or 50DJ902811) or Motormaster III (part no. 30GT910-079) control to control head pressure independent of 30HXA unit control. The fans are staged or speed varied (30GX) or water valve controlled (30HXC) based on each circuit's saturated condensing temperature and compressor status. Water cooled units (30HXC) operating at less than 70 F (21.1 C) for entering condenser water require the use of head pressure control.

The chiller must be field configured for the options shown in Table 6. Fan stage settings are shown in Table 7.

AIR-COOLED UNITS (30GX) — See Fig. 5 for condenser fan locations.

Without Motormaster® Control — The first stage of fans are turned on based on compressor status or a Head Pressure Set Point based on Saturated Condensing Temperature (SCT). Additional fan stages are added when the SCT exceeds the Head Pressure Set Point. The Head Pressure Set Point is configurable in the Set Point subfunction. The default is 113 F (45 C). Once a fan stage has been added, the software temporarily modifies the head pressure set point by adding 15° F (8.3° C) for 35 seconds. A fan stage will be removed when the Saturated Condensing Temperature has been less than the Head Pressure Set Point minus 35 F (19.4 C) for 2 minutes. The control uses the higher of the 2 Saturated Condensing Temperature values for 30GX080-150 and 160 units. For the 30GX151 and 161-350 units, each circuit's fan stages are independently controlled based on the circuit Saturated Condensing Temperature. Refer to Table 7 for condenser fan control information. See Fig. 6A.

With Motormaster Control — For low-ambient operation, the lead fan in each circuit can be equipped with the optional or accessory Motormaster III head pressure controller. If factory installed, the controller will be configured for 4 to 20 mA control. With the Motormaster III option enabled, the PSIO-1 module calculates the required output based on Saturated Condensing temperature, Head Pressure set point, and a PID (proportional integral derivative) loop calculation. This 4 to 20 mA output is driven through the PSIO-2 module. Proportional, Integral, and Derivative gain parameters for air cooled controls are adjustable and can be found in the Service subfunction. Checkout and adjustment of the PID loop should only be performed by certified Carrier Comfort Network technicians. To obtain this accessory for field installation, order by part number 30GX-900---012 for a single controller package (30GX080-150 and 160). Order part number 30GX-900---014 for a dual controller package (30GX151 and 161-350). These packages contain all the hardware required to install the accessory. See Fig. 6B.

The control will use the higher of the 2 Saturated Condensing Temperature values for 30GX080-150 and 160 units. For the 30GX151 and 161-350 units, each circuit's fan stages are independently controlled based on the circuit Saturated Condensing Temperature. Refer to Table 8 for condenser fan staging information.

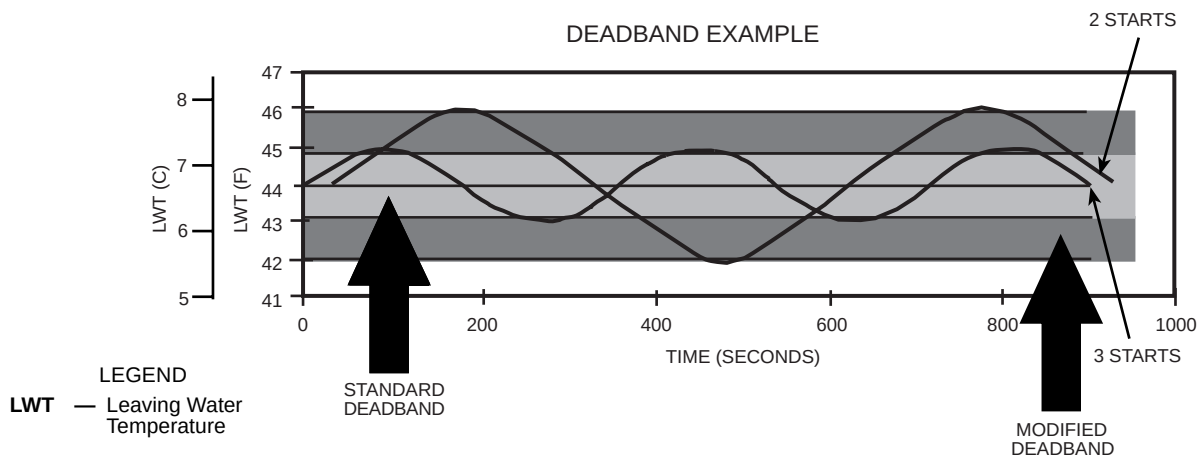


Fig. 4 — Deadband Multiplier

Table 6 — Field Configured Chiller Options

UNIT	CONFIGURATION OPTION	DESCRIPTION	HSIO LOCATION	FACTORY CONFIGURED?
30GX	Fan Staging Select	Air cooled staging method	1 SERV	Yes. See Table 7
	Motormaster® Control Select	Applies to air cooled units only	2 SRVC	Yes. 0 = None Set to 1 to enable (Motormaster only)
30HXC	Water Valve Type	Applies to water cooled unit only	2 SRVC	Yes. 0 = None Set to 1 = 4 to 20 mA, 2 = 2 to 10 V, 3 = 20 to 4 mA, 4 = 10 to 2 V

Table 7 — Fan Staging Settings for Air Cooled (30GX) Units

UNIT 30GX	DESCRIPTION	OPTION NUMBER	HSIO DISPLAY
080-105	1st stage compressor status and SCT set point 2nd stage common control based on highest SCT	12	Com_1cmp
106-125	1st stage compressor status and SCT set point 2nd and 3rd stage common control based on highest SCT	14	Com_2cmp
136, 150, 160	1st stage compressor status and SCT set point 2nd through 4th stage common control based on highest SCT	16	Com_3cmp
151, 161, 175, 205, 225	1st stage each circuit, compressor status 2nd stage Circuit B independent 2nd and 3rd stage Circuit A independent	7	A2B1_stg
176	1st stage each circuit, compressor status 2nd and 3rd stage each circuit independent	3	Ind_2stg
206, 226, 250	1st stage each circuit, compressor status 2nd stage Circuit B independent 2nd, 3rd and 4th stage Circuit A independent	9	A3B2_cmp
251-350	1st stage each circuit, compressor status 2nd, 3rd and 4th stage each circuit independent	5	Ind_3stg

LEGEND

SCT — Saturated Condensing Temperature

WATER-COOLED UNITS (30HXC) — The 30HXC chillers can be configured to control direct or reverse-acting water valves that are controlled by a 4 to 20 mA signal. A 2 to 10 vdc signal can be used by installing a 500-ohm ½ watt resistor across the 2 output terminals of the 4 to 20 mA signal. The 4 to 20 mA control scheme reads the saturated condensing temperature and uses a PID (proportional integral derivative) loop to control the head pressure. Proportional, Integral and Derivative gain parameters for the water cooled controls are adjustable and can be found in the Service subfunction. Checkout and adjustment of the PID loop should only be performed by certified Carrier Comfort Network technicians.

CONDENSERLESS UNITS (30HXA) — The remote condenser fans are controlled by 2 relays with the 30HXA control box. See Field Wiring section on page 73 for wiring details. The 30HXA control must be configured to turn the 09DK fans on and/or off. To set the 30HXA control for this configuration Unit Type under

1

SRVC

 must be changed to 3 (Split System). Next, under

2

SRVC

, Head Pressure Control Type must be changed to 1 (Air Cooled), and Condenser Pump control must be set to 0 (Not Controlled).

The 30HXA control does not support a 4 to 20 mA or a 2 to 10 vdc output for fan speed control. Instead, head pressure control is accomplished with fan cycling pressure switches (09DK054-094), temperature switches (09DK044, 074-094) and Motormaster control. Motormaster and Motormaster III control is used with temperature sensor input to control condenser fan speed. See accessory installation instructions for further information.

09DK CONDENSING UNITS

09DK044 Units — The 09DK044 units have accessory provision for fully automatic intermediate-season head pressure control through condenser fan cycling. Fan number 2 and 3 cycling is controlled by outdoor-air temperature through air temperature switches (ATS) 1 and 2.

The air temperature switches are located in the lower divider panel underneath the coil header. The sensing element is exposed to air entering the no. 1 fan compartment through a hole in the panel. Fan no. 1 is non-cycling.

The air temperature switch controls the fans as shown in Table 9.

09DK054-094 — The capacity of an air-cooled condenser increases with increased temperature difference (defined as saturated condenser temperature minus entering outdoor-air temperature) and decreases with decreased temperature difference. A drop in entering outdoor-air temperature results in a lower saturated condensing temperature. When outdoor-air temperature drops below the minimum temperature for standard units, additional head pressure control is required.

Model 09DK units have fully automatic intermediate-season head pressure control through condenser fan cycling using electromechanical fan cycling controls. Standard head pressure controls regulate the 100 and 50/50% condenser capacity applications. Head pressure can also be controlled by fan cycling controls supplemented by the accessory Motormaster III solid-state head pressure control. See Motormaster III installation instructions for more information.

In the standard control scheme, fans 1 and 2 are on when there is a call for cooling from the respective coil circuits. Fans 1 and 2 are non-cycling. On 054 and 064 units, fans 3 and 4 are controlled by using a fan cycling pressure switch on each of the primary coil circuits in response to condensing pressure. On 074-094 units, fans 3 and 4 are controlled using a fan cycling pressure switch in each of the primary coil circuits in response to condensing pressure. Fans 5 and 6 are controlled by using two air temperature switches, which respond to the outdoor ambient temperature. The air temperature switches are located on the control box shelf.

Table 8 — 30GX080-350 Condenser Fan Staging (PSIO-1 Controlled)

30GX UNIT SIZE	FAN TYPE	FAN CONTACTOR	FANS CONTROLLED	FAN RELAY NO.*
080-105	Standard	FC-1	1, 2	5
		FC-2	3, 4	1
	High Static	FC-1, 1A	1, 2	5
		FC-2, 2A	3, 4	1
106-125	Standard	FC-1	1, 2	5
		FC-2	3, 4	1
		FC-3	5, 6	2
	High Static	FC-1, 1A	1, 2	5
		FC-2, 2A	3, 4	1
		FC-3, 3A	5, 6	2
136, 150, 160	Standard	FC-1	1, 2	5
		FC-2	3, 4	1
		FC-3	5, 6	2
		FC-4	7, 8	2
	High Static	FC-1, 1A	1, 2	5
		FC-2, 2A	3, 4	1
		FC-3, 3A	5, 6	2
		FC-4, 4A	7, 8	2
151, 161, 175, 205, 225	Standard	FC-1	1, 2	Comp. B1 contactor†
		FC-2	3, 4	3
		FC-3	5, 6	2
		FC-4	7, 8	Comp. A1/A2 contactor†
		FC-5	9, 10	1
	High Static	FC-1, 1A	1, 2	Comp. B1 contactor†
		FC-2, 2A	3, 4	3
		FC-3, 3A	5, 6	2
		FC-4, 4A	7, 8	Comp. A1/A2 contactor†
		FC-5, 5A	9, 10	1
176	Standard	FC-1	1, 2	Comp. B1 contactor†
		FC-2	3, 4	3
		FC-3	5, 6	4
		FC-4	7, 8	Comp. A1 contactor†
		FC-5	9, 10	1
		FC-6	11, 12	2
	High Static	FC-1, 1A	1, 2	Comp. B1 contactor†
		FC-2, 2A	3, 4	3
		FC-3, 3A	5, 6	4
		FC-4, 4A	7, 8	Comp. A1 contactor†
		FC-5, 5A	9, 10	1
		FC-6, 6A	11, 12	2
206, 226, 250	Standard	FC-1	1, 2	Comp. B1 contactor†
		FC-2	3, 4	3
		FC-3	5, 6	1
		FC-4	7, 8	Comp. A1/A2 contactor†
		FC-5	9, 10	2
		FC-6	11, 12	2
	High Static	FC-1, 1A	1, 2	Comp. B1 contactor†
		FC-2, 2A	3, 4	3
		FC-3, 3A	5, 6	1
		FC-4, 4A	7, 8	Comp. A1/A2 contactor†
		FC-5, 5A	9, 10	2
		FC-6, 6A	11, 12	2
251, 265	Standard	FC-1	2, 4	1
		FC-2	6, 8	2
		FC-3	1	Comp. B1 contactor†
		FC-4	3	3
		FC-5	5, 7	4
		FC-6	9, 10	Comp. A1/A2 contactor†
		FC-7	11, 12	2
		FC-8	13, 14	2
	High Static	FC-1, 1A	2, 4	1
		FC-2, 2A	6, 8	2
		FC-3	1	Comp. B1 contactor†
		FC-4	3	3
		FC-5, 5A	5, 7	4
		FC-6, 6A	9, 10	Comp. A1/A2 contactor†
		FC-7, 7A	11, 12	2
		FC-8, 8A	13, 14	2
281-350	Standard	FC-1	1, 2	Comp. B1/B2 contactor†
		FC-2	3, 4	3
		FC-3	5, 6	4
		FC-4	7, 8	4
		FC-5	9, 10	1
		FC-6	11, 12	Comp. A1/A2 contactor†
		FC-7	13, 14	2
		FC-8	15, 16	2
	High Static	FC-1, 1A	1, 2	Comp. B1/B2 contactor†
		FC-2, 2A	3, 4	3
		FC-3, 3A	5, 6	4
		FC-4, 4A	7, 8	4
		FC-5, 5A	9, 10	1
		FC-6, 6A	11, 12	Comp. A1/A2 contactor†
		FC-7, 7A	13, 14	2
		FC-8, 8A	15, 16	2

LEGEND

Comp. — Compressor
FC — Fan Contactor

†Proper rotation of these fans to be checked when compressor(s) is running. See Fig. 5 for condenser fan locations when viewing from the control box end.

NOTE: For 30GX151, 161-350 units, fan relays 1 and 2 energize Circuit A fans. Fan relays 3 and 4 energize Circuit B fans.

*Fan Relay number displayed when using **3** **TEST** **ALARM** to test fans.

**Table 9 — Air Temperature Switch Control
(09DK044 Units)**

FAN	FAN SWITCH	TEMPERATURE
FAN 2	ON	Above 65 ± 3 F (18.3 ± 1.7 C)
		Between 55 and 65 F (12.8 and 18.3 C) and temperature falling
	OFF	Below 55 ± 3 F (12.8 ± 1.7 C)
		Between 55 and 65 F (12.8 and 18.3 C) and temperature rising
FAN 3	ON	Above 80 ± 3 F (26.7 ± 1.7 C)
		Between 70 and 80 F (21.1 and 26.7 C) and temperature falling
	OFF	Below 70 ± 3 F (21.1 ± 1.7 C)
		Between 70 and 80 F (21.1 and 26.7 C) and temperature rising

The fan cycling pressure switch controls the fans as follows: Fans 3 and 4 are on above 185 ± 10 psig (1276 ± 69 kPa) and off below 97 ± 10 psig (669 ± 69 kPa). If pressure is rising between 97 psig (669 kPa) and 185 psig (1276 kPa), fans 3 and 4 are off. If pressure is falling from 185 psig (1276 kPa) to 97 psig (669 kPa) fans 3 and 4 are on.

The 09DK054-094 condensers are supplied with fan cycling pressure switches suitable for use with R-22 refrigerant. Fan cycling pressure switches that are compatible with R-134a refrigerant pressures are shipped with the 30HXA chillers. These fan cycling pressure switches must be installed in place of the 09DK factory-installed switches before charging to ensure proper head pressure control.

The air temperature switch controls the fans as follows: On the 074-094 condensers, below 70 ± 3 F (21.1 ± 1.7 C) outdoor ambient, fans 5 and 6 are off; above 80 ± 3 F (26.7 ± 1.7 C) fans 5 and 6 are on. Between 70 F (21.1 C) and 80 F (26.7 C), whether fans 5 and 6 are on or off depends on whether temperature is rising or falling. If the temperature is rising from 70 F (21.1 C) to 80 F (26.7 C), fans 5 and 6 are off. If the temperature is falling from 80 F (26.7 C) to 70 F (21.1 C), fans 5 and 6 are on.

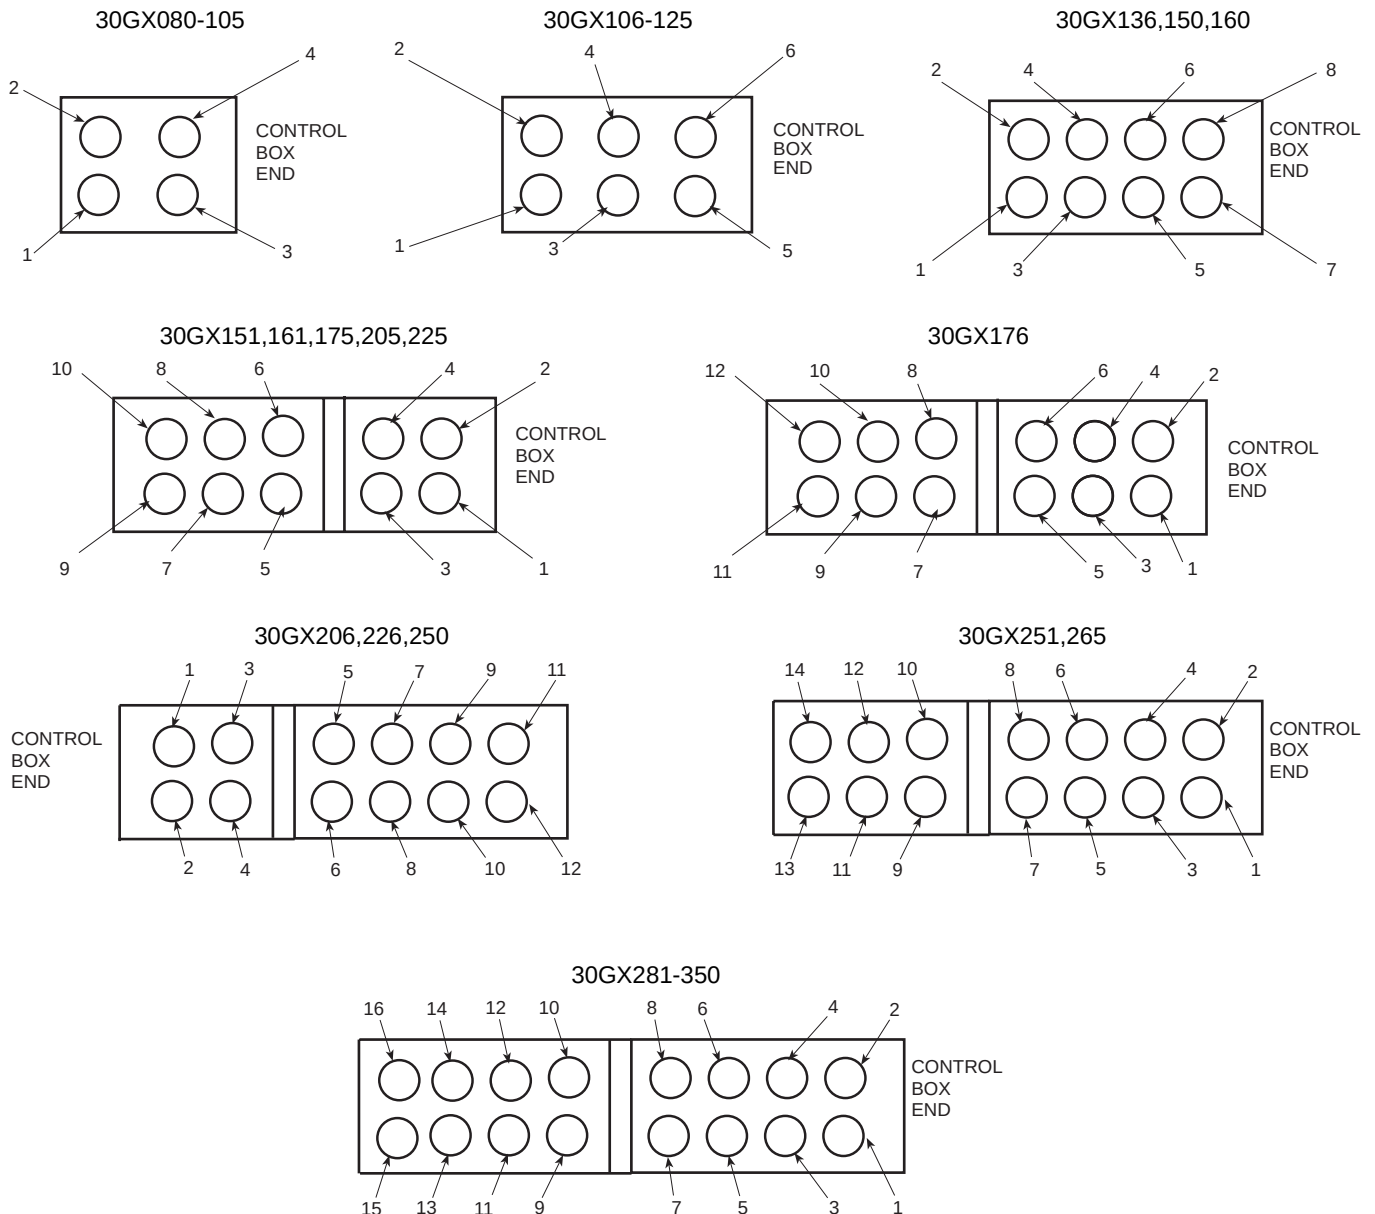


Fig. 5 — 30GX Condenser Fan Locations

30GX UNITS — MOTORMASTER III CONTROL NOT INSTALLED

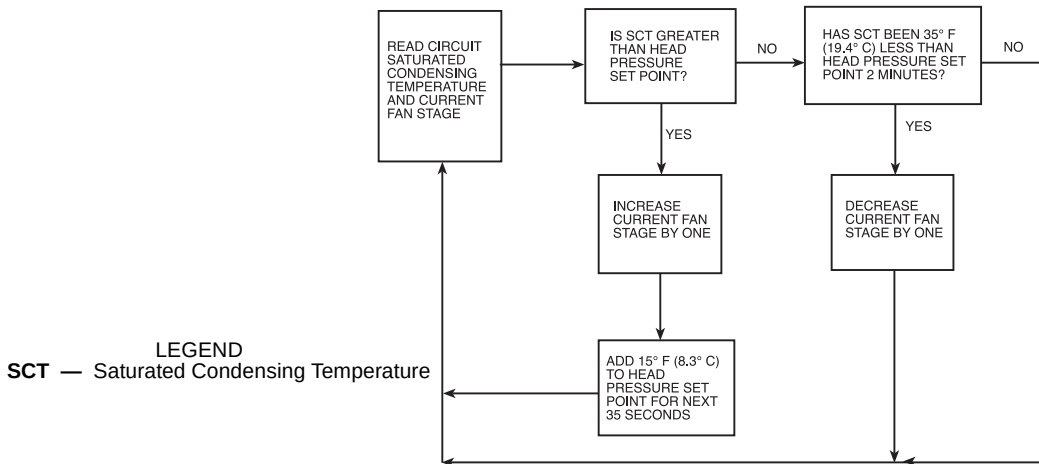


Fig. 6A — 30GX Head Pressure Control Without Motormaster® III Control

30GX UNITS — MOTORMASTER III CONTROL INSTALLED

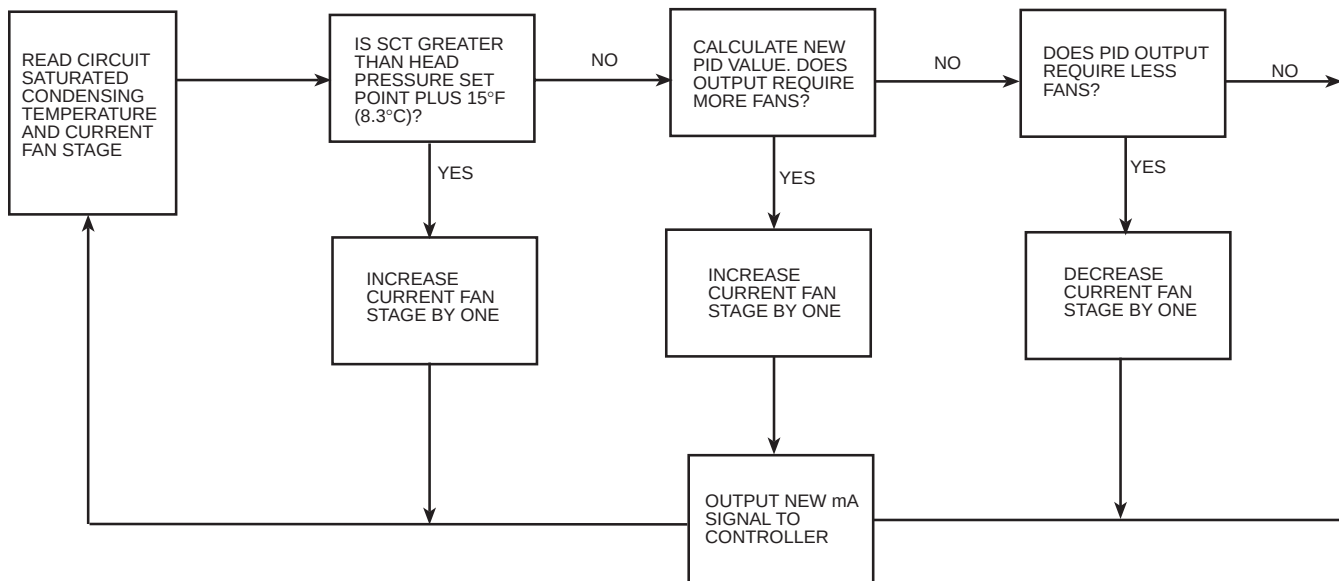


Fig. 6B — 30GX Head Pressure Control Without Motormaster III Control

ADJUSTING PID ROUTINES — The 30GX and 30HXC head pressure control routines use PID (proportional integral derivative) loops to maintain a user-configurable head pressure set point. Gain default values are located in the Service function. See page 32. The current values can be read under **4 SERV** from the HSIO. The control calculates a new fan speed (30GX) or water valve position (30HXC) every 5 seconds based on these gain values and an error term equal to saturated condensing temperature minus head pressure set point. If the control routine is not responding fast enough to large changes (circuit starting, for example), increase the proportional term.

When the routine is making too great a change to valve position or fan speed, decrease the proportional term. To minimize hunting, keep the integral term positive and as low as possible. This value is used to control “droop,” which is common in master/submaster control schemes. The default for the derivative term is zero. The value should not need to be changed.

Cooler and Condenser (30HXC) Pump Control — The 30GX and 30HX chillers can be configured for cooler and condenser (30HXC) pump control. Inputs for a

cooler flow switch or interlock and condenser flow switch are also provided.

COOLER PUMP CONTROL — Proper configuration of the cooler pump control and cooler pump interlock is required to prevent possible cooler freeze-up. The cooler pump interlock should always be enabled. This prevents the chiller from operating unless chilled water flow is detected. See page 73 of the Field Wiring section for proper connection of the chilled water flow switch and cooler pump interlock.

The factory default setting for cooler pump control is “0” (not controlled). It is recommended for 30GX packaged air-cooled chillers that the cooler pump control be utilized unless the chilled water pump runs continuously or the chilled water system contains a suitable anti-freeze solution. The cooler pump relay is energized when the chiller enters an occupied mode. In the event a freeze protection alarm is generated the cooler pump relay is also energized. If the cooler heater is being used and has been on for more than 15 minutes during saturated suction freeze protection, the cooler pump relay is energized.

When the cooler pump control is set to “0” and the cooler pump interlock is set to “1” an alarm 53 will be generated if flow is not proven within one minute after the unit is enabled and in an occupied mode.

When the cooler pump control is set to “1” and the cooler pump interlock is set to “1” an alarm 53 will be generated if flow is not proven within one minute after the cooler pump relay is energized. An alarm 55 will be generated if the interlock contacts remain closed when the cooler pump relay is off. In either cooler pump control configuration, alarm 54 will be generated whenever the cooler pump interlock is open for at least 5 seconds during operation.

CONDENSER PUMP CONTROL ( ) — Factory defaults for both condenser pump control and condenser flow switch are set to “Not Controlled” and “Disabled,” respectively. The condenser pump can be controlled in one of two ways: In the first method, the pump can be controlled like the cooler pump — it is turned on whenever the machine is in the on state and turned off otherwise (set to “1” using the Service function). The second method of control is to turn the pump on when the first compressor is started and off when the last compressor is turned off (set to “2” using the Service function). With the flow switched enabled, the control checks the status of the input one minute after starting the pump. An alarm 49 is generated if the flow switch input is not closed.

Cooler Heater Control — Accessory cooler heaters can be ordered for the 30GX chillers. If installed and enabled, these heaters are turned on only when the machine is in the off state and the chiller is in a saturated suction temperature freeze condition.

Oil Heater Control — Standard feature that controls oil temperature based on Saturated Condensing Temperature (SCT). Heaters turn on at <105 F (40.6 C) SCT, and turn off at >110 F (43.3 C) SCT.


Keypad and Display Module (Also Called HSIO-II) — This module allows the operator to communicate with the processor. It is used to enter configurations and set points and to read data, perform tests, and set schedules. The device consists of a keypad with 7 function keys, 5 operative keys, 12 numeric keys (0 to 9, •, and -), and a 2-line, 24-character alphanumeric liquid crystal display. See Fig. 7.

ACCESSING FUNCTIONS AND SUBFUNCTIONS — Table 10 shows a brief description of the keypad buttons. Table 11A shows the 6 functions (identified by name) and the subfunctions (identified by number). Table 11B shows the 6 functions (identified by name) and the subfunctions (identified by number) when using the optional remote enhanced display controller. Table 12 shows a brief example on how to access subfunctions.

NOTE: It is not necessary to use the   through every item in a subfunction. For example, if you wanted to read the oil pressure for the A1 compressor, press  , then   press to go directly to A1 Oil Pressure. Use a similar procedure to view an item near the bottom of a subfunction. To view Condenser Pump Flow Switch status, press  ,   . This procedure is available in all functions except the TEST function.

AUTOMATIC DEFAULT DISPLAY — When the keypad has not been used for 10 minutes, the display automatically switches to the rotating automatic default display. This display contains the 5 parts shown below.

Entering Fluid Temp
xx.x° F
Leaving Fluid Temp
xx.x° F
Percent Total Capacity
xxx.x%

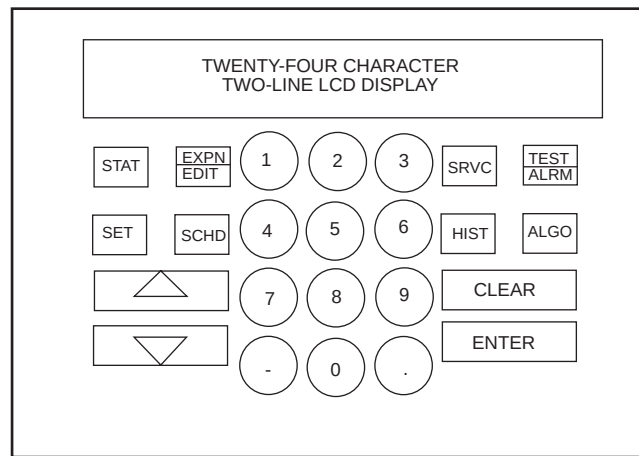

LEGEND
LCD — Liquid Crystal Display

Fig. 7 — Keypad and Display Module

Table 10 — Keypad and Display Module Usage

FUNCTION KEYS	USE
	STATUS — For displaying diagnostic codes and current operating information about the machine.
	HISTORY — For displaying run time, cycles, and previous alarms.
	SERVICE — For entering specific unit configuration information and enabling manual control function.
	SCHEDULE — For entering occupied/unoccupied schedules for unit operation.
	ALGORITHM — Not used.
	SET POINT — For entering operating set points and daytime information.
	TEST — For testing operating of the analog and discrete outputs.
OPERATIVE KEYS	USE
	EXPAND — For displaying a non-abbreviated expansion of the display.
	CLEAR — For clearing the screen of all displays.
	UP ARROW — For returning to previous display position.
	DOWN ARROW — For advancing to next display position.
	ENTER — For entering data.

Total Number of Alarms

xx

MODES : MODE_TBL

Current active modes

All functions are made up of a group of subfunctions. To enter a subfunction, first press the subfunction number desired. Then press the function key in which the subfunction resides. To move within that subfunction, press the up or down arrow keys. Another subfunction may be entered at any time by pressing the subfunction number, then the function key. Depending on system type and configuration, all displays may not be shown.

Table 11A — HSIO Functions and Subfunctions

SUBFUNCTION NO.	FUNCTIONS					
	Status	Test	Schedule	Service	History	Set Point
	☐ STAT	☐ TEST ☐ ALRM	☐ SCHD	☐ SRVC	☐ HIST	☐ SET
1	Alarm Display	Circuit A Discrete Outputs	Ice Build Occupancy Schedule	Factory Configuration	Operating Hours	Set Points
2	General Parameters	Circuit B Discrete Outputs	Local/Normal Occupancy Schedule	Options Configuration1	Alarm History	English/Metric
3	Circuit A Analog Values	Unit Discrete Outputs	Remote CCN Occupancy Schedule	Options Configuration 2	—	Bus Address
4	Circuit A Discrete Inputs/ Outputs Table	Valves and Motormaster® Control	Holiday 01 Configuration	Reset/Demand Limit Configuration	—	Time/Date Configuration
5	Circuit B Analog Values	—	Holiday 02 Configuration	Machine Configuration Codes	—	CCN Enable/Disable
6	Circuit B Discrete Inputs/ Outputs Table	—	Holiday 03 Configuration	—	—	—
7	Unit Analog Parameters	—	Holiday 04 Configuration	Transducer Calibration	—	—
8	Miscellaneous Inputs/Outputs	—	Holiday 05 Configuration	Manual Control	—	—
9	Operating Modes	—	Holiday 06 Configuration	Master/Slave Configuration	—	—
10	Capacity Control	—	Holiday 07 Configuration	—	—	—
11	Dual Chiller	—	Holiday 08 Configuration*	—	—	—

*Subfunctions ☐ 1 ☐ 2 through ☐ 3 ☐ 3 ☐ SCHD are for configuring Holidays 09 through 30.

Table 11B — Functions and Subfunctions Cross-Reference for the Optional Remote Enhanced Display Controller

The optional Remote Enhanced Display controller cross reference table below can be used as a guide to access the same information outlined in the HSIO functions and subfunctions table (see Table 11A). For example, in Table 11A, the alarm history is accessed through the HSIO by pressing 2 and the History button on the keypad (see Table 10). The Remote Enhanced Display cross reference table lists the menu item from

the Remote Enhanced Display which contains the alarm history information. In another example, from Table 11A, pressing 3 and the Status button on the HSIO keypad will access the circuit A analog values. In the table below, the circuit A analog values are accessed by selecting STATUS CIRCA_AN from the appropriate Remote Enhanced Display menu.

HSIO SUBFUNCTION NO.	HSIO FUNCTION KEY					
	Status 	Test 	Schedule 	Service 	History 	Set Point 
1	STATUS A_UNIT_1	SERVICE CONTROL TEST	SCHEDULE OCCPC01S	SERVICE EQUIPMENT CONFIGURATION	SERVICE EQUIPMENT CONFIGURATION STRTHOUR	SETPOINT
2	STATUS A_UNIT_1	SERVICE CONTROL TEST	SCHEDULE OCCPC02S	SERVICE EQUIPMENT CONFIGURATION OPTIONS1	SERVICE ALARM HISTORY	SERVICE LID CONFIGURATION
3	STATUS CIRCA_AN	SERVICE CONTROL TEST	SCHEDULE OCCPC65S	SERVICE EQUIPMENT CONFIGURATION OPTIONS2	—	SERVICE CONTROLLER IDENTIFICATION
4	STATUS CIRA_DIO	SERVICE CONTROL TEST	SERVICE EQUIPMENT CONFIGURATION HOLIDAY,HOLDY_01	SERVICE EQUIPMENT CONFIGURATION RESETCON	—	SERVICE EQUIPMENT SERVICE TIME AND DATE
5	STATUS CIRCB_AN	—	SERVICE EQUIPMENT CONFIGURATION HOLIDAY,HOLDY_02	SERVICE EQUIPMENT CONFIGURATION CONCODES	—	STATUS A_UNIT_1
6	STATUS CIRB_DIO	—	SERVICE EQUIPMENT CONFIGURATION HOLIDAY,HOLDY_03	SERVICE EQUIPMENT CONFIGURATION EXV TESTS	—	—
7	STATUS UNIT_2	—	SERVICE EQUIPMENT CONFIGURATION HOLIDAY,HOLDY_04	SERVICE EQUIPMENT SERVICE CALIBRTE	—	—
8	STATUS UNIT_3	—	SERVICE EQUIPMENT CONFIGURATION HOLIDAY,HOLDY_05	SERVICE EQUIPMENT SERVICE MAN_CTRL	—	—
9	STATUS MODE_TBL	—	SERVICE EQUIPMENT CONFIGURATION HOLIDAY,HOLDY_06	SERVICE EQUIPMENT CONFIGURATION MSTR_SLV	—	—
10	SERVICE CONTROL ALGORITHM STATUS LOADFACT	—	SERVICE EQUIPMENT CONFIGURATION HOLIDAY,HOLDY_07	—	—	—
11	SERVICE CONTROL ALGORITHM STATUS LEADLAG	—	SERVICE EQUIPMENT CONFIGURATION HOLIDAY,HOLDY_08*	—	—	—

*Subfunctions   through    are for configuring Holidays 09 through 30, and are also found under Service, Equipment Configuration.

NOTE: The optional Remote Enhanced Display controller uses the same password (1111) as the HSIO.

Table 12 — Accessing Functions and Subfunctions

OPERATION	KEYPAD ENTRY	DISPLAY RESPONSE
To access a function, press subfunction no. and function name key. Display shows subfunction group.		Circuit A Discrete Outputs Loader A1 Relay is OFF
To move to other elements, scroll up or down using arrow keys.	       	Loader A2 Relay is OFF Minimum Load Valve A Relay is OFF Circuit A Oil Heater Relay is OFF A1 Mtr. Cooling Solenoid Relay is OFF A2 Mtr. Cooling Solenoid Relay is OFF Circuit A Oil Pump Relay is OFF Oil Solenoid A1 Relay is OFF Oil Solenoid A2 Relay is OFF
When the last element in a subfunction has been displayed, the first element is repeated.		Loader A1 Relay is OFF
To move to next subfunction it is not necessary to use subfunction number. Press function name key to advance display through all subfunctions within a function and then back to the first.	   	Circuit B Discrete Outputs Unit Discrete Outputs Valves and Motor Master Circuit A Discrete Outputs
To move to another function, either depress function name key for desired function (display shows the first subfunction), or Access a specific subfunction by using the subfunction number and the function name key.	 	Alarms : xx Reset Alarms : 1 <ENTER> CIR. A DISCRETE OUTPUTS

STATUS FUNCTION — This function shows the rotating display, current status of alarm and alert (diagnostic) codes, capacity stages, operating modes, chilled water set point, all measured system temperatures and pressures, analog inputs, and switch inputs. Refer to Table 13 for a complete description of the function.

Alarms/Alerts — Alarms and alerts are messages that one or more faults have been detected. The alarms and alerts indicate failures that cause the unit to shut down, terminate an option (such as reset) or result in the use of a default value such as a set point. Refer to the Troubleshooting section for more information.

Up to 10 alarms/alerts can be stored at once. To view them, press **1** **STAT**. The control will display the current total number of alarms/alerts. Use the arrow keys to scroll through the list. Press the **EXPN EDIT** key when needed to view the full description of an alarm or alert. Press **1** **ENTER** to clear all the alarms. See Table 14.

IMPORTANT: Do not clear the alarms without first reviewing the full list and investigating and correcting the cause of the alarms.

When an alarm or alert is stored in the display and the machine automatically resets, the alarm/alert is deleted. Codes for safeties which do not automatically reset are not deleted until the problem is corrected and the machine is reset. To clear manual reset alarms from the CPM modules, the reset button on the HSIO bracket must be pressed. Next, switch the LOR switch to OFF and back to Local or Remote position (default alarm clearing method). Press **1** **STAT** and then **1** **ENTER** to clear the alarm from the PSIO if the default LOR reset function has been disabled.

General Parameters — General operating parameters are displayed including control mode, run status, CCN status, and the 5 most current alarms. Press **2** **STAT** to display these and the other values as shown in Table 13.

Circuit A and B Analog and Discrete Information — Circuit A Analog Values can be viewed by pressing **3** **STAT** and scrolling down to see current system operating conditions such as pressures and temperatures. Pressing **4** **STAT** will bring up Circuit A Discrete Inputs and Outputs. Scroll down to view the On/Off status of the compressor(s), loaders, solenoids, and pumps. Oil switch and feedback inputs are also displayed. Press **5** **STAT** and **6** **STAT** to view the identical analog values and discrete inputs and outputs for Circuit B. See Table 13 for a complete display.

Unit Analog Parameters and Temperature Reset — Press **7** **STAT** and scroll down to display the unit entering and leaving fluid temperatures as well as the temperature reset signal and calculated values.

Miscellaneous Inputs and Outputs — Pressing **8** **STAT** and scrolling down will reveal the On/Off status of the condenser fans (30GX only). Also found here are the Demand Limit settings, pump relay and switch status, and miscellaneous items such as Heat/Cool and Dual Set Point switch positions. See Table 13 for a complete list.

Modes — The operating modes are displayed to indicate the operating status of the unit at a given time. See Table 15 for a complete list of all modes.

To enter the MODES subfunction, press **9** **STAT** and use the **▼** key to view all current modes of operation. See Table 16.

Capacity Control — Pressing **1** **0** **STAT**, this subfunction displays the load/unload factor, control point, and leaving water temperature. Scrolling down will also reveal the liquid level sensor values in degrees format.

Dual Chiller — Pressing **1** **1** **STAT** will access the dual chiller control status. This subfunction will display whether or not the chiller is operating as a Master or Slave, any alarm conditions present for dual chiller control, and lead/lag information for changeover. Dual chiller control is configured under **9** **SRVC**.

Table 13 — Status Function and Subfunction Directory

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
1 Alarms	1 STAT ▼	Alarms : xx Reset Alarms : 1 <ENTER> All current alarms are displayed	Use EXPN EDIT as needed
2 General Parameters	2 STAT ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	GENERAL PARAMETERS Control Mode Run Status Off/On Occupied ? Yes/No CCN Enable Off/On CCN Chiller Start/Stop Start/Stop Alarm State Normal/Alarm Current Alarm 1 x.xx Current Alarm 2 x.xx Current Alarm 3 x.xx Current Alarm 4 x.xx Current Alarm 5 x.xx Active Demand Limit xxx.x% Percent Total Capacity xxx.x% Water/Brine Setpoint xx.x dF Control Point xx.x dF Entering Fluid Temperature xx.x dF Leaving Fluid Temperature xx.x dF Emergency Stop Emstop Minutes Left for Start xx min Heat-Cool Status Heat/Cool	Displays LOCAL ON/OFF or CCN ON/OFF Force/clear value with HSIO or CCN device. Must be ON for CCN clock control.
3 Circuit A Analog Values	3 STAT ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CIRCUIT A ANALOG VALUES Total Capacity xxx.x% Available Capacity xxx.x% Discharge Pressure xxx.x PSI Suction Pressure xxx.x PSI A1 Oil Pressure Diff. xxx.x PSI A2 Oil Pressure Diff. xxx.x PSI A1 Oil Pressure xxx.x PSI A2 Oil Pressure xxx.x PSI Discharge Gas Temperature xxx.x dF A1 Motor Temperature xxx.x dF A2 Motor Temperature xxx.x dF	Percentage of total circuit capacity currently in use. Percentage of Total Capacity value not in an alarm or fault condition.

See Legend on page 25.

Table 13 — Status Function and Subfunction Directory (cont)

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
3 Circuit A Analog Values (cont)	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	SAT Condensing Temp xxx.x dF Saturated Suction Temp xxx.x dF EXV Percent Open xxx.x% Motormaster Speed xxx.x% Water Valve Position xxx.x% Cooler Level Indicator x.xx CPM A1 Feedback x.x Volts CPM A2 Feedback x.x Volts Circuit A Econ Pressure xxx.x PSI	 See Table 5. See Table 5.
4 Circuit A Discrete Inputs/Outputs	4 STAT ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CIR. A DISCRETE OUTPUTS Compressor A1 Off/On Compressor A2 Off/On Loader A1 Off/On Loader A2 Off/On Minimum Load Valve A Off/On Circuit A Oil Heater Off/On A1 Mtr Cooling Solenoid Off/On A2 Mtr Cooling Solenoid Off/On Circuit A Oil Pump Off/On Oil Solenoid A1 Off/On Oil Solenoid A2 Off/On CIR. A DISCRETE INPUTS Circuit A Oil Switch Open/Close Compressor A1 Feedback Off/On Compressor A2 Feedback Off/On	
5 Circuit B Analog Values	5 STAT ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CIRCUIT A ANALOG VALUES Total Capacity xxx.x% Available Capacity xxx.x% Discharge Pressure xxx.x PSI Suction Pressure xxx.x PSI B1 Oil Pressure Diff. xxx.x PSI B2 Oil Pressure Diff. xxx.x PSI B1 Oil Pressure xxx.x PSI B2 Oil Pressure xxx.x PSI Discharge Gas Temperature xxx.x dF	Percentage of total circuit capacity currently in use. Percentage of Total Capacity value not in an alarm or fault condition.

Table 13 — Status Function and Subfunction Directory (cont)

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
5 Circuit B Analog Values (cont)	▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	B1 Motor Temperature xxx.x dF B2 Motor Temperature xxx.x dF SAT Condensing Temp xxx.x dF Saturated Suction Temp xxx.x dF EXV Percent Open xxx.x% Motormaster Speed xxx.x% Water Valve Position xxx.x% Cooler Level Indicator x.xx CPM B1 Feedback x.x Volts CPM B2 Feedback x.x Volts Circuit B Econ Pressure xxx.x PSI	See Table 5. See Table 5.
6 Circuit B Discrete Inputs/Outputs	6 STAT ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼ ▼	CIR. B DISCRETE OUTPUTS Compressor B1 Off/On Compressor B2 Off/On Loader B1 Off/On Loader B2 Off/On Minimum Load Valve B Off/On Circuit B Oil Heater Off/On B1 Mtr Cooling Solenoid Off/On B2 Mtr Cooling Solenoid Off/On Circuit B Oil Pump Off/On Oil Solenoid B1 Off/On Oil Solenoid B2 Off/On CIR. B DISCRETE INPUTS Circuit B Oil Switch Open/Close Compressor B1 Feedback Off/On Compressor B2 Feedback Off/On	
7 Unit Analog Parameters	7 STAT ▼ ▼ ▼ ▼ ▼ ▼ ▼	UNITS ANALOG PARAMETERS Cooling Entering Fluid xx.x dF Cooling Leaving Fluid xx.x dF Condenser Entering Fluid xx.x dF Condenser Leaving Fluid xx.x dF Reclaim Entering Fluid xx.x dF Reclaim Leaving Fluid xx.x dF 5 Volt Supply x.x Volts	

See Legend on page 25.

Table 13 — Status Function and Subfunction Directory (cont)

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
7 Unit Analog Parameters (cont)	▼	TEMPERATURE RESET	
	▼	4-20 mA Reset Signal xx.x mA	
	▼	Return Reset Signal xx.x dF	
	▼	External Reset Signal xx.x dF	
	▼	Outdoor Air Temp xx.x dF	
	▼	Calculated Reset xx.x dF	
8 Misc. Inputs/Outputs	8 STAT	MISC INPUTS/OUTPUTS	
	▼	FAN_1 Off/On	
	▼	FAN_2 Off/On	
	▼	FAN_3 Off/On	
	▼	FAN_4 Off/On	
	▼	FAN_5 Off/On	
	▼	FAN_6 Off/On	
	▼	DEMAND LIMIT	
	▼	4-20 mA Demand Signal x.xx mA	
	▼	Demand Switch 1 Off/On	
	▼	Demand Switch 2 Off/On	
	▼	CCN Loadshed Signal Normal/Alarm	
	▼	Max Allowable CAP xxx.x%	
	▼	PUMPS	
	▼	Cooler Pump Relay Off/On	
	▼	Cooler Pump Flow Switch Off/On	
	▼	Condenser Pump Relay Off/On	
	▼	Condenser Pump Flow Switch Off/On	
	▼	MISCELLANEOUS	
	▼	Ice Valve Off/On	
	▼	Ice Build Complete Yes/No	
	▼	Heat/Cool Switch Heat/Cool	
	▼	Dual Set point Switch Off/On	
	▼	Cooler Heater Off/On	
	▼	Options Temperature 1 xx.x dF	Not Used
	▼	Options Temperature 2 xx.x dF	Not Used
9 Operating Modes	9 STAT	MODES :MODE_TBL mode name ON/OFF	Only active modes displayed
	▼	LOCAL OFF	Scroll with down arrow key to display
	▼	CCN OFF	

Table 13 — Status Function and Subfunction Directory (cont)

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
9 Operating Modes (cont)		CLOCK OFF	
		LOCAL ON	
		CCN ON	
		CLOCK ON	
		DUAL SP ACTIVE (1st SP)	
		DUAL SP ACTIVE (2nd SP)	
		TEMPERATURE RESET ACTIVE	
		DEMAND LIMIT ACTIVE	
		LOAD LIMIT ACTIVE	
		LOW SOURCE TEMP PROTECT	
		RAMP LOADING ACTIVE	
		TIMED OVERRIDE ACTIVE	
		LOW COOLER SUCTION TEMP	
		WSM CONTROLLING	
		SLOW CHANGE OVERRIDE	
		OFF TO ON DELAY ACTIVE	
		FSM CONTROLLING	
		2 CHILLR LEAD LAG ACTIVE	
		2 CHILLR LL COMM FAILURE	
		CIR A LOW DISCHG SUPERHT	
		CIR B LOW DISCHG SUPERHT	
		CIR A HIGH SDT	
		CIR B HIGH SDT	
10 Capacity Control	1 0 STAT	CAPACITY CONTROL	
		Load/Unload Factor xxx.x%	
		Control Point xx.x dF	
		Leaving Water Temp xx.x dF	
		MISC. INDICATORS	
		Liquid Lvl Sensor Cir. A xx.x dF	
		Liquid Lvl Sensor Cir. B xx.x dF	

See Legend on page 25.

Table 13 — Status Function and Subfunction Directory (cont)

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
11 Dual Chiller	  	DUAL CHILLER	
		Unit Master/Slave 0 / 1 / 2	0 = Neither 1 = Master 2 = Slave
		Master / Slave Ctrl Active Yes / No	
		Lead Chiller 1 / 2	1 = Master 2 = Slave
		Slave Chiller State 0 / 1 / 3 / 5 / 6	0 = Chiller OFF 1 = Valid Run State in CCN Mode 3 = Chiller in Local Mode 5 = Shutdown on Alarm 6 = Communications Failure
		Slave Chiller Total Cap xxx.x%	
		Lead / Lag Changeover	Yes if Lead / Lag Balance Enabled
		Master / Slave Error 1 / 2 / 3 / 4 / 5 / 6	1 = Master / Slave Have Same Address 2 = Master / Slave Communication Failure 3 = Chiller in Local Mode 4 = Slave Shutdown on Alarm(s) 5 = Master Configured for Heating 6 = No Slave Configured

LEGEND

CCN	— Carrier Comfort Network
CPM	— Compressor Protection Module
dF	— Degrees Fahrenheit
EXV	— Electronic Expansion Valve
FSM	— Flotronic™ System Manager
LL	— Lead/Lag
MTA	— Must Trip Amps
SAT	— Saturated
SDT	— Saturated Discharge Temperature
SP	— Set Point
WSM	— Water System Manager

Table 14 — Reading and Clearing Alarms

KEYPAD ENTRY	DISPLAY	COMMENT
 	Alarm: 02 Reset Alarms: 1 <ENTER>	
	Comp A1 Fail - 1.80 Curr Alarm: 15:12 04/15/96	
 	Comp A1 Fail - 1.80 Current Phase Reversal Alarm: 15:12 04/15/96	
	Compressor A1 Low Oil Pr Alarm: 10:34 04/15/96	
 	Compressor A1 Low Oil Pressure Alarm: 10:34 04/15/96	
	Alarm: 02 Reset Alarms: 1 <ENTER>	Press CPM Reset button first
 	Alarm: 00 Reset Alarms: 1 <ENTER>	Alarms reset and cleared
 	Entering Fluid Temp xx.x dF Leaving Fluid Temp xx.x dF Percent Total Capacity xxx.x% Total Number of Alarms xx MODES: MODE_TBL List of All Current Modes	Returns to rotating default display

Table 15 — Operational and Mode Display Codes

CODE	DESCRIPTION
LOCAL OFF	Unit is off. LOCAL/OFF/REMOTE switch is in OFF position or LOCAL/OFF/REMOTE switch is in REMOTE position and remote contacts are open.
CCN OFF	Unit is off. LOCAL/OFF/REMOTE switch is in LOCAL position and CCN control is enabled (Stop state) or CCN is enabled (Stop state) with LOR switch in REMOTE position and remote contacts closed.
CLOCK OFF	Unit is off due to internal clock schedule. LOR switch is in LOCAL position.
LOCAL ON	Unit is on. LOR switch is in LOCAL position and CCN is disabled or LOR switch is in REMOTE position with contacts closed and CCN is disabled.
CCN ON	Unit is on due to CCN command. LOR switch is in LOCAL position and CCN is enabled (Run state) or LOR switch is in REMOTE position with contacts closed and CCN is enabled (Run state).
CLOCK ON	Unit is on due to internal clock schedule or occupied override function. LOR switch is in LOCAL position.
DUAL SP ACTIVE (1st SP)	Dual set point is in effect. In this mode, unit continues to run in an occupied condition, and leaving fluid set point is automatically controlled to the CSP1 set point in the SET POINT function.
DUAL SP ACTIVE (2nd SP)	Dual set point is in effect. In this mode, unit continues to run in unoccupied condition, but leaving fluid set point is automatically increased to a higher level (CSP2 set point is in SET POINT function).
TEMPERATURE RESET ACTIVE	Temperature reset is in effect. In this mode, unit is using temperature reset to adjust leaving fluid set point upward, and unit is currently controlling to the modified set point. The set point can be modified based on return fluid, outdoor-air temperature, space temperature, or 4 to 20 mA signal.*
DEMAND LIMIT ACTIVE	Demand limit is in effect. This indicates that capacity of unit is being limited by demand limit control option. Because of this limitation, the unit may not be able to produce the desired leaving fluid temperature. Demand limit can be controlled by a switch or 4 to 20 mA signal.*
FSM CONTROLLING	Flotronic™ System Manager (FSM) is controlling the chiller.
RAMP LOADING ACTIVE	Ramp load (pulldown) limiting is in effect. In this mode, the rate at which leaving fluid temperature is dropped is limited to a predetermined value to prevent compressor overloading. See CRAMP set point in the SET POINT function (page 27). The pulldown limit can be modified, if desired, to any rate from 0.2° F to 2° F (0.1° to 1° C)/minute.
TIMED OVERRIDE ACTIVE	Timed override is in effect. This is a 1 to 4 hour temporary override of the programmed schedule, forcing unit to occupied mode. Override can be implemented with unit under LOCAL/REMOTE or CCN control. Override expires after each use.
WSM CONTROLLING	Water System Manager is controlling the chiller.
SLOW CHANGE OVERRIDE	Slow change override is in effect. The leaving fluid temperature is close to and moving towards the control point.

LEGEND

CCN	— Carrier Control Network
CSP	— Cooling Set Point
CRAMP	— Cooling Ramp Loading
EXV	— Electronic Expansion Valve
LOR	— Local/Off/Remote
SP	— Set Point
WSM	— Water System Manager

*A field-supplied 500 Ohm 1/2 W resistor must be installed across the input terminals when using a 4 to 20 mA signal.

CODE	DESCRIPTION
OFF TO ON DELAY ACTIVE	Chiller is being held off by Minutes Off Time found by keying  . Also, normal operation of the chiller includes a minimum 1.5 minute delay after a capacity stage change has been made. This delay is adjustable from 1.5 to 6 minutes.
LOAD LIMIT ACTIVE	This function determines the maximum allowable capacity that can be running and is accomplished through the Flotronic System Manager. The unit may not be able to produce the desired leaving fluid temperature.
2 CHILLR LEAD LAG ACTIVE	This mode indicates that Master and Slave chillers have been configured and are operating using the Dual Chiller control. This is a series water flow arrangement where chilled fluid is piped to the Slave Chiller first and then through the Master Chiller. Leaving Fluid Temperature control is performed based on Master Chiller Leaving Fluid Temperature.
2 CHILLR LL COMM FAILURE	This mode indicates that communication has been lost between the Master and Slave chillers. Both chillers will return to a stand-alone mode of operation until communication is restored.
CIRCUIT A LOW DISCHARGE SUPERHT	If the discharge superheat is less than 5° F (2.8° C) and falling, a circuit loader will be deenergized every 30 seconds. The final stage will not be unloaded unless an alarm condition is present.
CIRCUIT B LOW DISCHARGE SUPERHT	See description for Circuit A above.
CIRCUIT A HIGH SCT	If the circuit is running and the Saturated Condensing Temperature (SCT) is greater than the Maximum Condensing Temperature Set point (MCT_SP) minus 12° F (6.7° C), the control will not add any stages. If the SCT is greater than the MCT_SP plus 5° F (2.8° C), the circuit will be unloaded and shut down if necessary. If the SCT is greater than the MCT_SP plus 2° F (1.1° C) for one minute, a loader will be deenergized. If the SCT is greater than the MCT_SP minus 4° F (2.2° C), the control will compare the maximum operating pressure set point (MOP_SP) with the modified MOP_SP (MOP_CTRL). If the MOP_CTRL is greater than the MOP_SP, the mode will be cleared. Otherwise the control will display the high SCT override mode. The capacity control routine will not add any stages. If the circuit is at its lowest capacity, this mode will be ignored.
CIRCUIT B HIGH SCT	See description for Circuit A above.
LOW COOLER SUCTION TEMPERATURE	Circuit A and/or B low saturated suction condition exists. Control will not increase capacity on affected circuits. The EXV of the affected circuit(s) will be opened until the condition does not exist.

Table 16 — Reading Current Operating Mode

KEYPAD ENTRY	DISPLAY
 	MODES :MODE_TBL CCN ON
	DEMAND LIMIT ACTIVE

TEST FUNCTION — The test function operates the diagnostic program. To initiate the test function, the LOCAL/OFF/REMOTE switch must be in the OFF position.

To reach a particular test, press its subfunction number followed by the **TEST ALARM** key then scroll to the desired test by pressing the down arrow key. Refer to Table 17 for a complete description of the test function.

To start a test of discrete outputs, press **1** **ENTER**. To end the test, simply press the **▼** key or press **0** **ENTER**. Pressing the **▼** key after a test has started advances the system to the next test, whether the current test is operating or has timed out. Circuit A discrete outputs can be tested in **1** **TEST ALARM** and include loaders, minimum load valve, oil heater (if equipped), motor cooling solenoids, oil pump, and oil solenoids. Similarly, Circuit B discrete outputs can be tested in **2** **TEST ALARM**. Additional discrete outputs, including condenser fans, cooler heater, water pumps, and remote alarms can be tested in **3** **TEST ALARM**.

Press **1** **TEST ALARM** to access Valves and Motormaster® control analog outputs. Scroll down to display Circuit A EXV Valve with a target percent of 0%. Press **1** **ENTER** to step the EXV to 25%. Pressing **1** **ENTER** three additional times will move the EXV to 50%, 75%, and 100%. The EXV may be closed in 25% steps by pressing **0** **ENTER** for each desired step. Wait 30 seconds between each step when opening and closing for the valve to stop moving. Pressing the down arrow will display Circuit B EXV Valve and it is tested in the same manner as Circuit A. Also available for test are Circuit A water valve (if equipped) and the Circuit A and B Fan speed % (direct control Motormaster device) outputs for 30GX chillers. These are tested in the same manner as the EXV valves. Note that condenser fan motors are NOT started during fan speed quick tests. Measure 4 to 20 mA dc output using meter in series with violet wire to controller. See pages 74 and 75 of Field Wiring section.

While the unit is in test, you can leave the test function and access another display or function by pressing the appropriate keys. However, a component that is operating when another function is accessed remains operating. You must re-enter the test function and press **0** **ENTER** to shut down the component. Components with a timed operating limit time out normally even if another function is accessed.

Since the Test function checks only certain outputs, it is a good practice to also check all inputs and outputs accessible through the Status function. These can be located by pressing **3** through **8** **STAT**. If keypad is not used for 10 minutes, the unit automatically leaves the test function and resumes the normal rotating display. See Table 18.

HISTORY FUNCTION — Pressing **1** **HIST** displays total machine operating hours. Scroll down to display machine run time and starts, and total run time and starts for each compressor. Refer to Table 19 for a complete description of the function. When the PSIO-1 module is replaced or downloaded with Version 4.0 or later software, the number of starts and run hours may be changed one time. Record the current values from the PSIO before removing the module or downloading new software. The number of starts and hours may be changed

by entering the desired value at the HSIO and pressing the **ENTER** key.

Pressing **2** **HIST** displays the last 10 alarms along with a description and time and date of occurrence of each alarm.

SET POINT FUNCTION — Set points are entered through the keypad. Set points can be changed within the upper and lower limits, which are fixed. The ranges are listed below. Refer to Table 20 for a complete description of the function.

Cooling Set Point 1 and 2

Water:	Medium Temperature Brine:	Low Temperature Brine:
38 to 70 F (3.3 to 21.1 C)	14 to 70 F (-10 to 21.1 C)	-13 to 70 F (-25 to 21.1 C)

Reset Set Points

Maximum Reset Range:	External Temperature Reset:	Chiller Fluid Δ:
-30 to 30 F (-17 to 17 C)	-40 to 240 F (-40 to 118 C)	0° to 15 F (0° to 8 C)

External Signal Reset: 4 to 20 mA (2 to 10 vdc with 500 Ohm 1/2 watt resistor)

Demand Limit Set Points

Switch Input:	Step 1 — 0 to 100% Capacity Reduction Step 2 — 0 to 100% Capacity Reduction
External Signal:	Maximum Demand Limit 4 to 20 mA (2 to 10 vdc with 500 Ohm 1/2 watt resistor) Minimum Demand Limit 4 to 20 mA (2 to 10 vdc with 500 Ohm 1/2 watt resistor)

Loadshed Demand Delta: 0 to 60%

Maximum Loadshed Time: 0 to 120 min.

Head Pressure Set Points

Air cooled chillers (30GX): 80 to 135 F (26.7 to 57.2 C)

Water cooled chillers (30HX): 80 to 128 F (26.7 to 53.3 C)

Set Point Table — The unit operating set points can be found under **1** **SET**. Use the down arrow key to scroll through the set points. The first set point is Cool Set Point 1. This is the occupied chilled fluid set point. Scroll down to Cool Set Point 2 and then to the Cooling Ramp load multiplier which is configurable from 0.2 to 2.0° F/min. (0.11 to 1.1° C/min.). This value is the maximum rate at which the leaving fluid temperature is allowed to drop without adding a stage. Cooling Set Point 2 is used in conjunction with the dual set point switch function. This is used as the low temperature set point for ice duty or as the unoccupied set point. Press the down arrow key to display the Circuit A and B head pressure set points. The remaining set points in this subfunction include demand limit, LCW (leaving chilled water) delta alarm limit, minutes off time, and motor temperature set point.

Display Units — Press **2** **SET** to display the units of measure being used. Type 0 is for English and type 1 is for Metric.

Address — For CCN configurations, press **3** **SET** and scroll down to display the address and bus number of the chiller.

Time — Press **4** **SET** and scroll down to read and change the unit day of week, time, day of month, month of year and year of century. See the examples in Table 20 for making changes to these values.

Table 17 — Test Function and Subfunction Directory

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
1 Circuit A Discrete Outputs	1 TEST ALARM	Circuit A Discrete Output Loader A1 Relay is OFF	Similarly, use 1 ENTER to test remaining outputs. Press the down arrow key or 0 ENTER to turn an output off. NOTE: Output will display Relay is ABSENT when not configured
	1 ENTER	Loader A1 Relay is ON	
	▼	Loader A2	
	▼	Minimum Load Valve A	
	▼	Circuit A Oil Heater	
	▼	A1 Mtr. Cooling Solenoid	
	▼	A2 Mtr. Cooling Solenoid	
	▼	Circuit A Oil Pump	
	▼	Oil Solenoid A1	
	▼	Oil Solenoid A2	
2 Circuit B Discrete Outputs	2 TEST ALARM	Circuit B Discrete Output Loader B1 Relay is OFF	Similarly, use 1 ENTER to test remaining outputs. Press the down arrow key or 0 ENTER to turn an output off. NOTE: Output will display Relay is ABSENT when not configured
	1 ENTER	Loader B1 Relay is ON	
	▼	Loader B2	
	▼	Minimum Load Valve B	
	▼	Circuit B Oil Heater	
	▼	B1 Mtr. Cooling Solenoid	
	▼	B2 Mtr. Cooling Solenoid	
	▼	Circuit B Oil Pump	
	▼	Oil Solenoid B1	
	▼	Oil Solenoid B2	
3 Unit Discrete Outputs	3 TEST ALARM	Unit Discrete Output Fan 1 Relay is OFF	Similarly, use 1 ENTER to test remaining outputs. Press the down arrow key or 0 ENTER to turn an output off. Energizes Circuit A fans for 30HXA units. Energizes Circuit B fans for 30HXA units. Currently not supported.
	1 ENTER	Fan 1 Relay is ON	
	▼	Fan 2	
	▼	Fan 3	
	▼	Fan 4	
	▼	Fan 5	
	▼	Fan 6	
	▼	Cooler Pump	
	▼	Condenser Pump	
	▼	Cooler Heater	
	▼	Alarm	
	▼	Remote Alarm 1	
	▼		

Table 17 — Test Function and Subfunction Directory (cont)

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
3 Unit Discrete Outputs (cont)		Remote Alarm 2	Currently not supported.
		Remote Alarm 3	Currently not supported.
		Remote Alarm 4	Currently not supported.
		Remote Alarm 5	Currently not supported.
		Remote Alarm 6	Currently not supported.
		Remote Alarm 7	Currently not supported.
		Remote Alarm 8	Currently not supported.
		Remote Alarm 9	Currently not supported.
		Remote Alarm 10	Currently not supported.
		Remote Alarm 11	Currently not supported.
		Remote Alarm 12	Currently not supported.
		Remote Alarm 13	Currently not supported.
		Remote Alarm 14	Currently not supported.
		Remote Alarm 15	Currently not supported.
		Remote Alarm 16	Currently not supported.
4 Valves and Motormaster		Valves and Motor Master Circuit A EXV Valve Target Percent = 0%	Step in 25% increments. Wait 30 seconds between each step for valve to stop moving. Valve may be closed in 25% increments by key- ing in . Wait 30 seconds between each step for valve to stop moving.
		Circuit A EXV Valve Target Percent = 25%	
		Circuit A EXV Valve Target Percent = 50%	
		Circuit A EXV Valve Target Percent = 75%	
		Circuit A EXV Valve Target Percent = 100%	Test same method as for Circuit A. Test same method as for EXV valves. Test same method as for EXV valves. Test same method as for EXV valves.
		Circuit B EXV Valve Target Percent = 0%	
		Circuit A Water Valve Target Percent = 0%	
		Circuit A% Fan Speed	
		Circuit B% Fan Speed	

LEGEND

EXV — Electronic Expansion Valve

Table 18 — Using Test Function

KEYPAD ENTRY	DISPLAY RESPONSE	COMMENTS
	Circuit A Discrete Output Loader A1 Relay is OFF	Appears on screen momentarily, then will switch to Loader A1.
	Loader A1 Relay is ON	Compressor Loader A1 solenoid energized
	Loader A1 Relay is OFF	Compressor Loader A1 solenoid deenergized
	Valves and Motor Master Circuit A EXV Valve Target Percent = 0%	Continue pressing to step to 50%, 75%, and 100%. Wait 30 seconds between each step for valve to stop moving. Continue pressing to step closed.
	Circuit A EXV Valve Target Percent = 25%	
	Circuit A EXV Valve Target Percent = 0	

LEGEND

EXV — Electronic Expansion Valve

Table 19 — History Function and Subfunction Directory

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
1 Operating Hours	 	Machine Operating Hours xxx.x hours	Number of hours unit has at least 1 compressor running Number of unit starts from zero capacity These values may be changed once, when new software is downloaded or when the PSIO-1 module is replaced (Version 4.0 and later)
		Machine Starts xxx	
		Circuit A	
		Operating Hours xxx.x hours	
		Compressor A1 Hours xxx.x hours	
		Compressor A2 Hours xxx.x hours	
		Starts	
		Compressor A1 Starts xxx	
		Compressor A2 Starts xxx	
		Circuit B	
		Compressor B1 Hours xxx.x hours	
		Compressor B2 Hours xxx.x hours	
		Starts	
		Compressor B1 Starts xxx	
		Compressor B2 Starts xxx	
2 Alarm History	 	Previous Alarm 1 - description Alarm description, time/day of occurrence	List 10 most recent alarms. Use   when necessary.
		Previous Alarm 2 - description Alarm description, time/day of occurrence	
		Previous Alarm 3 - description Alarm description, time/day of occurrence	
		Previous Alarm 4 - description Alarm description, time/day of occurrence	
		Previous Alarm 5 - description Alarm description, time/day of occurrence	
		Previous Alarm 6 - description Alarm description, time/day of occurrence	
		Previous Alarm 7 - description Alarm description, time/day of occurrence	
		Previous Alarm 8 - description Alarm description, time/day of occurrence	
		Previous Alarm 9 - description Alarm description, time/day of occurrence	
		Previous Alarm 10 - description Alarm description, time/day of occurrence	

Table 20 — Set Point Function and Subfunction Directory

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
1 Set Point Table	1 SET	COOLING	
	▼	Cool Setpoint 1 x.xx dF	Default: 44.0
	▼	Cool Setpoint 2 xx.x dF	Default: 44.0
	▼	Cooling Ramp Loading xx.x dF	Default: 0.5
	▼	HEATING	NOT SUPPORTED
	▼	Heat Setpoint 1 xx.x dF	NOT SUPPORTED Default: 98.0
	▼	Heat Setpoint 2 xx.x dF	NOT SUPPORTED Default: 98.0
	▼	Heating Ramp Loading xx.x dF	NOT SUPPORTED Default: 0.5
	▼	HEAD PRESSURE	
	▼	Head Pressure Setpoint A xxx.x dF	Default: 113.0 (GX) 100.0 (HXA) 85.0 (HXC)
	▼	Head Pressure Setpoint B xxx.x dF	Default: 113.0 (GX) 100.0 (HXA) 85.0 (HXC)
	▼	DEMAND LIMIT	
	▼	Demand Switch 1 Setpoint xxx.x%	Default: 80.0%
	▼	Demand Switch 2 Setpoint xxx.x%	Default: 50.0%
	▼	LCW Delta Alarm Limit xxx.x dF	Default: 50.0 dF
	▼	Minutes Off Time xxx min	Default: 0 min
	▼	Motor Temp Set Point xxx.x dF	Default: 200.0 dF
2 Units	2 SET	US IMPERIAL/METRIC 0	0 = English (Default) 1 = Metric
3 Address	3 SET	TARGET ADDRESS x	Default: 1
	▼	TARGET BUS NUMBER x	Default: 0
4 Time	4 SET	Day of Week Monday	Mon=1, Tues=2, etc.
	3 ENTER	Day of Week Wednesday	Day of week set
	▼	TIME (HOUR/MIN) 00:00	Enter military format
	1 0 . 3 0 ENTER	TIME (HOUR/MIN) 10:30	Time of day set
	▼	DAY OF MONTH xx	
	2 0 ENTER	DAY OF MONTH 20	Day of month set
	▼	MONTH OF YEAR xx	
	0 5 ENTER	MONTH OF YEAR 05	Month of year set
	▼	YEAR OF CENTURY xx	
	9 6 ENTER	YEAR OF CENTURY 96	Year of century set
5 CCN Disable	5 SET	Disable CCN Control x	0=no, 1=yes Default: 0

LEGEND

CCN — Carrier Comfort Network
dF — Degrees Fahrenheit
LCW — Leaving Chilled Water

NOTE: If metric option is selected under , temperatures are expressed in degrees Celsius and pressures are expressed in kPa.

CCN Enable/Disable — Press **5** **SET** to disable the CCN control of the chiller. This function will override CCN control commands. The CCN Enable value under **2** **STAT** must be ON to activate this function. With CCN Enable set to ON and Disable CCN Control set to “0,” the chiller will function normally under CCN control. With Disable CCN Control set to “1,” the chiller will operate in a local mode under its own control.

Reading and Changing Set Points — Table 21 shows how to read and change the chilled fluid set point. Other set points can be changed by following the same procedure. Refer to Table 20 for the sequence of display of set points in each subfunction.

Table 21 — Reading and Changing Chilled Fluid Set Point

KEYPAD	DISPLAY	COMMENTS
1 SET	COOLING	Change set point from default to 48 F.
▼	Cool Setpoint 1 44.0 F default	
4 8 ENTER	Cool Setpoint 1 48.0 F	Set point change complete

SERVICE FUNCTION — This function allows the technician to view and input configuration data. Factory configuration data, field configuration data, and service configuration data may be viewed or entered through the keypad and display module. See Table 22 for a complete listing of configurable items. Whenever a processor module is replaced in the field, the complete list of configuration codes should be checked for correct settings. The current software version can be displayed. See Table 23.

Scroll down in this function to display configuration information including number of compressors, tonnage, and compressor must-trip amps.

Password Protection of HSIO Configurable Service Points — To modify configurations and values and to use the manual control subfunction, the password must be entered before the first change can be made. The default password is set to **1** **1** **1** **1**. See Table 24 for an example of how to enter the password to change the Lead/Lag configuration.

Options Configuration Tables 1 and 2 — These subfunctions can be accessed by pressing **2** or **3** **SERV** and scrolling down to display the configuration options. See Table 22 for a complete list of these options.

Temperature Reset, Demand Limit and Head Pressure PID Configurations — Press **4** **SERV** and scroll down to view the configuration information. See Table 22 for a complete list.

Factory Configuration Codes — Pressing **5** **SERV** allows entry into the factory and service configuration codes subfunction. Under this subfunction, there are 5 configuration codes that are downloaded at the factory. Each code is made up of 8 digits. If the processor module is replaced in the field, these 5 configuration codes should be checked using the keypad and HSIO display module. See Table 25 for a description of the factory configuration codes (codes 1 through 3) and service configuration codes (codes 4 and 5).

The factory and service configuration codes are found by pressing **5** **SERV**. These are preset from the factory. They can be verified by following the description in Table 23. These codes MUST be checked and corrected in the field if the PSIO-1 module is replaced.

NOTE: The LOCAL/OFF/REMOTE switch must be in the OFF position to change configuration codes.

A label is applied to a control box panel with a list of factory and service codes for particular units. Table 26 shows how to configure a new PSIO-1 module for use in a 30HXC106---530CA water cooled chiller.

Transducer Calibration — Press **7** **SERV** and scroll down to view the transducer calibration information. See Table 22 for a complete list, and the Pressure Transducers section on page 61 for a description of this subfunction.

Manual Control Mode — This control allows the user to have full control over the compressors, loaders, and the minimum load valve (if installed) of the machine. Normal safeties such as high pressure, oil level and pressure, and CPM related alarms are NOT bypassed in this control mode. The capacity control function and overrides ARE bypassed when using the manual control mode. To enter this mode, switch the LOR switch to OFF. Press **8** **SERV** at the HSIO. The display will read Manual Control Enable - Disable. Press **1** **ENTER** and switch the LOR switch to Local. The display will change to Manual Control Enable - Enable. The Disable and Enable will appear on the second line of the display. See Table 22 for a complete list of this function.

Scroll down and press **1** **ENTER** to start the desired compressor. The control will start the compressor if the pre-lube cycle is passed, just as in normal operation. Press **1** **ENTER** to add loaders as desired and press **0** **ENTER** to turn off loaders and compressors. The Minimum Load Valve can be energized using the same procedure.

Dual Chiller Configuration — Press **9** **SERV** to enter the Dual Chiller control configuration. This method of control is for a stand-alone Master/Slave combination of chillers and will NOT work with the Flotronic™ System Manager (FSM) or Chillervisor™ System Manager (CSM). The Minus One Pass Cooler option is required for this configuration.

The chillers should be piped for series flow through the coolers. The Master chiller must be downstream from the Slave chiller leaving water. Both the Master and Slave chiller must be connected to the same CCN Level II communications bus with different addresses. To enable the dual chiller configuration the CCN Enable function **2** **STAT** must be set to Enable for each chiller, otherwise each chiller will operate independently. This value can be activated through the HSIO or through a CCN device. Both chillers should be configured for Close Control **3** **SERV** and require flow switches to be installed. For cooler pump control, wire both Master and Slave chiller outputs to the cooler pump starter. All system inputs (temperature reset, demand limit, dual set point, etc.) should be connected to the Master chiller. If Lead/Lag Balance is disabled, the Master chiller will always be the lead chiller. If Lead/Lag Balance is enabled, the control will alternate between the Master and Slave chillers to keep their respective run hours balanced within the value configured for Lead/Lag Balance Delta. The desired leaving fluid set point **1** **SET** for the Duplex chiller must be configured in the Master chiller. CCN Control of the chillers can be disabled locally through the HSIO by entering **5** **SET** and enabling the Disable CCN Control value. This value must be disabled before the chiller will return to Duplex control.

Table 22 — Service Function and Subfunction Directory

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
1 Service Configuration		Software CESR_500100 Ver xxx	
		Unit Type x	1 = Air-cooled (30GX), 2 = Water-cooled (30HXC) 3 = Split system (30HXA)
		Number of Cir A Comp x	
		Compressor A1 Tonnage xx	
		Compressor A2 Tonnage xx	
		Cap. High Temp Override x	
		Number of Cir B Comp x	
		Compressor B1 Tonnage xx	
		Compressor B2 Tonnage xx	
		Max. Cond. Temp Setpoint xxx.x dF	30GX = 154 F (68 C) 30HXA = 152 F (67 C) 30HXC = 122 F (50 C)
		MOP Setpoint xx.x dF	Default = 52 F (11.1 C)
		Fan Staging Select x	Displays "Not Used" or a number. See Table 7 (30GX only).
		CPM Board Used? Yes	
		Compr. A1 Must Trip Amps xxx.x	Value from CPM module. See Appendix A.
		Compr. A2 Must Trip Amps xxx.x	Value from CPM module. See Appendix A.
		Compr. B1 Must Trip Amps xxx.x	Value from CPM module. See Appendix A.
		Compr. B2 Must Trip Amps xxx.x	Value from CPM module. See Appendix A.
2 Options Configuration 1		Cooler Fluid Select x	1 = Water (Default), 2 = Medium Temp Brine 3 = Low Temp Brine (HX only)
		Min. Load Valve Select x	Displays Enable/Dsable Default: Dsable
		Loading Sequence Select x	1 = Equal circuit, 2 = Staged circuit Default: 2. See page 7.
		Lead/Lag Sequence Select x	1 = Automatic (Default), 2 = Circuit A leads, 3 = Circuit B leads
		Head Press. Control Type x	0 = None (Default, HX), 1 = Air cooled (Default, for GX and must be set to 1 for HXA control of remote A/C condenser fans), 2 = Water cooled (HXC only)
		Motormaster Select x	0 = None (Default), 1 = Direct control
		Water Valve Type x	0 = None (Default), 1 = 4-20 mA, 2 = 2-10 V 3 = 20-4 mA, 4 = 10-2 V
		Ext. Reset Sensor Select x	0 = Space Temp Thermistor (Default) 1 = Outside Air Thermistor
		Cooler Pump Interlock x	0 = No interlock 1 = Interlock enabled (Default)
		Cooler Pump Control x	0 = Not controlled (Default) 1 = On/Off control
		Condenser Pump Control x	0 = Not controlled (Default, and 30HXA control of remote A/C condenser fans) 1 = On/Off control 2 = Off when stages equal 0 (unit off)
		Condenser Flow Switch x	Displays Enable/Dsable Default: Dsable
		Condenser Water Sensors x	0 = Not used (Default) 1 = Used
		Heat Reclaim Sensors x	CURRENTLY NOT SUPPORTED
3 Options Configuration 2		Cooling Setpoint Select x	0 = Single set point (Default), 1 = Dual set point (switch controlled), 2 = Dual set point (clock controlled)
		Heating Setpoint Select x	0 = Single set point (Default), 1 = Dual set point (switch controlled), 2 = Dual set point (clock controlled) CURRENTLY NOT SUPPORTED

See Legend on page 36.

Table 22 — Service Function and Subfunction Directory (cont)

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
3 Options Configuration 2 (cont)		Ramp Load Select x	0 = Disabled, 1 = Enabled (Default) See page 9.
		Clock Control Select x	0 = No clock control (Default) 1 = Local clock control 65 = CCN Clock Control
		Ice Configuration Select x	0 = Disabled (Default) 1 = Clock Control 2 = Demand Limit Control
		OAT Sensor Select x	0 = Disabled, 1 = Enabled Default: 0
		Remote Alarm Select x	0 = Disabled, 1 = Enabled Default: 0
		Alarm Reset Select x	0 = Not selected, 1 = Selected (Default, allows use of LOR switch to reset alarms)
		Close Control Select x	0 = Disabled, 1 = Enabled Default: 0 See page 7.
		Deadband Multiplier x.x	Default: 1.0
		Current Unbalance Alarm x	Alarm at 10% imbalance; 0 = Disabled, 1 = Enabled Default: 1
4 Reset Configuration Table	 	COOLING RESET TYPE 1	See Temperature Reset section, page 41.
		Degrees Reset at 20 mA xx.x dF	Default: 0
		COOLING RESET TYPE 2	
		Remote temp=No Reset xx.x dF	Default: 20
		Remote temp=Full Reset xx.x dF	Default: 125
		Degrees Reset xx.x dF	Default: 0
		COOLING RESET TYPE 3	
		CHW Delta T=No Reset xx.x dF	Default: 15
		CHW Delta T=Full Reset xx.x dF	Default: 0
		Degrees Reset xx.x dF	Default: 0
		COOLING RESET	
		Select/Enable Reset Type x	0 = No Reset (Default), 1 = 4-20 mA Reset 2 = External Reset, 3 = Return Fluid Reset
		HEATING RESET TYPE 1	CURRENTLY NOT SUPPORTED
		Degrees Reset at 20 mA xx.x dF	Default: 0
		HEATING RESET TYPE 2	CURRENTLY NOT SUPPORTED
		Remote temp=No Reset xx.x dF	Default: 125
		Remote temp=Full Reset xx.x dF	Default: 20
		Degrees Reset xx.x dF	Default: 0
		HEATING RESET TYPE 3	CURRENTLY NOT SUPPORTED
		HTW Delta T=No Reset xx.x dF	Default: 15
		HTW Delta T=Full Reset xx.x dF	Default: 0
		Degrees Reset xx.x dF	Default: 0
		HEATING RESET	
		Select/Enable Reset Type x	0 = No Reset (Default), 1 = 4-20 mA reset 2 = External reset, 3 = Return Fluid reset
		DEMAND LIMIT	See Demand Limit Section, page 41.
		Demand Limit at 20 mA xxx.x%	Enter 0-100, Default: 0%

Table 22 — Service Function and Subfunction Directory (cont)

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
4 Reset Configuration Table (cont)		Demand Limit Select x	0 = None (Default), 1 = Two-step switch, 2 = 4-20 mA, 3 = CCN Loadshed
		Loadshed Group Number x	0-99, Default: 0
		Loadshed Demand Delta xxx%	0-60%, Default: 0
		Maximum Loadshed Time xx min	0-120 min, Default: 60 min
		WATER VALVE PID	
		Proportional PID Gain x.x	Default = 1.0 Adjustable from -20.0 to 20.0
		Integral PID Gain x.x	Default = 0.1 Adjustable from -20.0 to 20.0
		Derivative PID Gain x.x	Default = 0.0 Adjustable from -20.0 to 20.0
		AIR MOTOR MASTER PID	
		Proportional PID Gain x.x	Default = 1.0 Adjustable from -20.0 to 20.0
		Integral PID Gain x.x	Default = 0.1 Adjustable from -20.0 to 20.0
		Derivative PID Gain x.x	Default = 0.0 Adjustable from -20.0 to 20.0
5 Factory Configuration Codes		FACTORY CODES	
		Configuration Code 1 xxxxxxx	Factory set. See Table 25.
		Configuration Code 2 xxxxxxx	Factory set. See Table 25.
		Configuration Code 3 xxxxxxx	Factory set. See Table 25.
		SERVICE CODES	
		Configuration Code 4 xxxxxxx	Factory set. See Table 25.
		Configuration Code 5 xxxxxxx	Factory set. See Table 25.
6 NOT USED			
7 Transducer Calibration		CALIBRATION OFFSET	See Pressure Transducer Calibration, page 61.
		CIRCUIT A PRESSURE	
		Discharge Pressure xxx.x PSI	
		Suction Pressure xxx.x PSI	
		A1 Oil Pressure xxx.x PSI	
		A2 Oil Pressure xxx.x PSI	
		Economizer Pressure xxx.x PSI	
		CALIBRATION OFFSET	
		CIRCUIT B PRESSURE	
		Discharge Pressure xxx.x PSI	
		Suction Pressure xxx.x PSI	
		B1 Oil Pressure xxx.x PSI	
		B2 Oil Pressure xxx.x PSI	
		Economizer Pressure xxx.x PSI	

See Legend on page 36.

Table 22 — Service Function and Subfunction Directory (cont)

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
7 Transducer Calibration (cont)		Calibrate All at 0 PSIG No	
		Last Calibration Date mmm-dd-yy	
8 Manual Control Table		Manual Control Enable Dsable	LOR switch should be in OFF position
		Password Protected Enter:	Will be displayed if not entered earlier in HSIO use
		Manual Control Enable Dsable	Manual control must be disabled to resume normal capacity control
		Manual Control Enable Enable	Switch LOR switch to Local before proceeding
		Circuit A Compressor 1 Off	
		Circuit A Compressor 1 On	Provided no alarms exist, control will attempt circuit start within 2 minutes. Press to stop circuit.
		Circuit A Compressor 2 Off	to enable, to stop
		Circuit A Loader 1 Off	to enable, to stop
		Circuit A Loader 2 Off	to enable, to stop
		Circuit A Min Load Valve Off	to enable, to stop
		Circuit B Compressor 1 Off	to enable, to stop
		Circuit B Compressor 2 Off	to enable, to stop
		Circuit B Loader 1 Off	to enable, to stop
		Circuit B Loader 2 Off	to enable, to stop
		Circuit B Min Load Valve Off	to enable, to stop
9 Dual Chiller Configuration (Series Water Flow Only)		MST_SLV	
		Master/Slave Select 0/1/2	0 = Disabled 1 = Master 2 = Slave
		Slave Address 0	Default = 0 Adjustable from 0-236
		Lead/Lag Balance 0/1	0 = Disabled 1 = Enabled
		Lead/Lag Balance Delta xxx hours	Default = 168 Adjustable from 40-400

LEGEND

CCN	— Carrier Control Network
CHW	— Chilled Water
CPM	— Compressor Protection Module
dF	— Degrees Fahrenheit
HSIO	— Standard Keypad
HTW	— Hot Water
LOR	— Local/Off/Remote
MOP	— Maximum Operating Pressure
OAT	— Outside Air Temperature
PID	— Proportional Integral Derivative

Table 23 — Display Current Software Version

FUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
Software Version	1 SRVC	Software CESR_500100 Ver xxx	Carrier Software Part Number, where xxx is the revision number.

Table 24 — Compressor Lead/Lag Configuration

SUB-FUNCTION	KEYPAD ENTRY	DISPLAY
Options Configuration 1	2 SRVC	Cooler Fluid Select 1
	▼	Min. Load Valve Select Dsable
	▼	Loading Sequence Select 1
	▼	Lead/Lag Sequence Select 1
	2 ENTER	PASSWD PROTECTED FUNC Enter password:
	1 1 1 1 ENTER	Lead/Lag Sequence Select 0
	2 ENTER	Lead/Lag Sequence Select 2

NOTE: Configurations may be modified after entering the password. The password is only required to be entered once. After a period of 10 minutes of no HSIO activity, the user is automatically logged out and the control requires that the password be entered on the next use.

Table 25 — Factory and Service Configuration Code Values

UNIT MODEL NUMBER	CONF. CODE 1*	CONF. CODE 2*	CONF. CODE 3*	CONF. CODE 4*	CONF. CODE 5*
30GX080	11460010	13900000	00000170	15400521	12000093
30GX090, 105	11560010	13900000	00000180	15400521	12000093
30GX106	11560010	13900000	00000180	15400521	14000095
30GX115	11660010	13900000	00000190	15400521	14000095
30GX125	11660010	14600000	00000161	15400521	14000095
30GX136	11660010	15600000	00000162	15400521	16000097
30GX150	11560010	18000000	00000095	15400521	16000097
30GX151	11800010	15600000	00000176	15400521	07000088
30GX160	11660010	18000000	00000105	15400521	16000097
30GX161	11800010	16600000	00000177	15400521	07000088
30GX175	11800010	18000000	00000119	15400521	07000088
30GX176	11800010	18000000	00000119	15400521	03000084
30GX205	12663910	18000000	00000145	15400521	07000088
30GX206	12803910	16600000	00000217	15400521	09000090
30GX225	12804610	18000000	00000166	15400521	07000088
30GX226	12804610	18000000	00000166	15400521	09000090
30GX250	12806610	18000000	00000186	15400521	09000090
30GX251	12808010	16600000	00000258	15400521	05000086
30GX265	12808010	18000000	00000200	15400521	05000086
30GX281	12804610	28046000	00000240	15400521	05000086
30GX301	12805610	28056000	00000251	15400521	05000086
30GX325	12806610	28066000	00000262	15400521	05000086
30GX350	12808010	28080000	00000218	15400521	05000086
30HXA076	31390010	13900000	00000183	15200521	02000063
30HXA086	31460010	13900000	00000190	15200521	02000063
30HXA096	31560010	13900000	00000200	15200521	02000063
30HXA106	31660010	13900000	00000210	15200521	02000063
30HXA116	31660010	14600000	00000181	15200521	02000063
30HXA126	31660010	15600000	00000182	15200521	02000063
30HXA136	31800010	15600000	00000196	15200521	02000063
30HXA146	31800010	16600000	00000197	15200521	02000063
30HXA161	31800010	15600000	00000196	15200521	02000063
30HXA171	31660010	18000000	00000125	15200521	02000063
30HXA186	31800010	18000000	00000139	15200521	02000063
30HXA206	32663910	18000000	00000165	15200521	02000063
30HXA246	32805610	18000000	00000196	15200521	02000063
30HXA261	32806610	18000000	00000206	15200521	02000063
30HXA271	32808010	18000000	00000220	15200521	02000063
30HXC076	21390010	13900000	00000173	12200521	00000058
30HXC086	21460010	13900000	00000180	12200521	00000058
30HXC096	21560010	13900000	00000190	12200521	00000058
30HXC106	21660010	13900000	00000200	12200521	00000058
30HXC116	21660010	14600000	00000171	12200521	00000058
30HXC126	21660010	15600000	00000172	12200521	00000058
30HXC136	21800010	15600000	00000186	12200521	00000058
30HXC146	21800010	16600000	00000187	12200521	00000058
30HXC161	21800010	15600000	00000186	12200521	00000058
30HXC171	21660010	18000000	00000115	12200521	00000058
30HXC186	21800010	18000000	00000129	12200521	00000058
30HXC206	22663910	18000000	00000155	12200521	00000058
30HXC246	22805610	18000000	00000186	12200521	00000058
30HXC261	22806610	18000000	00000196	12200521	00000058
30HXC271	22808010	18000000	00000210	12200521	00000058

*Unit Type will be listed as air cooled, water cooled, or remote split system. Unit type is first digit in Configuration Code 1 and is 1 for 30GX units, 2 for 30HXC units, and 3 for 30HXA cooling only chillers. For other options, see Table 22 under the Service subfunction. A label listing configuration codes is located on the control box door or panel.

Table 26 — Entering Configuration Codes

KEYPAD ENTRY	DISPLAY RESPONSE
5 SRVC	FACTORY CODES
▼	Configuration Code 1 00000000
2 1 6 6 0 0 1 0 ENTER	Configuration Code 1 21660010
▼	Configuration Code 2 00000000
1 3 9 0 0 0 0 0 ENTER	Configuration Code 2 13900000
▼	Configuration Code 3 00000000
0 0 0 0 0 2 0 0 ENTER	Configuration Code 3 00000200
▼	SERVICE CODES
▼	Configuration Code 4 00000000
1 2 2 0 0 5 2 1 ENTER	Configuration Code 4 12200521
▼	Configuration Code 5 00000000
0 0 0 0 0 0 5 8 ENTER	Configuration Code 5 00000058

SCHEDULE FUNCTION — This function provides a means to automatically switch the chiller from an occupied mode to an unoccupied mode. Refer to Table 27 for a complete description of the function.

The schedules consist of 8 user-configurable occupied time periods. The control supports time schedules for local control, remote control and ice building. These time periods can be flagged to be in effect or not in effect on each day of the week. The day begins at 00.00 and ends at 24.00. The machine is in unoccupied mode unless a scheduled time period is in effect. If an occupied period is to extend past midnight, it must be programmed in the following manner: occupied period must end at 24:00 hours (midnight); a new occupied period must be programmed to begin at 00:00 hours.

NOTE: This is true only if the occupied period starts at 00:00 (midnight). If the occupied period starts at a time other than midnight, then the occupied period must end at 24:00 hours (midnight) and new occupied period must be programmed to start at 00:00 in order for the chiller to stay in the occupied mode past midnight. Each time schedule can be overridden to

keep the chiller in an Occupied mode for 1, 2, 3 or 4 hours on a one-time basis.

Dual Set Point Control — This feature can be enabled to allow the use of a second or unoccupied cooling set point. The function can be either switch controlled or clock controlled. To enable switch control, set the Cooling Setpoint Select under **3** **SERV** to 1. See page 74 or 75 of Field Wiring section, depending on unit type, for switch input wiring to the PSIO-2 module. Configure Cool Setpoint 2 under **1** **SET** to the desired value. The unit will then control leaving water temperature to Cool Setpoint 2 when the switch input is closed. To enable clock control, set the Cooling Setpoint Select under **3** **SERV** to 2. Set Cool Setpoint 2 to the desired unoccupied value. Using **2** **SCHD**, configure local operating schedules for the desired occupied and unoccupied time periods. The unit will then control leaving water temperature to Cool Setpoint 2 during unoccupied time periods.

Table 27 — Schedule Function and Subfunction Directory

SUBFUNCTION	KEYPAD ENTRY	DISPLAY	COMMENT
1 Ice Build Schedule*	1 SCHD	SCHEDULES: OCCPC01S Timed Override: 00	Extended Occupied Time
	2 ENTER	SCHEDULES: OCCPC01S Timed Override: 02	Two hour override entered
	▼	MTWTFSSH OCC UNOCC 01- 00000000 00:00 00:00	Displays current stored schedule (First two numbers are schedule, 01-08)
	1 1 1 1 1 0 0 0 ENTER	MTWTFSSH OCC UNOCC 01- 11111000 00:00 00:00	Monday-Friday now occupied
	2 1 . 0 0 ENTER	MTWTFSSH OCC UNOCC 01-11111000 21:00 00:00	Occupied time now set
	0 6 . 3 0 ENTER	MTWTFSSH OCC UNOCC 01-11111000 21:00 06:30	Unoccupied time now set Ice Build schedule completed
	▼	MTWTFSSH OCC UNOCC 02- 00000000 00:00 00:00	Can enter up to 7 additional ice build schedules
2 Local Schedule†	2 SCHD	SCHEDULES: OCCPC02S Timed Override: 00	Extended Occupied Time
	▼	MTWTFSSH OCC UNOCC 01- 00000000 00:00 00:00	Displays current stored schedule (First two numbers are schedule, 01-08)
	1 1 1 1 1 0 0 0 ENTER	MTWTFSSH OCC UNOCC 01- 11111000 00:00 00:00	Monday-Friday now occupied
	0 6 . 3 0 ENTER	MTWTFSSH OCC UNOCC 01-11111000 06:30 00:00	Occupied time now set
	2 1 . 0 0 ENTER	MTWTFSSH OCC UNOCC 01-11111000 06:30 21:00	Unoccupied time now set Local schedule completed
	▼	MTWTFSSH OCC UNOCC 02- 00000000 00:00 00:00	Can enter up to 7 additional local schedules
3 Remote Schedule (Currently Not Used)	3 SCHD	SCHEDULES: OCCPC65S Timed Override: 00	Extended Occupied Time
	▼	MTWTFSSH OCC UNOCC 01- 00000000 00:00 00:00	Displays current stored schedule (First two numbers are schedule, 01-08)
	1 1 1 1 1 0 0 0 ENTER	MTWTFSSH OCC UNOCC 01- 11111000 00:00 00:00	Monday-Friday now occupied
	0 6 . 3 0 ENTER	MTWTFSSH OCC UNOCC 01-11111000 06:30 00:00	Occupied time now set
	2 1 . 0 0 ENTER	MTWTFSSH OCC UNOCC 01-11111000 06:30 21:00	Unoccupied time now set Remote schedule completed
	▼	MTWTFSSH OCC UNOCC 02- 00000000 00:00 00:00	Can enter up to 7 additional remote schedules
4 Holiday Configuration**	4 SCHD	HOLIDAYS: HOLDY_01 Starts on 00/00 00 days	Can configure holiday start day and duration
	1 2 . 2 3 ENTER	HOLIDAYS: HOLDY_01 Starts on 12/23 00 days	Start of holiday set
	1 0 ENTER	HOLIDAYS: HOLDY_01 Starts on 12/23 10 days	Holiday duration set
5-33 Holiday Configuration	5 through 3 3 SCHD	HOLIDAYS: HOLDY_02 Starts on 00/00 00 days	Allows configuration of 29 additional holiday periods

*Ice configuration select must be set to 1 for clock control. The ice configuration can be accessed by pressing **3** **SRVC** and scrolling down.

†Clock control select must be set to 1 for clock control. The clock control can be accessed by pressing **3** **SRVC** and scrolling down.

**The BROADCAST function (BRODEFS table) must be activated (change to "YES" and download) when using the Remote Enhanced Display controller, Building Supervisor or ComfortWorks® software for the control to recognize holidays.

Temperature Reset — The control system is capable of providing leaving fluid temperature reset based on return fluid temperature. Because the temperature difference between leaving and return temperature is a measure of the building load, return fluid temperature reset is essentially an average building load reset method.

Under normal operation, the chiller maintains a constant leaving fluid temperature approximately equal to the chilled fluid set point. As building load drops from 100% down to 0%, entering cooler fluid temperature drops in proportion to load. Thus, the temperature drop across the cooler drops from a typical 10° F (5.5° C) at full load to a theoretical 0° F (0° C) at no load. See Fig. 8.

At partial load, leaving chilled fluid temperature may be lower than required. If this is allowed to increase (reset), the efficiency of the chiller increases. Amount of reset can be defined as a function of cooler temperature drop. This is a simple linear function that requires 3 pieces of input data for the set function that will vary depending on measurement method used. See the following sections and Table 28.

NOTE: Reset set points are not accessible unless the reset function is enabled first. The Control Point will be recalculated taking into account the set point plus the amount of reset. This is done as a field configuration. Select one of the 3 choices for type of reset: Return Fluid Reset, External Temperature Reset, or 4 to 20 mA Signal Reset. See Table 28.

If dual set point control is enabled, the amount of reset is applied to whichever set point is in effect at the time.

Tables 29-31 demonstrate how to activate reset.

EXTERNAL TEMPERATURE RESET — In this example, the unit set point is reset from full load at 90 F (32 C) to a maximum reset value of 10° F (5.5° C) at 25 F (–6.7 C) outdoor ambient. This means that if the chilled fluid set point is 44 F (6.7 C), there is no reset if the temperature is 90 F (32 C). At a temperature of 25 F (–6.7 C), the chilled fluid set point would be reset to 54 F (12.2 C). See Fig. 8 and Table 29. A field-supplied outdoor air thermistor must be connected to PSIO-2 as shown on page 74 or 75 of Field Wiring.

To activate this function for space temperature reset leave both the External Reset Sensor Select and the OAT Sensor Select at 0, and change the Select/Enable Reset Type to 2, following the procedure in Table 29.

EXTERNALLY POWERED RESET (4 to 20 mA) — In this example, the unit set point is reset from full load at 4 mA to a maximum reset value of 10° F (5.5° C) at 20 mA. See Fig. 9 and Table 30.

RETURN FLUID TEMPERATURE RESET — In this example, the unit set point is reset from full load based on the chilled fluid return temperature. The example uses a reset value of 10 degrees at full reset. Full reset is at a 2-degree temperature difference across the cooler and no reset would be at a 10° F difference across the cooler. See Fig. 10 and Table 31.

Demand Limit — Demand Limit is a feature that allows the unit capacity to be limited during periods of peak energy usage. There are 3 types of demand limiting which can be configured. The first type is through 2 switch inputs, which will reduce the maximum capacity to 2 user-configurable percentages. The second type is by a 4 to 20 mA signal input which will reduce the maximum capacity linearly between 100% at a 4 mA input signal (no reduction) down to the user-configurable level at a 20 mA input signal. The third type uses the CCN Loadshed module and has the ability to limit the current operating capacity to maximum and further reduce the capacity if required.

To use Demand Limit, select the type of demand limiting to use. Then configure the Demand Limit set points based on the type selected.

DEMAND LIMIT (Switch Controlled, 30GX only) — In this example, demand limit by switch control will be configured and the switch set points will be set at 75% and 40%. Capacity steps are controlled by 2 relay switch inputs field wired to PSIO-2, terminal 28 for switch 1 and terminal 25 for switch 2. See Table 32.

For Demand Limit by switch control, closing the first stage demand limit contact will put the unit on the first demand limit level. The unit will not exceed the percentage of capacity entered as Demand Switch 1 set point. Closing contacts on the second demand limit switch prevents the unit from exceeding the capacity entered as Demand Switch 2 set point. The demand limit stage that is set to the lowest demand takes priority if both demand limit inputs are closed. If the demand limit percentage does not match unit staging, the unit will limit capacity to the closest capacity stage.

To Disable Demand Limit: Enter as shown in Table 32. Scroll down to Demand Limit Select and press to select no Demand Limit control.

Table 28 — Temperature Reset Set Point Limits

INPUT DATA DESCRIPTION	MEASUREMENT METHOD					
	Type 1 — 4-20 mA (With 500-Ohm resistor)		Type 2 — OAT/Occupied Space (External Sensor)		Type 3 — Return Fluid	
	Variable	Limits	Variable	Limits	Variable	Limits
Maximum Reset Amount — Allowable range for maximum amount when LWT set point is reset.	Degrees Reset at 20 mA	(–30 to 30 F) –34 to –1 C	Degrees Reset	(–30 to 30 F) –34 to –1 C	Degrees Reset	(–30 to 30 F) –34 to –1 C
Maximum Reset Amount — Temperature at which maximum reset occurs.	—	—	Remote temp = Full reset	(20 to 125 F) –7 to 52 C	CHW Delta T = Full Reset	(0 to 15 degrees F) 0 to 8° C cooler temperature rise
Minimum Reset Reference — Temperature at which no reset occurs.	—	—	Remote temp = No reset	(20 to 125 F) –7 to 52 C	CHW Delta T = No Reset	(0 to 15 degrees F) 0 to 8° C cooler temperature rise

LEGEND
CHW — Chilled Water
OAT — Outdoor Air Temperature
LWT — Leaving Fluid Temperature

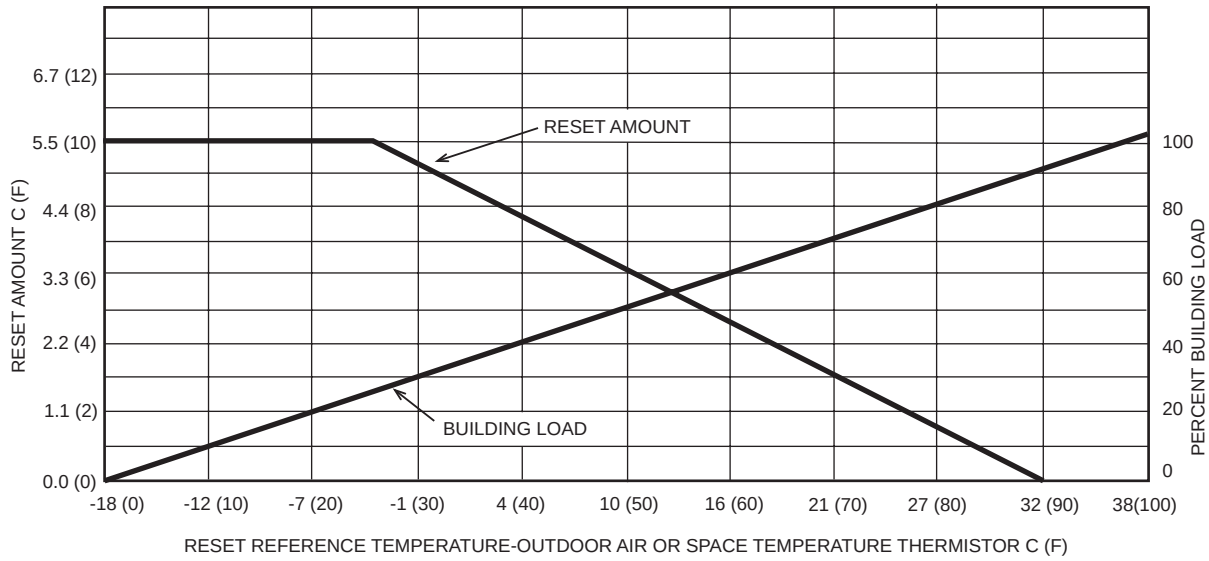


Fig. 8 — Cooling External Temperature Reset

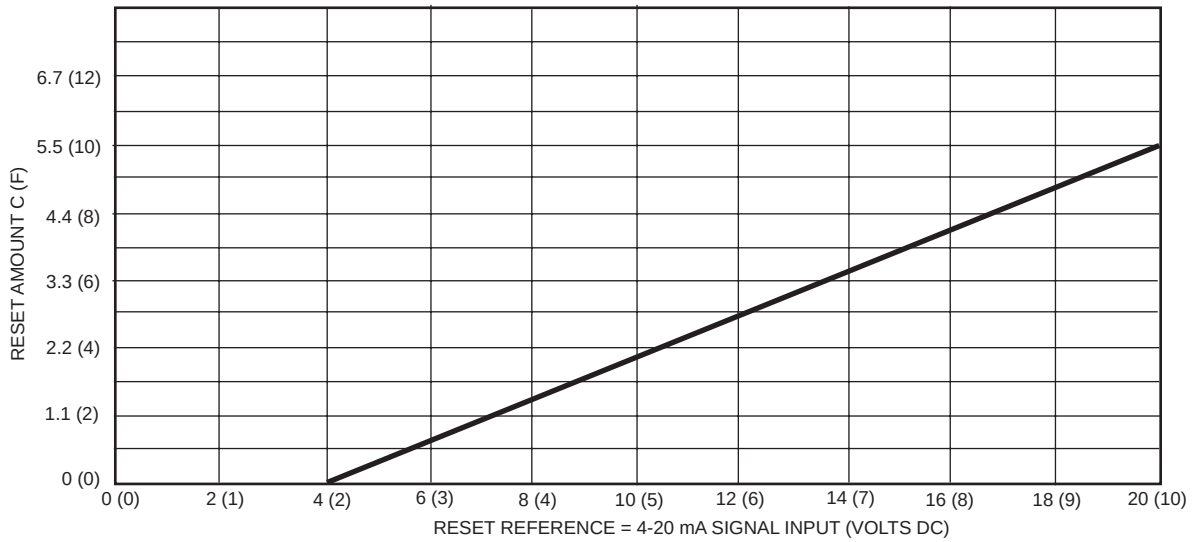


Fig. 9 — 4 to 20 mA Cooling Temperature Reset

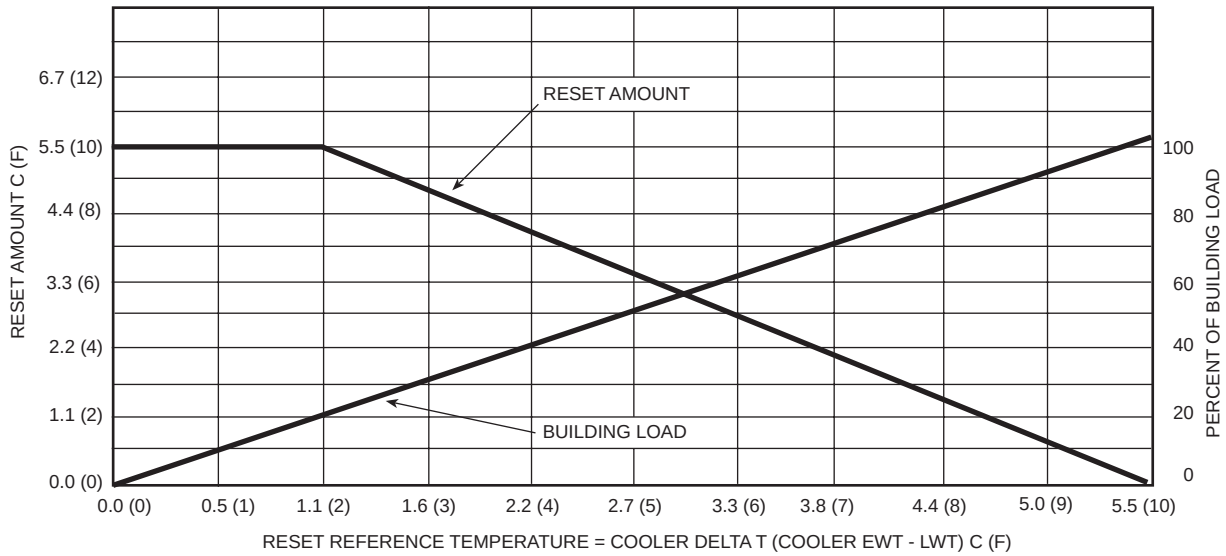


Fig. 10 — Cooling Return Water Reset

Table 29 — Setting External Temperature Reset

KEYPAD ENTRY	DISPLAY RESPONSE	COMMENT
2 SRVC	Cooler Fluid Select 1	
▼	Min. Load Valve Select Disable	
▼	Loading Sequence Select 1	
▼	Lead/Lag Sequence Select 1	
▼	Head Press. Control Type 0	
▼	Motormaster Select 0	
▼	Water Valve Type 0	
▼	Ext. Reset Sensor Select 0	
1 ENTER	Ext. Reset Sensor Select 1	Outdoor Ambient sensor selected for reset
3 SRVC	Cooling Setpoint Select 0	
▼	Heating Setpoint Select 0	
▼	Ramp Load Select 0	
▼	Clock Control Select 1	
▼	Ice Configuration Select 0	
▼	OAT Sensor Select 0	
1 ENTER	OAT Sensor Select 1	OAT sensor enabled
4 SRVC	COOLING RESET TYPE 1	
▼	Degrees Reset at 20 mA 0.0 dF	
▼	COOLING RESET TYPE 2	
▼	Remote temp = Full Reset 20.0 dF	
2 5 ENTER	Remote temp = Full Reset 25.0 dF	
▼	Remote temp = No Reset 125.0 dF	
9 0 ENTER	Remote temp = No Reset 90.0 dF	
▼	Degrees Reset 0.0 dF	
1 0 ENTER	Degrees Reset 10.0 dF	
▼	COOLING RESET	Scroll down to this point
▼	Select/Enable Reset Type 0	
2 ENTER	Select/Enable Reset Type 2	External reset selected

Table 30 — Setting External Powered Reset

KEYPAD ENTRY	DISPLAY RESPONSE	COMMENT
4 SRVC	COOLING RESET TYPE 1	
▼	Degrees Reset at 20 mA 0.0 dF	
1 0 ENTER	Degrees Reset at 20 mA 10.0 dF	
▼	COOLING RESET	Scroll down to this point
▼	Select/Enable Reset Type 0	
1 ENTER	Select/Enable Reset Type 1	4-20 mA reset selected

Table 31 — Setting Return Fluid Temperature Reset

KEYPAD ENTRY	DISPLAY RESPONSE	COMMENT
4 SRVC	COOLING RESET TYPE 1	
▼	COOLING RESET TYPE 3	Scroll down to this point
▼	CHW Delta T = No Reset 15.0 dF	
1 0 ENTER	CHW Delta T = No Reset 10.0 dF	
▼	CHW Delta T = Full Reset 0.0 dF	
2 ENTER	CHW Delta T = Full Reset 2.0 dF	
▼	Degrees Reset 0.0 dF	
1 0 ENTER	Degrees Reset 10.0 dF	
▼	COOLING RESET	
▼	Select/Enable Reset Type 0	
3 ENTER	Select/Enable Reset Type 3	Return Fluid reset selected

EXTERNALLY POWERED DEMAND LIMIT (4 to 20 mA Controlled) — In this example, the 4 to 20 mA Demand Limit will be configured and the 20 mA demand limit percentage will be set to 50%. See Table 33 and Fig. 11.

DEMAND LIMIT (CCN Loadshed Controlled) — In this example, the CCN Loadshed Demand Limit will be configured. The loadshed group will be set to 1, demand delta will be set to 40% and the maximum loadshed time will be set to 90 minutes. See Table 34.

The Loadshed Group number is established by the CCN system designer. The PIC (product integrated control) will respond to a Redline command from the Loadshed control. When the Redline command is received, the current stage of capacity is set to the maximum stages available. Should the loadshed control send a Loadshed command, the PIC will reduce the current stages by the value entered for Loadshed Demand delta. For the above example the Loadshed Demand delta is 40%. If the chiller is operating at 80% of total capacity when a Redline command is received, the maximum available capacity is set to 80%. When a Loadshed command is received, the chiller capacity will be reduced by 40%. The chiller can now operate at a total capacity of no more than 48% $[80\% - (80\% \times 40\%)]$ until a Cancel Redline or Cancel Loadshed command is received. The control will disable the Redline/Loadshed command if no Cancel command has been received within the configured maximum loadshed time limit.

Table 32 — Setting Switch-Controlled Demand Limit

KEYPAD ENTRY	DISPLAY RESPONSE	COMMENT
4 SRVC	COOLING RESET TYPE 1	
▼	DEMAND LIMIT	Scroll down to this point
▼	Demand Limit at 20 mA 0.0%	
▼	Demand Limit Select 0	
1 ENTER	Demand Limit Select 1	Two step switch configured
1 SET	COOLING	
▼	DEMAND LIMIT	Scroll down to this point
▼	Demand Switch 1 Setpoint 80.0%	
7 5 ENTER	Demand Switch 1 Setpoint 75.0%	
▼	Demand Switch 2 Setpoint 50.0%	
4 0 ENTER	Demand Switch 2 Setpoint 40.0%	Configuration complete

Table 33 — Setting Demand Limit (4 to 20 mA Controlled; 2 to 10 vdc With 500-Ohm Resistor)

KEYPAD ENTRY	DISPLAY RESPONSE	COMMENT
4 SRVC	COOLING RESET TYPE 1	
▼	DEMAND LIMIT	Scroll down to this point
▼	Demand Limit at 20 mA 0.0%	
5 0 ENTER	Demand Limit at 20 mA 50.0%	
▼	Demand Limit Select 0	
2 ENTER	Demand Limit Select 2	4-20 mA control configured

Table 34 — Setting Demand Limit (CCN Loadshed Controlled)

KEYPAD ENTRY	DISPLAY RESPONSE	COMMENT
4 SRVC	COOLING RESET TYPE 1	
▼	DEMAND LIMIT	Scroll down to this point
▼	Demand Limit at 20 mA 0.0%	
▼	Demand Limit Select 0	
3 ENTER	Demand Limit Select 3	CCN Loadshed control configured
▼	Loadshed Group Number 0	
1 ENTER	Loadshed Group Number 1	
▼	Loadshed Demand Delta 0	
4 0 ENTER	Loadshed Demand Delta 40%	
▼	Maximum Loadshed Time 60 min	
9 0 ENTER	Maximum Loadshed Time 90 min	Configuration complete

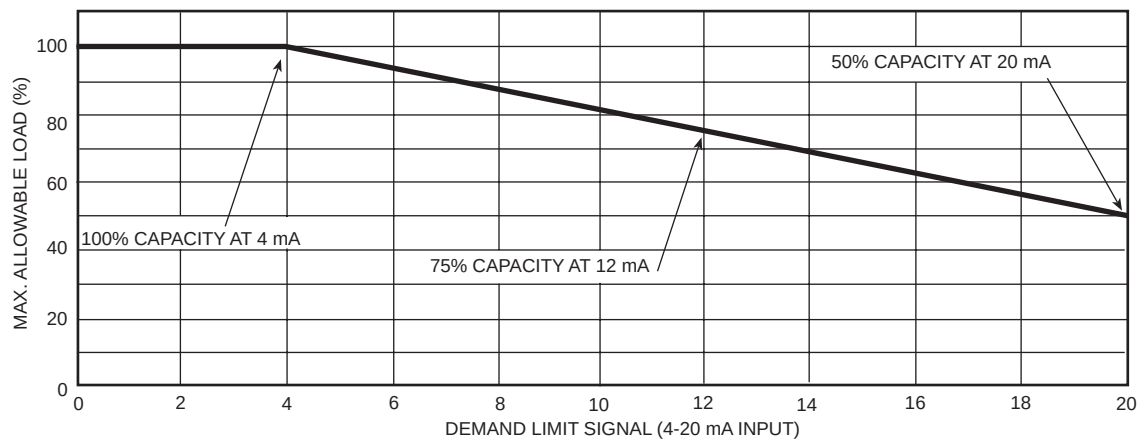


Fig. 11 — 4 to 20 mA Demand Limiting

TROUBLESHOOTING

The 30GX,HX screw chiller control has many features to aid in troubleshooting. By using the keypad and display module and the Status function, operating conditions of the chiller are displayed while the unit is running. The Test function allows for operational checkout of compressor loaders, fans, EXVs, solenoids, and other components while the chiller is stopped. The Service function displays how configurable items are configured and provides a manual control mode where the compressors can be started and loaded. If an operating fault is detected, an alarm is generated and an alarm code is displayed under the subfunction **1** **STAT** along with an explanation of the fault. Up to 10 current alarm codes are stored under this subfunction. For checking specific items, see Table 14.

Checking Display Codes — To determine how the machine has been programmed to operate, check the diagnostic information displayed in the Status function and the configuration information displayed in the Service function.

Unit Shutoff — To shut the unit off, move the LOCAL/OFF/REMOTE switch to OFF position. All compressors and solenoids stop immediately.

Complete Unit Stoppage — Complete unit stoppage can be caused by any of the following conditions:

- cooling load satisfied
- remote on/off contacts open
- programmed schedule
- emergency stop command from CCN
- general power failure
- blown fuse in control power feed disconnect
- open control circuit fuse(s)
- LOCAL/OFF/REMOTE switch moved to OFF position
- freeze protection trip
- low flow protection trip
- open contacts in chilled water flow switch (optional)
- Open contacts in any auxiliary interlock. Terminals that are jumpered from factory are in series with control switch. Opening the circuit between these terminals places unit in Stop mode, similar to moving the control switch to OFF position. Unit cannot start if these contacts are open. If they open while unit is running, the unit stops
- cooler entering or leaving fluid thermistor failure
- low/high transducer supply voltage
- loss of communications between processor module and other control modules
- low refrigerant pressure
- off-to-on delay is in effect

⚠ CAUTION

If a stoppage occurs more than once as a result of any of the above safety devices, determine and correct the cause before attempting another restart.

Single Circuit Stoppage — Single circuit stoppage can be caused by the following:

- low oil pressure
- open contacts in high pressure switch
- low refrigerant pressure
- thermistor failure
- transducer failure
- alarm condition from CPM module

Stoppage of one circuit by a safety device action does not affect other circuit. When a safety device trips, the circuit is shut down immediately and EXV closes.

⚠ CAUTION

If a stoppage occurs more than once as a result of any of the preceding safety devices, determine and correct the cause before attempting another restart.

Restart Procedure — After the cause for stoppage has been corrected, restart is either automatic or manual, depending on the fault. Manual reset requires that the alarm(s) be reset via the HSIO. Press **1** **STAT** and then **1** **ENTER** to clear manual reset alarms. If the Alarm Reset Select feature is selected (**3** **SRVC**), a manual reset alarm can also be reset by switching the LOR switch from LOCAL/REMOTE to OFF and back to LOCAL/REMOTE again. If an alarm was from the CPM module, depress the reset button located on the control/fuse panel for 5 seconds before clearing the alarm through the HSIO. Some typical fault conditions are described in Table 35. For a complete list of fault conditions, codes, and reset type, see Table 36.

POWER FAILURE EXTERNAL TO THE UNIT — Unit restarts automatically when power is restored.

Table 35 — Typical Stoppage Faults and Reset Types

STOPPAGE FAULT	RESET TYPE
Loss of Condenser Flow (30HXC)	Manual reset
Cooler Freeze Protection (Chilled Fluid, Low Temperature)	Auto reset first time, manual if repeated in same day
Cooler Fluid Pump Interlock	Automatic reset (Manual for closed contacts when pump is off)
Control Circuit Fuse Blown	Unit restarts automatically when power is restored
High-Pressure Switch Open	Manual reset
Low Sat. Suction Temperature	Manual reset
Low Oil Pressure	Manual reset
Loss of Communications with WSM or FSM Controller	Automatic reset

LEGEND

FSM — Flotronic™ System Manager
WSM — Water System Manager

Alarms and Alerts — These are warnings of abnormal or fault conditions, and may cause either one circuit (alert) or the whole unit (alarm) to shut down. They are assigned code numbers as described in Table 36. The alarm descriptions are displayed on the HSIO when the **1** **STAT** subfunction is entered. When a communication loss occurs to a hardware point, an alert or alarm may be generated. Refer to Table 37. The PSIO also recognizes illegal configurations. Illegal configurations are shown in Table 38.

When an alarm or alert is activated, the relay K3 (for 30GX units) or K6 (for 30HX units) will close. See Field Wiring section on page 70 for wiring details.

Table 36 contains a detailed description of each alarm and alert code error and possible cause.

ALARM/ALERT RESET — Automatic alarms will reset without operator intervention if the condition corrects itself. One or more of the following methods must be used to reset manual alarms:

To reset PSIO alarms, first find and correct the cause of the alarm. Then from the HSIO press **1** **STAT** and **1** **ENTER** to clear the alarm. If the Alarm Reset Select in **3** **SRVC** is set to “1,” the default value, the LOCAL-OFF-REMOTE switch can be switched from “Local” or “REMOTE” to “OFF” for 5 seconds and back to its original position to reset the alarm.

Compressor Protection Module (CPM) alarms, 1.xx, 2.xx, 5.xx, or 6.xx require additional steps to reset these alarms. To clear these alarms, first find and correct the cause of the alarm. Then press and hold the Reset Button located on the CPM board for 5 seconds. This action will reset only the alarmed circuit, and clear the CPM. Next, reset the alarm in the PSIO as described above. For CPM alarms, 1.95, 2.95, 5.95 and 6.95, first correct the configuration header problem, turn LOCAL-OFF-REMOTE switch to the “OFF” position, then press and

hold the reset button on the unit’s control/fuse panel for 5 seconds. This action removes power to the CPM, and should not be used while another compressor is in operation. Next, reset the alarm in the PSIO as described above.

Compressor Alarm/Alert Circuit — Each compressor is controlled by a CPM processor, which controls the compressor operation. Power is supplied to the CPM logic circuit.

Table 36 — Alarm and Alert Codes

ALARM/ALERT CODE	ALARM OR ALERT	DESCRIPTION	WHY WAS THIS ALARM GENERATED?	ACTION TAKEN BY CONTROL	RESET METHOD	PROBABLE CAUSE
0	—	No Alarms or Alerts Exist	—	—	—	—
1.xx	See CPM subcodes below	Compressor A1 Failure	See CPM subcodes below	See CPM subcodes below	Manual	See CPM subcodes below
2.xx	See CPM subcodes below	Compressor A2 Failure	See CPM subcodes below	See CPM subcodes below	Manual	See CPM subcodes below
5.xx	See CPM subcodes below	Compressor B1 Failure	See CPM subcodes below	See CPM subcodes below	Manual	See CPM subcodes below
6.xx	See CPM subcodes below	Compressor A2 Failure	See CPM subcodes below	See CPM subcodes below	Manual	See CPM subcodes below
CPM SUBCODES (xx)						
x.0	—	No Error	—	—	—	—
x.1	Alarm	High Pressure Switch Trip	HPS input to CPM module open	Comp. shut down	Manual/Button	Loss of condenser air/ water flow. Operation beyond chiller capability. Liquid valve not open.
x.2	Alarm	No Motor Current	CPM reads less than 10% of MTA on all legs for >3 seconds	Comp. shut down	Manual/Button	Power supply disconnected, blown fuse(s), wiring error, contactor not energized, faulty current toroid, check toroid wiring
x.25*	Alarm	Current Imbalance >10% (Alarm)	CPM measures current imbalance between phases greater than 10% for 25 minutes	Circuit shut down	Manual/Button	Loose terminals on power wires. Poor power supply. Displayed only if current unbalance alarm feature is enabled in  
x.27*	Alert	Current Imbalance >10% (Warning)	CPM measures current imbalance between phases greater than 10% for 25 minutes	None	—	Loose terminals on power wires. Poor power supply. Displayed only if current unbalance alarm feature is disabled in  
x.3	Alarm	Current Imbalance >25%	CPM measures current imbalance between phases greater than 25% for 25 minutes	Circuit shut down	Manual/Button	Loose terminals on power wires. Poor power supply.
x.35	Alarm	Single Phase Current Loss	CPM measures current imbalance between phases greater than 50% (running current < 50% of MTA) or 30% (running current ≥ 50% of MTA) for 1 second	Circuit shut down	Manual/Button	Blown fuse, wiring error, loose terminals
x.4	Alarm	High Motor Current	CPM detects high current compared to MTA setting	Comp. shut down	Manual/Button	Operation beyond chiller capability, improperly punched configuration header, blown fuse
x.5	Alarm	Ground Fault	CPM detects ground current (4.5 ± 2.0 amps)	Comp. shut down	Manual/Button	Motor winding(s) gone to ground, wiring error, loose plug connector.
x.75	Alarm	Contactor Failure	CPM detects min. 10% of MTA for 10 seconds after shutting off compressor contactor. Oil solenoid is energized.	All remaining compressors shut down. All loaders deenergized. Min. load valve of affected circuit energized (if equipped)	Manual/Button	Faulty contactor, contactor welded, wiring error.
x.8	Alarm	Current Phase Reversal	CPM detects phase reversal from toroid reading or from incoming power supply	Circuit shut down	Manual/Button	Terminal block power supply leads not in correct phase. Toroid wire harness crossed. Check compressor contactor.
x.85	Alarm	Motor Over Temperature	CPM detects high motor temperature	Comp. shut down	Manual/Button	Motor cooling (all) or Economizer (2 comp. circuits) solenoid failure, low refrigerant charge.
x.9	Alarm	Open Thermistor	CPM detects open circuit in motor temp thermistor	Comp. shut down	Manual/Button	Wiring error or faulty thermistor†
x.95	Alarm	Config. Header Fault	CPM finds error with MTA value punched out in header	Comp. shut down	Manual/Button	Header pins on CPM board either all or none punched out, header not fully sealed in CPM board.
x.10	Alarm	Shorted Thermistor	CPM detects short circuit in motor temp thermistor	Comp. shut down	Manual/Button	Wiring error or faulty thermistor†

Table 36 — Alarm and Alert Codes (cont)

ALARM/ALERT CODE	ALARM OR ALERT	DESCRIPTION	WHY WAS THIS ALARM GENERATED?	ACTION TAKEN BY CONTROL	RESET METHOD	PROBABLE CAUSE
7	Alert	Cir. A Discharge Gas Thermistor Failure	Thermistor outside range of -40 to 245 F (-40 to 118 C) or DGT > 210 F (98.9 C)	Circuit A shut down	Manual	Thermistor failure, motor cooling solenoid failure or wiring error.
8	Alert	Cir. B Discharge Gas Thermistor Failure	Thermistor outside range of -40 to 245 F (-40 to 118 C) or DGT > 210 F (98.9 C)	Circuit B shut down	Manual	Thermistor failure, motor cooling solenoid failure or wiring error.
9	Alarm	Cooler Leaving Fluid Thermistor Failure	Thermistor outside range of -40 to 245 F (-40 to 118 C)	Chiller shut down	Automatic	Thermistor failure, damaged cable/wire or wiring error.
10	Alarm	Cooler Entering Fluid Thermistor Failure	Thermistor outside range of -40 to 245 F (-40 to 118 C)	Uses 0.1° F/% Total Capacity as rise/ton	Automatic	Thermistor failure, damaged cable/wire or wiring error.
11	Alert	Condenser Leaving Fluid Thermistor Failure	Thermistor outside range of -40 to 245 F (-40 to 118 C)	None. Chiller continues to run.	Automatic	Thermistor failure, damaged cable/wire or wiring error.
12	Alert	Condenser Entering Fluid Thermistor Failure	Thermistor outside range of -40 to 245 F (-40 to 118 C)	None. Chiller continues to run.	Automatic	Thermistor failure, damaged cable/wire or wiring error.
15	Alert	Compressor A1 High Motor Temperature	Thermistor outside range of -39.9 to 245 F (-39.9 to 118 C) for 5 consecutive readings	Compressor A1 shut down	Manual	Thermistor failure, motor cooling (all), or Economizer (2 comp. circuits) solenoid failure.
16	Alert	Compressor A2 High Motor Temperature	Thermistor outside range of -39.9 to 245 F (-39.9 to 118 C) for 5 consecutive readings	Compressor A2 shut down	Manual	Thermistor failure, motor cooling (all), or Economizer (2 comp. circuits) solenoid failure.
17	Alert	Compressor B1 High Motor Temperature	Thermistor outside range of -39.9 to 245 F (-39.9 to 118 C) for 5 consecutive readings	Compressor B1 shut down	Manual	Thermistor failure, motor cooling (all), or Economizer (2 comp. circuits) solenoid failure.
18	Alert	Compressor B2 High Motor Temperature	Thermistor outside range of -39.9 to 245 F (-39.9 to 118 C) for 5 consecutive readings	Compressor B2 shut down	Manual	Thermistor failure, motor cooling (all), or Economizer (2 comp. circuits) solenoid failure.
21	Alert	External Reset Temperature Thermistor Failure	Thermistor outside range of -40 to 245 F (-40 to 118 C)	Reset disabled. Runs under normal control/set points.	Automatic	Thermistor failure or wiring error.
22	Alert	Circuit A Discharge Pressure Transducer Failure	Calibration offset more than 6 PSIG (41 kPa) or Voltage ratio (volts read/ref. voltage) more than 99.9% or less than 0.5%	Circuit A shut down	Automatic	Transducer failure, power supply failure, or wiring damage/error.
23	Alert	Circuit B Discharge Pressure Transducer Failure	Calibration offset more than 6 PSIG (41 kPa) or Voltage ratio (volts read/ref. voltage) more than 99.9% or less than 0.5%	Circuit B shut down	Automatic	Transducer failure, power supply failure, or wiring damage/error.
24	Alert	Circuit A Suction Pressure Transducer Failure	Calibration offset more than 6 PSIG (41 kPa) or Voltage ratio (volts read/ref. voltage) more than 99.9% or less than 0.5%	Circuit A shut down	Automatic	Transducer failure, power supply failure, or wiring damage/error.
25	Alert	Circuit B Suction Pressure Transducer Failure	Calibration offset more than 6 PSIG (41 kPa) or Voltage ratio (volts read/ref. voltage) more than 99.9% or less than 0.5%	Circuit B shut down	Automatic	Transducer failure, power supply failure, or wiring damage/error.
26	Alert	Comp A1 Oil Pressure Transducer Failure	Calibration offset more than 6 PSIG (41 kPa) or Voltage ratio (volts read/ref. voltage) more than 99.9% or less than 0.5%	Comp A1 shut down	Automatic	Transducer failure, power supply failure, or wiring damage/error.
27	Alert	Comp A2 Oil Pressure Transducer Failure	Calibration offset more than 6 PSIG (41 kPa) or Voltage ratio (volts read/ref. voltage) more than 99.9% or less than 0.5%	Comp A2 shut down	Automatic	Transducer failure, power supply failure, or wiring damage/error.
28	Alert	Comp B1 Oil Pressure Transducer Failure	Calibration offset more than 6 PSIG (41 kPa) or Voltage ratio (volts read/ref. voltage) more than 99.9% or less than 0.5%	Comp B1 shut down	Automatic	Transducer failure, power supply failure, or wiring damage/error.
29	Alert	Comp B2 Oil Pressure Transducer Failure	Calibration offset more than 6 PSIG (41 kPa) or Voltage ratio (volts read/ref. voltage) more than 99.9% or less than 0.5%	Comp B2 shut down	Automatic	Transducer failure, power supply failure, or wiring damage/error.
30	Alert	Circuit A Economizer Transducer Failure	Calibration offset more than 6 PSIG (41 kPa) or Voltage ratio (volts read/ref. voltage) more than 99.9% or less than 0.5%	Circuit A shut down	Automatic	Transducer failure, power supply failure, or wiring damage/error.

Table 36 — Alarm and Alert Codes (cont)

ALARM/ALERT CODE	ALARM OR ALERT	DESCRIPTION	WHY WAS THIS ALARM GENERATED?	ACTION TAKEN BY CONTROL	RESET METHOD	PROBABLE CAUSE
31	Alert	Circuit B Economizer Transducer Failure	Calibration offset more than 6 PSIG (41 kPa) or Voltage ratio (volts read/ ref. voltage) more than 99.9% or less than 0.5%	Circuit B shut down	Automatic	Transducer failure, power supply failure, or wiring damage/error.
32	Alarm	Transducer Supply Outside 4.5 to 5.5 Volts	Reference voltage measured at PSIO-1, J7-34,35 less than 4.5 V or greater than 5.5 V.	Chiller shut down	Automatic	Power supply failure or wiring error. Low transformer voltage.
34	Alert	4-20 mA Reset Input Out of Range	If configured and input signal to PSIO-2, J7-19,20(HX), J7-22,23(GX) less than 2 mA or greater than 20mA	Reset function disabled. Normal set point used	Automatic	Faulty signal generator, wiring error, 500 ohm resistor missing or not properly installed.
35	Alert	4-20 mA Demand Limit Input Out of Range	If configured and input signal to PSIO-2, J7-22,23(HX), J7-13,14(GX) less than 2 mA or greater than 20mA	Demand limit ignored. Runs under normal control based on 100% demand limit.	Automatic	Faulty signal generator, wiring error, 500 ohm resistor missing or not properly installed.
36	Alarm	Loss of Communication with "Hardware Point"	PSIO-1 has lost communication with one of the points in Table 37.	See Table 37.	Automatic	Failed module, wiring error, failed transformer, loose connection plug, wrong address
37	Alert	Circuit A Low Saturated Suction Temperature	SST reads 6 F (3.3 C) or more below the brine freeze point for 3 minutes. For brines, SST may also be 14 F (7.8 C) or more below the lowest cooling set point.	Circuit A shut down	Manual	Low refrigerant charge, plugged strainer, faulty expansion valve. Low water flow.
38	Alert	Circuit B Low Saturated Suction Temperature	SST reads 6 F (3.3 C) or more below the brine freeze point for 3 minutes. For brines, SST may also be 14 F (7.8 C) or more below the lowest cooling set point.	Circuit B shut down	Manual	Low refrigerant charge, plugged strainer, faulty expansion valve. Low water flow.
40	Alert	Compressor A1 Low Oil Pressure	See Note 1.	Comp A1 shut down	Manual	Low Water Temperature, low refrigerant charge, plugged oil filter, closed oil valve, bad oil solenoid, compressor oil check valve stuck, oil line check valve stuck, plugged oil strainer
41	Alert	Compressor A2 Low Oil Pressure	See Note 1.	Comp A2 shut down	Manual	Low Water Temperature, low refrigerant charge, plugged oil filter, closed oil valve, bad oil solenoid, compressor oil check valve stuck, oil line check valve stuck, plugged oil strainer
42	Alert	Compressor B1 Low Oil Pressure	See Note 1.	Comp B1 shut down	Manual	Low Water Temperature, low refrigerant charge, plugged oil filter, closed oil valve, bad oil solenoid, compressor oil check valve stuck, oil line check valve stuck, plugged oil strainer
43	Alert	Compressor B2 Low Oil Pressure	See Note 1.	Comp B2 shut down	Manual	Low Water Temperature, low refrigerant charge, plugged oil filter, closed oil valve, bad oil solenoid, compressor oil check valve stuck, oil line check valve stuck, plugged oil strainer
44	Alarm	Circuit A Condenser Freeze Protection (alarm ignored for brine chillers)	For W/C chillers only, if SCT < 34 F (1.1 C)	Chiller shut down. Turn Cond. pump On if Chiller is Off	Automatic	Failed/bad discharge pressure transducer, refrigerant leak, configured for water-cooled condenser
45	Alarm	Circuit B Condenser Freeze Protection (alarm ignored for brine chillers)	For W/C chillers only, if SCT < 34 F (1.1 C)	Chiller shut down. Turn Cond. pump On if Chiller is Off	Automatic	Failed/bad discharge pressure transducer, refrigerant leak, configured for water-cooled condenser
46	Alarm	Cooler Freeze Protection	Cooler EWT or LWT less than freeze point. Freeze point is 34 F (1.1 C) for water, cooling set point minus 8 F (4.4 C) for brines.	Chiller shut down. Leave Cooler pump on. Turn Cooler pump On if Chiller is Off.	Automatic**	Faulty thermistor, low water flow

Table 36 — Alarm and Alert Codes (cont)

ALARM/ALERT CODE	ALARM OR ALERT	DESCRIPTION	WHY WAS THIS ALARM GENERATED?	ACTION TAKEN BY CONTROL	RESET METHOD	PROBABLE CAUSE
47	Alert	Circuit A High Saturated Suction Temperature	After first 90 seconds, SST > 55 F (12.8 C) and EXV < 1% for 5 minutes	Circuit A shut down	Manual	Faulty expansion valve, liquid level sensor or transducer.
48	Alert	Circuit B High Saturated Suction Temperature	After first 90 seconds, SST > 55 F (12.8 C) and EXV < 1% for 5 minutes	Circuit B shut down	Manual	Faulty expansion valve, liquid level sensor or transducer.
49	Alarm	Loss of Condenser Flow	Flow switch not closed within 1 minute after pump is started or if flow switch opens during normal operation for > 10 seconds	Chiller shut down	Manual	Low condenser water flow, failed condenser pump
50	Alarm	Illegal Configuration x	Illegal Configuration has been entered. Correction needed.	Chiller cannot start. See Table 38.	Manual	Configuration error.
51	Alarm	Initial Configuration Required	No configuration has been entered.	Chiller cannot start	Manual	Configuration omitted.
52	Alarm	Unit is in Emergency Stop	CCN command received to shut unit down.	Chiller shut down	CCN/Automatic	Network command
53	Alarm	Cooler Pump Interlock Failed at Start-Up	Interlock did not close within 1 minute after transition	Chiller shut down. Pump turned off.	Automatic	Failure of cooler pump, cooler pump interlock, or flow switch
54	Alarm	Cooler Pump Interlock Opened Unexpectedly	Interlock opened for at least 5 seconds during operation	Chiller shut down. Pump turned off.	Automatic	Failure of cooler pump, cooler pump interlock, or flow switch
55	Alarm	Cooler Pump Interlock Closed When Pump OFF	Interlock closed when pump relay is off	Cooler pump remains off. Unit prevented from starting.	Manual	Failure of cooler pump relay or interlock, welded contacts
56	Alert	Loss of Communication with WSM	No communications have been received by PSIO-1 within 5 minutes of transmission.	WSM forces removed. Runs under own control.	Automatic	Failed module, wiring error, failed transformer, loose connection plug, wrong address
57	Alert	Circuit A Liquid Level Sensor Failure	Sensor reads 245 F (118 C) or -40 F (-40 C) with SST > 9 F (-12.8 C)	Runs, but controls EXV based on Disch. Super-heat	Automatic	Thermistor circuit open, faulty liquid level sensor, wiring error
58	Alert	Circuit B Liquid Level Sensor Failure	Sensor reads 245 F (118 C) or -40 F (-40 C) with SST > 9 F (-12.8 C)	Runs, but controls EXV based on Disch. Super-heat	Automatic	Thermistor circuit open, faulty liquid level sensor, wiring error
59	Alarm	Compressor A1 Pre-Start Oil Pressure	Oil Pump did not build sufficient pressure during pre-lube cycle.	Circuit cannot start	Manual	Low oil, oil pump failure, oil solenoid failure, oil transducer failure, check valve failed open, oil shut-off valve closed
60	Alarm	Compressor A2 Pre-Start Oil Pressure	Oil Pump did not build sufficient pressure during pre-lube cycle.	Circuit cannot start	Manual	Low oil, oil pump failure, oil solenoid failure, oil transducer failure, check valve failed open, oil shut-off valve closed
61	Alarm	Compressor B1 Pre-Start Oil Pressure	Oil Pump did not build sufficient pressure during pre-lube cycle.	Circuit cannot start	Manual	Low oil, oil pump failure, oil solenoid failure, oil transducer failure, check valve failed open, oil shut-off valve closed
62	Alarm	Compressor A2 Pre-Start Oil Pressure	Oil Pump did not build sufficient pressure during pre-lube cycle.	Circuit cannot start	Manual	Low oil, oil pump failure, oil solenoid failure, oil transducer failure, check valve failed open, oil shut-off valve closed
63	Alarm	Circuit A&B OFF for Alerts. Unit down	Control has shut down both circuits due to alerts.	None	Automatic	Check individual alarms
64	Alert	Circuit A Loss of Charge	Discharge pressure reading < 10 PSIG for 30 seconds	Circuit A shut down	Manual	Refrigerant leak or transducer failure
65	Alert	Circuit B Loss of Charge	Discharge pressure reading < 10 PSIG for 30 seconds	Circuit B shut down	Manual	
66	Alarm	Loss of Communication with FSM	No communications have been received by PSIO-1 within 5 minutes of last transmission.	FSM forces removed Runs under own control	Automatic	Wiring faulty or module failure
67	Alert	Circuit A High Discharge Pressure	SCT > MCT_SP + 5 F (2.8 C)	Circuit shut down	Automatic**	Faulty transducer/high pressure switch, low/restricted condenser air/water flow††
68	Alert	Circuit B High Discharge Pressure	SCT > MCT_SP + 5 F (2.8 C)	Circuit shut down	Automatic**	
70	Alert	High Leaving Chilled Water Temperature	LCW read > LCW Delta Alarm limit and total capacity is 100% and current LCW > LCW reading 1 minute ago	Alert only: None.	Automatic	Building load greater than unit capacity, low water/brine flow, or compressor fault. Check for other alarms or alerts.

Table 36 — Alarm and Alert Codes (cont)

ALARM/ALERT CODE	ALARM OR ALERT	DESCRIPTION	WHY WAS THIS ALARM GENERATED?	ACTION TAKEN BY CONTROL	RESET METHOD	PROBABLE CAUSE
71	Alert	Circuit A Low Oil Level/Flow	Level switch input open for 4th time in same day.	Circuit A shut down after 4th failure in 24 hours.	Manual	Low oil level, failed switch, wiring error, failed DSIO module
72	Alert	Circuit B Low Oil Level/Flow	Level switch input open for 4th time in same day.	Circuit B shut down after 4th failure in 24 hours.	Manual	Low oil level, failed switch, wiring error, failed DSIO module
73	Alert	Circuit A Low Discharge Superheat	Superheat < 5 F (2.8 C) for 10 minutes	Circuit A shut down	Manual	Faulty thermistor, transducer, or EXV, or Economizer. Motor cooling solenoid stuck open.
74	Alert	Circuit B Low Discharge Superheat	Superheat < 5 F (2.8 C) for 10 minutes	Circuit B shut down	Manual	Faulty thermistor, transducer, or EXV, or Economizer. Motor cooling solenoid stuck open.
75	Alarm	Comp. A1 Max. Oil Delta P, check oil line	(Discharge press - Oil press) > 100 PSI for more than 5 seconds	Comp. A1 shut down	Manual	Plugged oil filter, closed oil valve, bad oil solenoid, compressor oil check valve stuck, oil line check valve stuck, plugged oil strainer
76	Alarm	Comp. A2 Max. Oil Delta P, check oil line	(Discharge press - Oil press) > 100 PSI for more than 5 seconds	Comp. A2 shut down	Manual	Plugged oil filter, closed oil valve, bad oil solenoid, compressor oil check valve stuck, oil line check valve stuck, plugged oil strainer
77	Alarm	Comp. B1 Max. Oil Delta P, check oil line	(Discharge press - Oil press) > 100 PSI for more than 5 seconds	Comp. B1 shut down	Manual	Plugged oil filter, closed oil valve, bad oil solenoid, compressor oil check valve stuck, oil line check valve stuck, plugged oil strainer
78	Alarm	Comp. B2 Max. Oil Delta P, check oil line	(Discharge press - Oil press) > 100 PSI for more than 5 seconds	Comp. B2 shut down	Manual	Plugged oil filter, closed oil valve, bad oil solenoid, compressor oil check valve stuck, oil line check valve stuck, plugged oil strainer
79	Alarm	Comp. A1 Failed Oil Solenoid	Diff. Oil pressure > 2.5 PSI during period after oil pump starts and before oil solenoid opens	Comp. A1 not allowed to start	Manual	Faulty oil solenoid valve
80	Alarm	Comp. A2 Failed Oil Solenoid	Diff. Oil pressure > 2.5 PSI during period after oil pump starts and before oil solenoid opens	Comp. A2 not allowed to start	Manual	Faulty oil solenoid valve
81	Alarm	Comp. B1 Failed Oil Solenoid	Diff. Oil pressure > 2.5 PSI during period after oil pump starts and before oil solenoid opens	Comp. B1 not allowed to start	Manual	Faulty oil solenoid valve
82	Alarm	Comp. B2 Failed Oil Solenoid	Diff. Oil pressure > 2.5 PSI during period after oil pump starts and before oil solenoid opens	Comp. B2 not allowed to start	Manual	Faulty oil solenoid valve

LEGEND

CCN	— Carrier Comfort Network
CPM	— Compression Protection Module
DGT	— Discharge Gas Temperature
EWT	— Entering Water Temperature
EXV	— Electronic Expansion Valve
FSM	— Flotronic™ System Manager
HPS	— High-Pressure Switch
LCW	— Leaving Chilled Water
LWT	— Leaving Water Temperature
MCT_SP	— Maximum Condensing Temperature Set Point
MTA	— Compressor Must Trip Amps
SCT	— Saturated Condensing Temperature
SST	— Saturated Suction Temperature
W/C	— Water-Cooled
WSM	— Water System Manager

*Current imbalance alarm x.25 may be changed to warning x.27 after successful start-up of the chiller.

†Compressors are equipped with 2 motor winding temperature thermistors. Verify first that the problem is not a wiring error before using backup thermistor.

**Reset automatic first time, manual if repeated on the same date.

††Note that the high-pressure switch should trip before this alert is generated. Check HPS operation if this alert is generated.

NOTES:

1. Low Oil Pressure Alert Criteria and Set Points

Where: P_d = Discharge Pressure, P_s = Suction pressure, P_o = Oil pressure and P_e = Economizer pressure

Two oil pressure set points are used. Oil Set point 1 is always 15 psig.

a. If $(P_d - P_s) < 125$, then Oil Set point 2 = $0.235 \times (P_d - P_s) + 0.588$

b. If $(P_d - P_s) \geq 125$ and < 165 , then Oil Set point 2 = $2.0 \times (P_d - P_s) - 220.0$

c. If $(P_d - P_s) \geq 165$, then Oil Set point 2 = $0.6364 \times (P_d - P_s) + 5.0$

The 2 set points are used by the control for the Low Oil Pressure alert trip criteria below:

a. Oil Pressure is ignored during the first 5 seconds after a compressor is started.

b. In period between 5 and 120 seconds after starting, the alert will be generated if $(P_o - P_e) < [(Oil\ Set\ point\ 1)/120] \times (Compressor\ Run\ time\ in\ seconds)$ for 3 consecutive readings

c. After 120 seconds of run time, the alert will be generated if:

1) $(P_o - P_e) < Oil\ Set\ point\ 1$ for 15 seconds OR

2) $(P_o - P_s) < Oil\ Set\ point\ 2$ for 25 seconds

2. $(P_o - P_e)$ is the Oil pressure differential displayed in 3 STAT for Circuit A and in 5 STAT for Circuit B.

Table 37 — Hardware Point Communications (Alarm 36) Loss/Action Taken

HARDWARE POINT	SENSING/CONTROLLING MODULE	CONTROL POINT NAME	ACTION TAKEN UNTIL COMMUNICATION RESTORED
ALARM	PSIO-1	Alarm Relay	No Action
CFLOW_SW	DSIO-EXV	Cooler Flow Switch	Chiller shut down
COND_ENT	PSIO-2	Condenser Entering Water Thermistor	Same as Alert 12
COND_LWT	PSIO-2	Condenser Leaving Water Thermistor	Same as Alert 11
COND_PMP	PSIO-2	Condenser Pump Relay	Chiller shut down
COND_EWT	PSIO-2	Cooler Entering Water Thermistor	Same as Alarm 10
COND_LWT	PSIO-2	Cooler Leaving Water Thermistor	Chiller shut down
COOL_HTR	PSIO-1	Cooler Heater	Turn ON Cooler Pump relay
COOL_PMP	PSIO-1	Cooler Pump Relay	No Action
DFLOW_SW	PSIO-2	Condenser Flow Switch	Chiller shut down
DISTMP_A	PSIO-2	Discharge Gas Temp Circuit A (Oil Temp)	Circuit shut down
DISTMP_B	PSIO-2	Discharge Gas Temp Circuit A (Oil Temp)	Circuit shut down
DISTMP_B	PSIO-2	Discharge Gas Temp Circuit B (Oil Temp)	Circuit shut down
DMD_SW1	PSIO-2	Demand Limit Switch 1	No Action
DMD_SW2	PSIO-2	Demand Limit Switch 2	No Action
DPA	PSIO-1	Discharge Pressure Circuit A	Circuit shut down
DPB	PSIO-1	Discharge Pressure Circuit B	Circuit shut down
DUAL	PSIO-2	Dual Setpoint Switch	Control to Setpoint 1
ECN_PR_A	PSIO-1	Circuit A Economizer Pressure	Circuit shut down
ECN_PR_B	PSIO-1	Circuit B Economizer Pressure	Circuit shut down
EXVA	DSIO-EXV	Expansion Valve, Circuit A	Circuit shut down
EXVB	DSIO-EXV	Expansion Valve, Circuit B	Circuit shut down
FAN_1	CPM 1	Fan Relay 1	No Action
FAN_2	DSIO-HV	Fan Relay 2	No Action
FAN_3	DSIO-HV	Fan Relay 3	No Action
FAN_4	CPM 1	Fan Relay 4	No Action
FAN_5	DSIO-HV	Fan Relay 5	No Action
FAN_6	DSIO-HV	Fan Relay 6	No Action
HC_SW	N/A	Heat/Cool Switch	Chiller shut down
HR_EWT	N/A	Heat Reclaim Entering Water Thermistor	No Action
HR_LWT	N/A	Heat Reclaim Leaving Water Thermistor	No Action
ICE_DONE	PSIO-2	Ice Complete Indicator	Disable function
ICE_VALV	Not Configured	Ice Valve	Disable function
K_A1_FBK	CPM 1	Compressor A1 Feedback	Compressor shut down
K_A1_RLY	CPM 1	Compressor A1 Relay	Compressor shut down
K_A2_FBK	CPM 2	Compressor A2 Feedback	Compressor shut down
K_A2_RLY	CPM 2	Compressor A2 Relay	Compressor shut down
K_B1_FBK	CPM 1	Compressor B1 Feedback	Compressor shut down
K_B1_RLY	CPM 1	Compressor B1 Relay	Compressor shut down
K_B2_FBK	CPM 2	Compressor B2 Feedback	Compressor shut down
K_B2_RLY	CPM 2	Compressor B2 Relay	Compressor shut down
LOADR_A1	PSIO-1	Compressor A1 Loader	No Action
LOADR_A2	PSIO-1	Compressor A2 Loader	No Action
LOADR_B1	PSIO-1	Compressor B1 Loader	No Action
LOADR_B2	PSIO-1	Compressor B2 Loader	No Action
LMT_MA	PSIO-2	Demand Limit 4-20 mA Input	Disable function
LOR_SW	DSIO-EXV	Local/Off/Remote Switch	Chiller shut down
MLV_A	PSIO-2/DSIO-HV	Min. Load Valve Relay Circuit A	Disable function
MLV_B	PSIO-2/DSIO-HV	Min. Load Valve Relay Circuit B	Disable function
MOTOR_A	PSIO-2	Circuit A Motormaster® Output	Disable function
MOTOR_B	PSIO-2	Circuit B Motormaster Output	Disable function
MTRCL_A1	CPM 1	Compressor A1 Motor Cooling	Compressor shut down
MTRCL_A2	CPM 2	Compressor A2 Motor Cooling	Compressor shut down
MTRCL_B1	CPM 1	Compressor B1 Motor Cooling	Compressor shut down
MTRCL_B2	CPM 2	Compressor B2 Motor Cooling	Compressor shut down
OAT	PSIO-2	Outside Air Temperature	Disable function
OIL_A1	PSIO-1	Compressor A1 Oil Pressure Transducer	Compressor shut down
OIL_A2	PSIO-1	Compressor A2 Oil Pressure Transducer	Compressor shut down
OIL_B1	PSIO-1	Compressor B1 Oil Pressure Transducer	Compressor shut down
OIL_B2	PSIO-1	Compressor B2 Oil Pressure Transducer	Compressor shut down
OILA_HTR	DSIO-HV	Circuit A Oil Heater	Disable function
OILA_SW	DSIO-EXV	Circuit A Oil Level	Circuit shut down
OILB_HTR	DSIO-HV	Circuit B Oil Heater	Disable function
OILB_SW	DSIO-EXV	Circuit B Oil Level	Circuit shut down
OILPMP_A	PSIO-2	Circuit A Oil Pump	No Action
OILPMP_B	PSIO-2	Circuit B Oil Pump	No Action
OILSOL_A	CPM 1	Circuit A Oil Solenoid	Circuit shut down
OILSOL_B	CPM 1	Circuit B Oil Solenoid	Circuit shut down
P_REF	PSIO-1	5 Volt Transducer Reference	Chiller shut down
RALARMx	PSIO-1/PSIO-2	Remote Alarm Relay x (1-16)	Disable function
RST_MA	PSIO-2	Temp. Reset 4-20 mA signal	Disable function
SPA	PSIO-1	Circuit A Suction Transducer	Circuit shut down
SPB	PSIO-1	Circuit B Suction Transducer	Circuit shut down
TLEV_A	PSIO-1	Circuit A Cooler Level Sensor	Control EXV-A by discharge superheat
TLEV_B	PSIO-1	Circuit B Cooler Level Sensor	Control EXV-B by discharge superheat
TMTR_A1	CPM 1	Compressor A1 Motor Thermistor	Compressor shut down
TMTR_A2	CPM 2	Compressor A2 Motor Thermistor	Compressor shut down
TMTR_B1	CPM 1	Compressor B1 Motor Thermistor	Compressor shut down
TMTR_B2	CPM 2	Compressor B2 Motor Thermistor	Compressor shut down
T_SPACE	PSIO-2	External Space Temp Thermistor	Disable function
VALVE_A	PSIO-2	Circuit A Water Valve Control	Circuit shut down
VALVE_B	PSIO-2	Circuit B Water Valve Control	Circuit shut down

**Table 38 — Illegal Configurations
(Alarm 50) Recognized by PSIO-1**

CODE NUMBER	ILLEGAL CONFIGURATION DESCRIPTION
1	Incorrect Check Sum in configuration code (factory or service code)
2	Unit type outside range of 1-3
3	Number of compressors in a circuit outside the range of 0-2
4	Air cooled chiller with a fan type outside the range of 1-16
5	Air cooled chiller with Low Temperature Brine fluid
6	Water cooled chiller configured for air cooled head pressure
7	Selecting both OAT and Space Temp sensors for External Reset operation
8	Air cooled chiller with condenser water pump
9	Air cooled chiller with condenser thermistors
10	MOP set point is outside the range of 40 to 55 F (4.4 to 12.8 C)
11	Maximum Condensing Temperature set point (MCT_SP) is outside the range of 0 to 158 F (-17.8 to 70 C)

LEGEND

MOP — Minimum Operating Temperature
OAT — Outdoor Air Temperature

EXD Troubleshooting Procedure — Follow steps below to diagnose and correct EXV/Economizer problems.

On 30HX units with economizers, verify that the valve for the bubbler tube (bottom of economizer) is open. Check EXV motor operation first. Press **4** **TEST ALARM** on the HSIO II keypad and select the appropriate EXV. Press **1** **ENTER** to move the valve to 25%. You should be able to feel the actuator moving by placing your hand on the EXV or economizer body (the actuator is located about one-half to two-thirds of the way up from the bottom of the economizer shell). Press **1** **ENTER** three more times until the display reads 100% for a Target Percent (waiting until actuator stops each time). A hard knocking should be felt from the actuator when it reaches the top of its stroke (can be heard if surroundings are relatively quiet). Press **1** **ENTER** again if necessary to confirm this. Press **0** **ENTER** four times to step the actuator closed in 25% increments, waiting again in between each move. The actuator should knock

when it reaches the bottom of its stroke. If it is believed that the valve is not working properly, continue with the checkout procedure below:

Check the EXV output signals at appropriate terminals on EXV driver module (see Fig. 12). Connect positive test lead to terminal 1 on the EXV driver for Circuit A and to terminal 7 for Circuit B. Set meter for approximately 20 vdc. Enter Valves and Motor Master test subfunction by pressing **4** **TEST ALARM** on the HSIO. The EXV for Circuit A will be displayed; if desired, press the down arrow key for Circuit B. When at the desired valve, press **1** **ENTER**. The display should change to show a Target Percent of 25%. The driver should drive the circuit EXV under test. During the next several seconds, connect negative test lead to pins 2, 3, 4, and 5 in succession (pins 8, 9, 10 and 11 for Circuit B). Voltage should rise and fall at each pin. If it remains constant at a voltage or shows 0 volts, remove the connector to the valve and recheck.

Press **0** **ENTER** to close the circuit EXV. Check the DSIO address setting (the address should be 50). If a problem still exists, replace the EXV driver module. If the voltage reading is correct, the expansion valve and EXV wiring should be checked. Check the EXV terminal strip and interconnecting wiring.

1. Check color coding and wire connections. Make sure they are connected to the correct terminals at the EXV driver and EXV plug and that the cables are not crossed.
2. Check for continuity and tight connection at all pin terminals.

Check the resistance of the EXV motor windings. Remove the DSIO-EXV plug J4 terminal strip and check the resistance between the common lead (red wire, terminal D) and remaining leads, A, B, C, and E (see Fig. 12). The resistance should be 25 ohms $\pm$ 2 ohms.

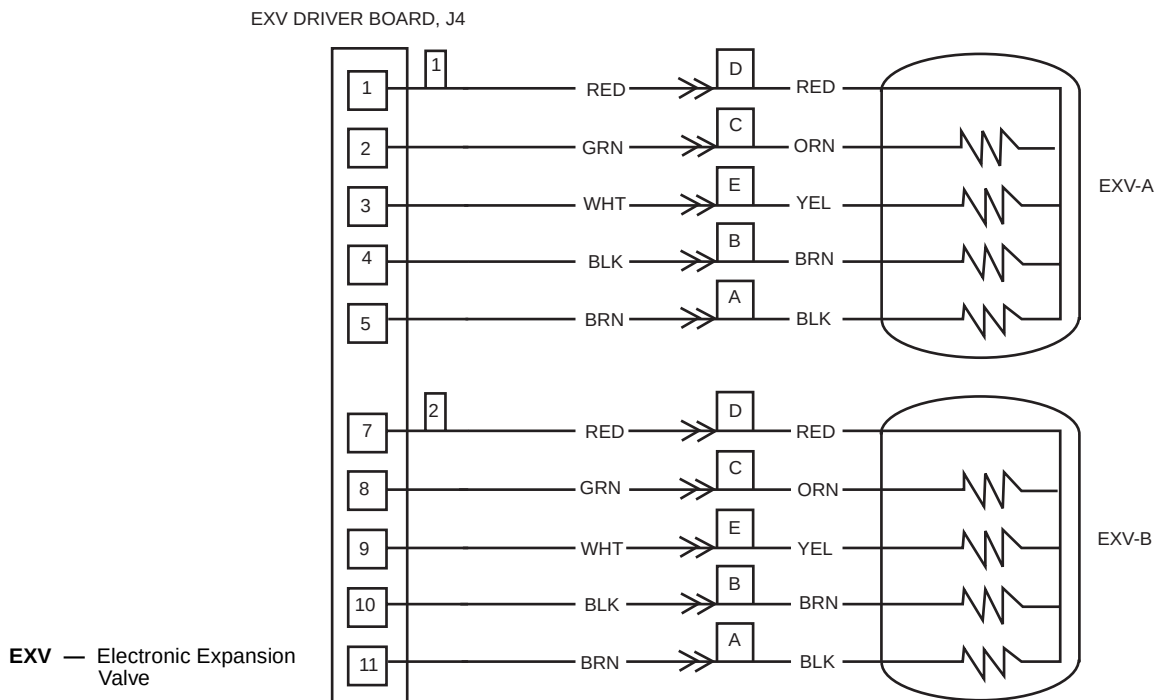


Fig. 12 — EXV Cable Connections to EXV Driver Module, DSIO-EXV

INSPECTING/OPENING ELECTRONIC EXPANSION VALVES

IMPORTANT: Obtain replacement O-ring before opening EXV. Do not reuse O-rings.

To check the physical operation of an EXV, the following steps must be performed:

1. Close the liquid line service valve of the circuit to be checked. Put the LOR switch in the OFF position. Using the HSIO, enter the manual service mode by pressing **8** **SERV**. Enable the mode by pressing **1** **ENTER**. Switch the LOR switch to the Local position. Scroll down to the desired compressor and press **1** **ENTER** to turn it on. Let compressor run until gage on suction pressure port reads between 5 and 10 psig. Press **0** **ENTER** to turn the compressor off. Immediately after the compressor shuts off, close the discharge valve.
2. Remove any remaining refrigerant from the system low side using proper reclaiming techniques. Drain oil from cooler using Schrader port in cooler inlet line. Turn off the line voltage power supply to the compressors and control circuit power.
3. Remove screws holding top cover of EXV. Carefully remove the top cover from the EXV making sure EXV plug is still connected.

IMPORTANT: When removing top cover from EXVs, be careful to avoid damage to motor leads.

4. Enter the appropriate EXV test step for EXV-A or EXV-B by pressing **4** **TEST ALRM** on the HSIO. Scroll down to display the desired EXV. Press **1** and **ENTER** to initiate the test. Observe the operation of the valve motor and lead screw. The motor should turn counterclockwise, and the lead screw should move up out of the motor hub until the valve is fully open. Lead screw movement should be smooth and uniform from fully closed to fully open position. Press **1** **ENTER** as needed to reach 100% open. Wait 30 seconds in between each step for motor to stop moving. Press **0** **ENTER** to check open to closed operation. If the valve is properly connected to the processor and receiving correct signals, yet does not operate as described above, the valve should be replaced.

INSPECTING/OPENING ECONOMIZERS — To check the physical operation of an economizer (see Fig. 13), the following steps must be performed:

1. Close the liquid line service valve of the circuit to be checked. Put the LOR switch in the OFF position. Using the HSIO, enter the manual service mode by pressing **8** **SERV**. Enable the mode by pressing **1** **ENTER**. Switch the LOR switch to the Local position. Scroll down to the desired compressor and press **1** **ENTER** to turn it on. Let compressor run until gage on suction pressure port reads between 5 and 10 psig (34.5 and 69.0 kPa). Press **0** **ENTER** to turn the compressor off. Immediately after the compressor shuts off, close the discharge valve and the bubbler valve on 30HX units (located in elbow fitting on condenser shell). For 30GX units, there is no shutoff valve in the bubbler tube line.

2. Remove any remaining refrigerant from the system low side and discharge piping using proper reclaiming techniques. Drain oil from cooler using Schrader port in cooler inlet line. Turn off the line voltage power supply to the compressors and control circuit power.

3. Remove the shell retaining bolts on the bottom of the economizer and the bolts that secure the shell to the unit frame or mounting bracket. Cut the motor cooling line leaving the top of the economizer. Carefully remove the shell from the economizer. Make sure EXV plug is still connected. The economizer shell is heavy. Use caution when removing shell.

IMPORTANT: When removing shell from economizer, it must be lifted off as close to vertical as possible to prevent damage to any of the internal parts. Use a catch pan beneath the economizer as oil will come out when the shell is removed. Be careful to avoid damage to motor leads.

4. Enter the appropriate EXV test step for EXV-A or EXV-B by pressing **4** **TEST ALRM** on the HSIO. Scroll down to display the desired EXV. Press **1** and **ENTER** to initiate the test. Observe the operation of the valve motor and lead screw. The motor should turn counterclockwise, and the lead screw should move up out of the motor hub until the valve is fully open. Lead screw movement should be smooth and uniform from fully closed to fully open position. Press **1** **ENTER** as needed to reach 100% open. Wait 30 seconds in between each step for motor to stop moving. Press **0** **ENTER** to check open to closed operation. If the valve is properly connected to the processor and receiving correct signals, yet does not operate as described above, the economizer should be replaced.
5. Additional items to check for:
 - a. Verify that float assembly (see cross section view in Fig. 13) moves up and down freely. It should take only a minimal force (less than one pound) to move the float and there should be no binding.
 - b. Check the bubbler tube (found by carefully lifting the float) for crimps, etc. and verify that the end of the tube is open.
6. Reassemble economizer; retorque shell retaining bolts to 35 ft-lb (48 N-m).

If operating problems persist after reassembly, they may be due to a bad liquid level sensor, suction pressure transducer or intermittent connections between the processor board terminals and EXV plug. Recheck all wiring connections and voltage signals.

Other possible causes of improper refrigerant flow control could be restrictions in the liquid line. Check for plugged strainer(s) or restricted metering slots in the EXV or economizer. Formation of ice or frost on lower body of electronic expansion valve is one symptom of restricted metering slots. However, frost or ice formation is normally expected when leaving fluid temperature from the cooler is below 40 F (4.4 C). Clean or replace valve if necessary.

NOTE (non-economizer units only): Frosting of valve is normal during compressor test steps and at initial start-up. Frost should dissipate after 5 to 10 minutes operation in a system that is operating properly. If valve is to be replaced, wrap valve with a wet cloth to prevent excessive heat from damaging internal components.

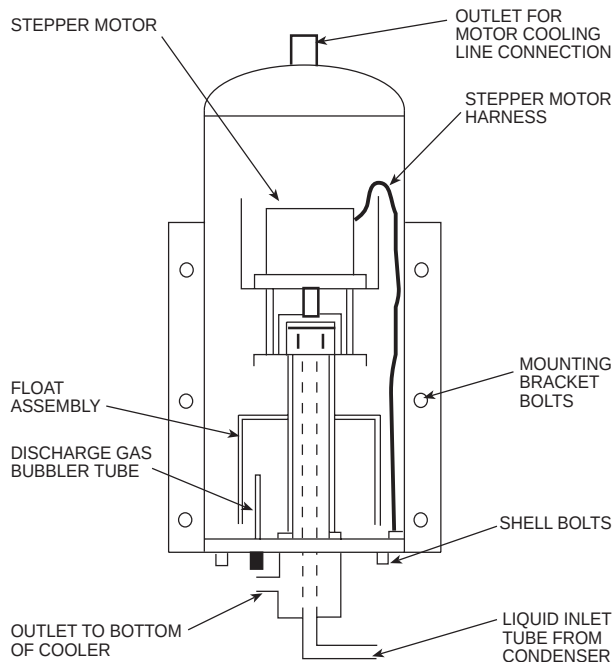


Fig. 13 — 30GX,HX Cutaway View of Economizer Assembly

SERVICE

Servicing Coolers and Condensers — When cooler heads and partition plates are removed, tube sheets are exposed showing the ends of tubes. The 30GX,HX units use a flooded cooler design. Water flows inside the tubes.

TUBE PLUGGING — A leaky tube in one circuit can be plugged until retubing can be done. The number of tubes plugged determines how soon the cooler must be retubed. All tubes in the 30GX and 30HX coolers and 30HX condensers can be removed. Loss of unit capacity and efficiency as well as increased pump power will result from plugging tubes. Failed tubes should be replaced as soon as possible. Up to 10% of the total number of tubes can be plugged before retubing is necessary. Figure 14 shows an Elliott tube plug and a cross-sectional view of a plug in place. The same components for plugging and rolling tubes can be used for all coolers and 30HXC condensers. See Table 39. If tube failure is in both circuits, using tube plugs will not correct problem. Contact your Carrier representative for assistance.

⚠ CAUTION

Use extreme care when installing plugs to prevent damage to the tube sheet section between the holes.

RETUBING (See Table 40) — When retubing is to be done, obtain service of qualified personnel experienced in boiler maintenance and repair. Most standard procedures can be followed when retubing the 30GX and 30HX heat exchangers. A 7% crush is recommended when rolling replacement tubes into the tubesheet. A 7% crush can be achieved by setting the torque on the gun at 48 to 50 in.-lb (5.4 to 5.6 N-m).

The following Elliott Co. tube rolling tools are required:

B3400 Expander Assembly B3405 Mandrel
B3401 Cage B3408 Rolls

Place one drop of Loctite No. 675 or equivalent on top of tube prior to rolling. This material is intended to “wick” into the area of the tube that is not rolled into the tube sheet, and

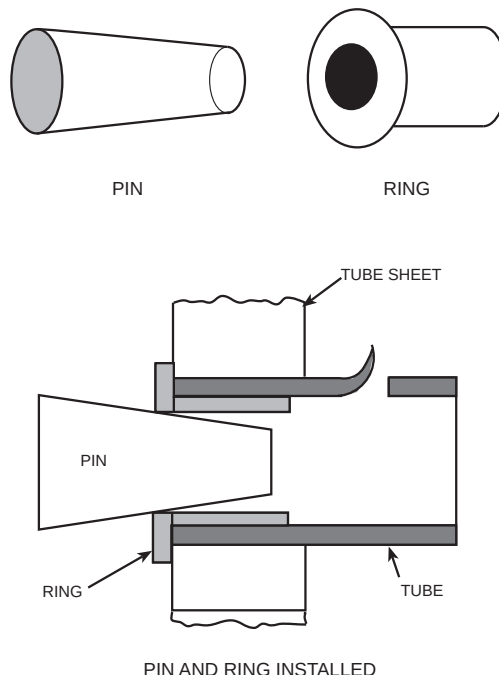


Fig. 14 — Tube Plugging

Table 39 — Plugging Components

COMPONENTS FOR PLUGGING	PART NUMBER
For Tubes	
Brass Pin	853103-1A*
Brass Ring	853002-640*
For Holes without Tubes	
Brass Pin	853103-1A*
Brass Ring	853002-738*
Roller Extension	S82-112/11
Loctite	No. 675†
Locquic	“N”†

*Order directly from: Elliott Tube Company, Dayton, Ohio.
†Can be obtained locally.

Table 40 — Tube Diameters

ITEM	INCHES	MILLIMETERS
Tube sheet hole diameter:	0.756	19.20
Tube OD	0.750	19.05
Tube ID after rolling:	0.650	16.51
(includes expansion due to clearance)	to 0.667	to 16.94

NOTE: Tubes replaced along heat exchanger head partitions must be flush with tube sheet.

prevent fluid from accumulating between the tube and the tube sheet. New tubes must also be rolled into the center tube sheet to prevent circuit-to-circuit refrigerant leakage.

TIGHTENING COOLER/CONDENSER HEAD BOLTS

O-Ring Preparation — When reassembling cooler and condenser heads, always check the condition of the O-ring(s) first. The O-ring should be replaced if there are any visible signs of deterioration, cuts or damage. Apply a thin film of grease to the O-ring before installation. This will aid in holding the O-ring into the groove while the head is installed. Torque all bolts to the following specification and in the sequence shown in Fig. 15.

$\frac{3}{4}$ -in. Diameter Perimeter and
Plate Bolts..... 200 to 225 ft-lb
(271 to 305 N-m)

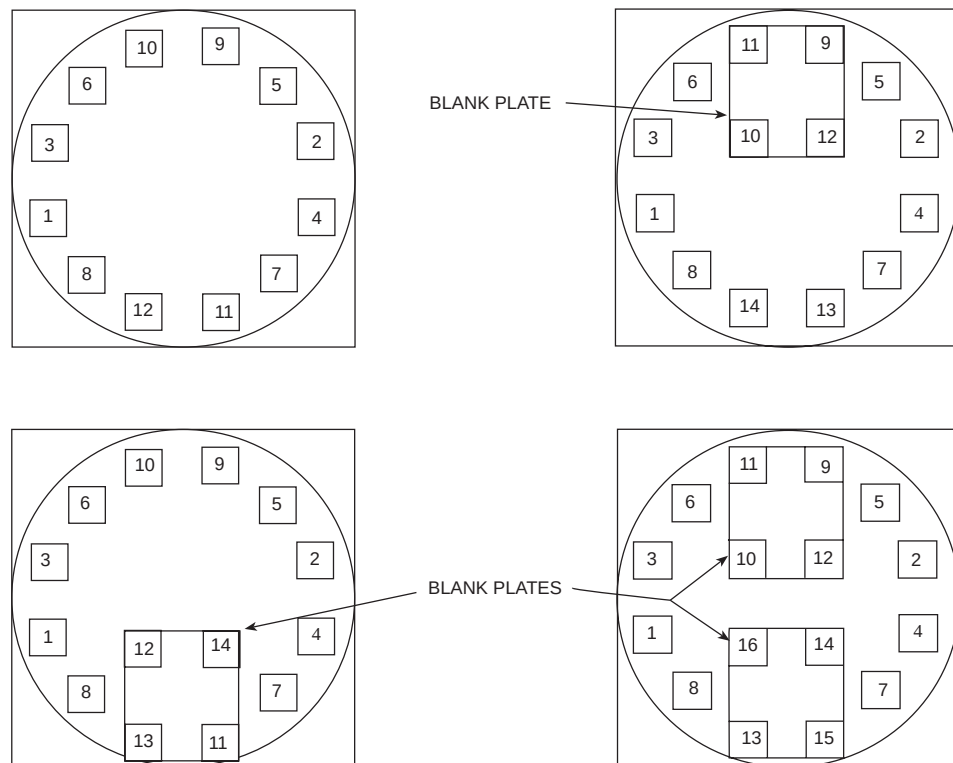


Fig. 15 — Cooler and Condenser Head Recommended Bolt Torque Sequence

1. Install all bolts finger tight.
2. Follow numbered sequence shown for head type being installed. This will apply even pressure to the O-ring.
3. Apply torque in one-third steps until required torque is reached. Load all bolts to each one-third step before proceeding to the next one-third step.
4. No less than one hour later, retighten all bolts to required torque values.
5. Restore water/brine flow and check for leaks. Fix leaks as necessary. Replace insulation (on cooler heads only).

Inspecting/Cleaning Heat Exchangers

COOLERS — Inspect and clean the cooler tubes at the end of the first operating season. Because these tubes have internal ridges, a rotary-type tube cleaning system is necessary to fully clean the tubes. Tube condition in the cooler will determine the scheduled frequency for cleaning, and will indicate whether water treatment is adequate in the chilled water/brine circuit. Inspect the entering and leaving thermistors for signs of corrosion or scale. Replace the sensor if corroded or remove any scale if found.

CONDENSERS (30HX Only) — Since this water circuit is usually an open-type system, the tubes may be subject to contamination and scale. Clean the condenser tubes with a rotary tube cleaning system at regular intervals, and more often if the water is contaminated. Inspect the entering and leaving condenser water thermistors (if installed) for signs of corrosion or scale. Replace the sensor if corroded or remove any scale if found.

Higher than normal condenser pressures, together with inability to reach full refrigeration load, usually indicate dirty tubes or air in the machine. If the refrigeration log indicates a rise above normal condenser pressures, check the condenser refrigerant temperature against the leaving condenser water temperature. If this reading is more than what the design difference is supposed to be, then the condenser tubes may be dirty, or water flow may be incorrect. Due to the pressure in the R-134a

system, air usually will not enter the machine; the refrigerant will leak out.

During the tube cleaning process, use brushes specially designed to avoid scraping and scratching the tube wall. Contact your Carrier representative to obtain these brushes. Do not use wire brushes.

⚠ CAUTION

Hard scale may require chemical treatment for its prevention or removal. Consult a water treatment specialist for proper treatment procedures.

Water Treatment — Untreated or improperly treated water may result in corrosion, scaling, erosion, or algae. The services of a qualified water treatment specialist should be obtained to develop and monitor a treatment program.

⚠ CAUTION

Water must be within design flow limits, clean and treated to ensure proper machine performance and reduce the potential of tubing damage due to corrosion, scaling, erosion, and algae. Carrier assumes no responsibility for chiller or condenser damage resulting from untreated or improperly treated water.

Condenser Coils (30GX Only)

COIL CLEANING — Clean coils with a vacuum cleaner, fresh water, compressed air, or a bristle brush (not wire). Units installed in corrosive environments should have coil cleaning as part of a planned maintenance schedule. In this type of application, all accumulations of dirt should be cleaned off the coil.

⚠ CAUTION

Do not use high-pressure water or air to clean coils as fin damage may result.

Condenser Fans (30GX Only) — Each fan is supported by a formed wire mount bolted to a fan deck and covered with a wire guard. The exposed end of the fan motor shaft is protected from weather by grease. If the fan motor must be removed for service or replacement, be sure to regrease fan shaft and reinstall fan cover, retaining clips, and fan guard. For proper performance, the fans should be positioned as shown in Fig. 16 or 17. Tighten setscrews to 14 ± 1 ft-lb (18 ± 1.3 N-m).

Check for proper rotation of the fan(s) once reinstalled (clockwise for high static and counterclockwise for standard viewed from above). If necessary to reverse, switch leads at contactor(s) in control box.

Refrigerant Charging/Adding Charge

IMPORTANT: These units are designed for use with R-134a only. DO NOT USE ANY OTHER REFRIGERANT in these units without first consulting your Carrier representative.

⚠ CAUTION

When adding or removing charge, circulate water through the condenser (30HXC) and cooler at all times to prevent freezing. Freezing damage is considered abuse and may void the Carrier warranty.

⚠ CAUTION

DO NOT OVERCHARGE system. Overcharging results in higher discharge pressure with higher cooling fluid consumption, possible compressor damage and higher power consumption.

Indication of low charge on a 30HXC system:

NOTE: To check for low refrigerant charge on a 30HXC, several factors must be considered. A flashing liquid-line sight glass is not necessarily an indication of inadequate charge. There are many system conditions where a flashing sight glass occurs under normal operation. The 30HXC metering device is designed to work properly under these conditions.

1. Make sure that the circuit is running at a full-load condition. To check whether circuit A is fully loaded, enter **3** **STAT** on the HSIO keypad. The display will read "CIRCUIT A ANALOG VALUES." Using the down arrow key on the keypad, scroll down once to "Total Capacity." If this value is 100%, the circuit is at full load. To check circuit B, follow the same procedure, but enter **5** **STAT** on the keypad.
2. It may be necessary to use the Manual Control feature to force the circuit into a full-load condition. If this is the case, see the instructions for using the Manual Control feature in Table 22 of this manual.
3. With the circuit running at full load, verify that the cooler leaving fluid temperature is in the range of 38 to 46 F (3.3 to 7.8 C). Check pressure drop across liquid line strainer. Strainer is cleanable if necessary.
4. At this condition, observe the refrigerant in the liquid line sight glass. If there is a clear sight glass, and no signs of flashing, then the circuit is adequately charged. Skip the remaining steps.
5. If the refrigerant appears to be flashing, the circuit is probably low on charge. Verify this by checking the EXV Percent Open. This information can be accessed by entering **3** **STAT** on the HSIO keypad for Circuit A, or **5** **STAT** for Circuit B. Scroll down using the down arrow key on the keypad, until EXV Percent Open is displayed.

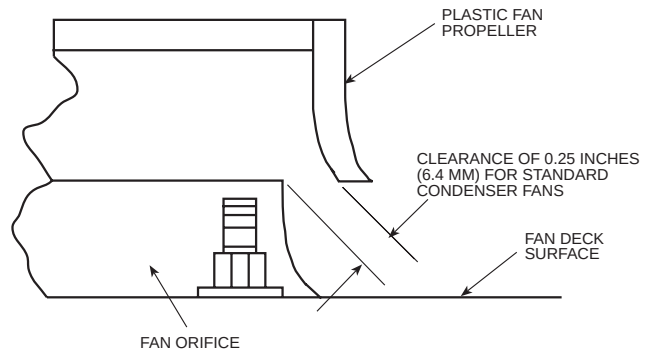


Fig. 16 — Condenser Fan Position (Standard Fan)

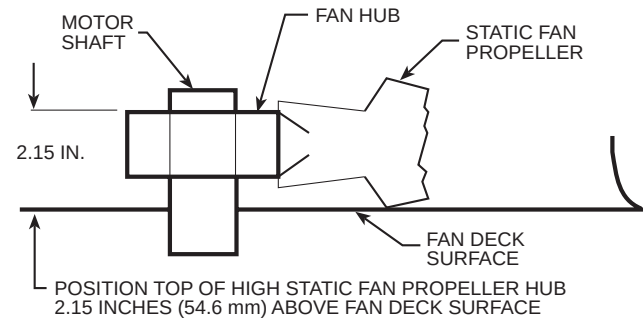


Fig. 17 — Condenser Fan Position (High Static Fan)

6. If the EXV Percent Open is greater than 60%, and the liquid-line sight glass is flashing, then the circuit is low on charge. Follow the procedure for adding charge for 30HXC units.

To add charge to the 30HXC systems:

1. Make sure that the unit is running at full load, and that the cooler leaving fluid temperature is in the range of 42 to 46 F (5.6 to 7.8 C).
2. At these operating conditions, check the liquid line sight glass. If there is a clear sight glass, then the unit has sufficient charge. If the sight glass is flashing, then check the EXV Percent Open. If this is greater than 60%, then begin adding charge.
NOTE: A flashing liquid line sight glass at operating conditions other than those mentioned above is not necessarily an indication of low refrigerant charge.
3. Add 5 lb (2.3 kg) of liquid charge into the cooler using the 1/4-in. Schrader-type fitting located on the tube entering the bottom of the cooler. This fitting is located between the Electronic Expansion Valve (EXV) (size 076-146 units), or the economizer (size 161-271 units) and the cooler.
4. Observe the EXV Percent Open value. The EXV should begin closing as charge is being added. Allow the unit to stabilize. If the EXV Percent Open remains above 60%, and the sight glass continues flashing, add an additional 5 lb (2.3 kg) of liquid charge.
5. Allow the unit to stabilize, and again check the EXV Percent Open. Continue adding 5 lb (2.3 kg) at a time of liquid refrigerant charge, and allow the unit to stabilize before checking the EXV position.
6. When the EXV Percent Open is in the range of 40 to 60%, check the liquid line sight glass. Slowly add enough additional liquid charge to ensure a clear sight glass. This should be done slowly to avoid overcharging the unit.

7. Verify adequate charge by continuing to run at full load with 42 to 46 F (5.6 to 7.8 C) cooler leaving fluid temperature. Check that the refrigerant is not flashing in the liquid-line sight glass. The EXV Percent Open should be between 40 and 60%. The cooler level indicator should be in the range of 1.5 to 2.2.

Indication of low charge on a 30HXA, GX systems:

1. Make sure that the circuit is running at a full load condition and all condenser fans are energized and running at full speed. To check whether circuit A is fully loaded, enter **3** **STAT** on the HSIO keypad. The display will read "CIRCUIT A ANALOG VALUES." Using the down arrow key on the keypad, scroll down once to "Total Capacity." If this value is 100%, the circuit is at full load. To check circuit B, follow the same procedure, but enter **5** **STAT** on the keypad.
2. It may be necessary to use the Manual Control feature to force the circuit into a full-load condition. If this is the case, see the instructions for using the Manual Control feature in Table 22 on page 33 of this manual.
3. With the circuit running at full-load, verify that the cooler leaving fluid temperature is in the range of 38 to 48 F (5.6 to 7.8 C).
4. For 30HXA chillers, raise the compressor discharge to approximately 125 F (51.7 C) saturated discharge temperature (185 psig [1276 kPa]). For 30GX chillers, raise the compressor discharge to approximately 130 F (54.4 C) saturated discharge temperature (198 psig [1366 kPa]). Measure the liquid temperature entering the expansion device for 30HXA units. For 30GX units, measure the liquid temperature after the tee where all liquid lines have joined. The liquid temperature should be approximately 107 F (41.7 C) for optimum charge. If the temperature is greater than 107 F (41.7 C) and the sight glass is flashing, the circuit is undercharged.
5. Add 5 lb (2.3 kg) of liquid charge into the cooler using the 1/4-in. Schrader-type fitting located on the tube entering the bottom of the cooler. This fitting is located between the Electronic Expansion Valve (EXV) (30HXA076-146 units, 30GX080-090 units), or the economizer (30HXA161-271 units, 30GX105-350 units) and the cooler.
6. Allow the system to stabilize and then recheck the liquid temperature. Repeat Step 5 as needed allowing the system to stabilize between each charge addition. Slowly add charge as the sight glass begins to clear to avoid overcharging.

Oil Charging/Low Oil Recharging

Addition of oil charge to 30HX,GX systems:

1. If the 30HX,GX unit shuts off repeatedly on Low Oil Level (Alert number 71 or 72), this may be an indication of inadequate oil charge. It could also mean simply that oil is in the process of being reclaimed from the low-side of the system.
2. Begin by running the unit at full load for 1½ hours. Use the Manual Control feature of the software if the unit does not normally run at full load.

3. After running the unit for 1½ hours, allow the unit to restart and run normally. If the Low Oil Level alarms persist, continue following this procedure.
4. Close the liquid line service valve, and place a pressure gage on top of the cooler. Enable the manual control feature using the HSIO keypad, and turn the LOR switch to local. Start the desired compressor by pressing **1** **ENTER** on the keypad, at the appropriate line on the display.
5. Before starting the compressor, the unit will go through its normal pre-lube pump routine. If there is an insufficient level of oil in the oil separator, the compressor will not start, and a pre-start oil pressure alarm will be posted. Skip to Step 8.
6. If the compressor starts successfully, observe the cooler pressure gage. When this gage reads approximately 10 psig, press **0** **ENTER** on the HSIO keypad, and move the LOR switch to the off position.
7. Open the liquid line service valve and allow the unit to restart and run normally. If the Low Oil Level alarms persist, continue following this procedure.
8. If none of the previous steps were successful, the unit is low on oil charge. Add oil to the oil separator using the 1/4-in. Schrader-type fitting on the discharge line entering the top of the oil separator (30HX units) or through the Schrader fitting on the top of the oil separator (30GX units).

⚠ CAUTION

Do not add oil at any other location as improper unit operation may result.

9. Make sure that the unit is not running when adding oil, as this will make the oil charging process easier. Because the system is under pressure even when the unit is not running, it will be necessary to use a suitable pump (hand pump or electric pump) to add oil to the system.
10. Using a suitable pump, add ½ gal. (1.89 L) of Castrol Ice-matic® SW-220 Polyolester oil (Carrier Specification number is PP47-32; absolutely no substitutes are approved) to the system. Make sure that the oil level safety switch is NOT jumpered, and allow the unit to restart and run normally. Do not exceed maximum oil change. See Table 41.
11. If low oil level problems persist, add another 1.89 L (½ gal.) of oil. Continue adding oil in 1.89 L (½ gal.) increments until the problem is resolved. If it is necessary to add more than 5.75 L (1.5 gallons) of oil to the system, contact your Carrier distributor service department.

Table 41 — Maximum Oil Charges

UNIT SIZE	CIRCUIT A (gal)	CIRCUIT A (L)	CIRCUIT B (gal)	CIRCUIT B (L)
30GX080-176	5.0	18.9	5.0	18.9
30GX205-265	7.0	26.5	5.0	18.9
30GX281-350	7.0	26.5	7.0	26.5
30HXA076-186	5.0	18.9	5.0	18.9
30HXC076-186	4.5	17.0	4.5	17.0
30HXA,C206-271	7.5	28.4	5.0	18.9

Oil Filter Maintenance — Each compressor has its own internal oil filter and each circuit also has an in-line external filter. The internal oil filter pressure drop should be checked and filter changed (if necessary) after the initial 200-300 hours of compressor operation. It is recommended that oil line pressure loss checks be made on an annual basis thereafter to determine the need for filter changes. The need for filter maintenance can be monitored through system pressure drop. Discharge pressure is read at the oil separator and oil pressure is read at the compressor. This pressure differential is typically 15 to 20 psi (103 to 138 kPa) for a system with clean internal and external filters. See Pressure Transducers section, page 61 for information on removing discharge pressure transducers to measure discharge pressure. Figure 18 shows the location of the oil pressure bleed port on the compressor. A gage can be attached to this point so that two pressure drops can be measured. The difference between discharge pressure and the gage pressure will be the pressure loss due mainly to the external oil filter. If this value exceeds 10 psi (69 kPa), replace the external filter. The difference between the gage pressure and compressor oil pressure is the pressure drop through the internal oil filter. Replace the internal oil filter if the pressure drop is greater than 25 psi (173 kPa) for 30HXC and 30 psi (207 kPa) for 30GX and 30HXA chillers.

REPLACING THE EXTERNAL OIL FILTER

⚠ CAUTION

Compressor oil is pressurized. Use proper safety precautions when relieving pressure.

Fully front seat (close) the angle valves on the filter and at the compressor. Connect a charging hose to the oil pressure bleed port and drain the oil trapped between service valves. A quart (liter) of oil is typically what is removed during this process. Remove the charging hose.

Unscrew the nut from the other side of the filter and remove the old filter. Remove protective plastic caps from new filter and install. Draw a vacuum at the bleed port. Remove charging hose. Open angle valve enough to let oil flow. Check both fittings for leaks and repair if necessary. Backseat angle valve.

REPLACING THE INTERNAL OIL FILTER — Close the service valves at the compressor and drain the oil using the bleed port. If the oil pressure does not bleed off using this method it will be necessary to remove the entire circuit charge. Using a 3/4-in. allen wrench, remove the internal filter access cover (see Fig. 18 and 19). Remove the old filter. Replacement filters (one for each compressor) are factory supplied to cover the first changeout. After that, filters are field supplied. Lightly oil O-ring in the filter and install with filter open end first into the housing. Replace access cover and retorquer to 150 ft-lb (203 N-m). Follow procedure in previous section for opening angle valve and purging lines. Check for leaks and repair if necessary.

Compressor Changeout Sequence — Compressor service requires metric tools and hardware. Change compressors according to the following procedure:

1. Turn off all main and control circuit power supplying the machine.
2. Close the discharge and liquid valve(s), suction valve, and cooler inlet line service valve (if equipped), oil line shutoff valve, economizer bubble tube valve (30HXA,C161-271 only) and minimum load shutoff valve (if equipped) for circuit to be changed. Disconnect the oil inlet line from the compressor. Disconnect oil filter with fitting at shutoff valve side and set filter and compressor inlet line assembly aside.
3. Remove any remaining refrigerant in the compressor and refrigerant lines using proper reclaiming techniques. All of

the refrigerant that is in the cooler must be removed if there is no suction service valve installed on the cooler.

IMPORTANT: Cooler and condenser pumps must be energized. Fluid must be flowing through heat exchangers whenever adding or removing charge.

4. Remove junction box cover of compressor to be changed. Check main power leads for marked numbers. If no numbers are visible on leads, mark leads with appropriate numbers to match those printed on the ends of the terminal lugs. **This is extremely important as power leads MUST be installed on the exact terminals from which they were removed.**

5. Disconnect main power leads from compressor terminal lugs. Mark remaining control circuit wires (connected together with wire nuts) for ease of reconnecting later. The following color scheme applies (verify with label diagram on panel):

Loader 1	2 Violet wires
Loader 2	2 Pink wires
Motor Cooling Solenoid	1 Blue wire, 1 Brown wire *
Oil Solenoid	1 Orange wire, 1 Brown wire*
High-Pressure Switch	2 Red wires

*One lead from the motor cooling and oil solenoids are connected together with a single brown wire.

6. Remove loader (mark solenoids no. 1 and 2 for replacement) and oil solenoids and high-pressure switch from compressor. Using 2 wrenches, carefully remove the oil pressure transducer from the compressor. These will all be reconnected to the replacement compressor.

NOTE: Some oil will leak out of the transducer fitting when the transducer is removed. See Fig. 18.

7. Mark motor temperature leads (2 blue wires) and remove from quick connect terminals in the junction box.

⚠ CAUTION

The next steps involve compressor unbolting and removal. Compressor seals are made using O-rings. Use care when removing bolts and disconnecting flanges. The O-rings must NOT be re-used. New O-rings are provided with the replacement compressor. **The 06N screw compressors weigh approximately 920 lb (417 kg).** Be sure that an appropriate lifting cart or hoist is used to avoid injury. See Fig. 20 for lifting locations and center of gravity dimensions. Make sure compressor is properly rigged before unbolting.

8. Remove the 2 bolts securing the motor cooling/economizer line flange to the compressor.

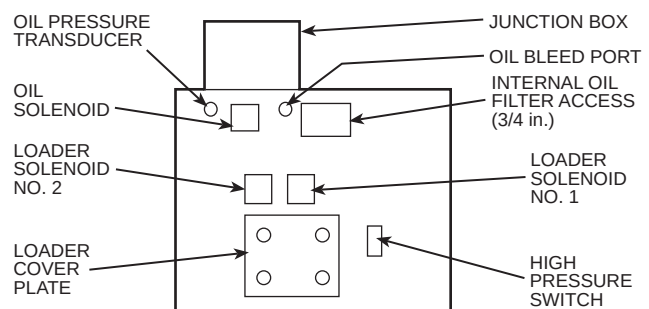


Fig. 18 — Transducer Removal

9. Remove the four M14 bolts securing the discharge line flange to the compressor. Two of the bolts also secure the mounting bracket for the external oil filter. Support the oil line to prevent damage to the line while the compressor is being changed. For 30GX units, place temporary protection over coils to prevent fin and tube damage.
 10. Move lifting apparatus into place and attach to the 2 lifting rings on the compressor. Apply minimal tension to hold the compressor while the remaining bolts are removed.
 11. Remove the 3/8-in. holddown bolt securing the foot at the discharge end of the compressor to the mounting bracket on the cooler. A foot bracket will be mounted to the replacement compressor.
 12. Remove the 4 lockwashers and nuts securing the compressor to the suction flange of the cooler. The compressor is held in place using four M14 x 2 studs through the suction nozzle of the cooler. The studs have an E-12 external Torx drive head. If possible, remove studs; if studs hit the cooler insulation, leave them in place — they will not interfere with compressor removal or installation. Save all the hardware as it will be needed to install the replacement compressor.
 13. After checking to ensure all lines, wires, conduits, etc. are free and out of the way, remove compressor from cooler. Apply a light film of O-ring grease to new O-ring and place back into groove in mounting flange of compressor. If the new compressor is the A1/A2 (30HX units), A2 (30GX205-265 units) or B2 (30GX281-350 units) compressor, remove the compressor junction box and rotate it 180 degrees. Tighten screws to 6.8 to 9.5 N-m (5 to 7 ft-lb). The A1 and A2 compressors are on the right side of the unit when facing the unit control box.
 14. Remove suction cover plate and bolts from new compressor and set compressor on unit flange. Thread the studs all the way back into the compressor. Install the 4 lockwashers and nuts finger-tight. Tighten bolts in a crossing pattern to a range of 81.4 to 135.6 N-m (60 to 100 ft-lb). Do NOT overtighten as damage may result to O-ring. Install and tighten holddown bolt in mounting foot.
 15. Remove motor cooling/economizer and discharge line cover plates from new compressor.
 16. Apply a light film of O-ring grease to motor cooling/economizer and discharge line O-rings, place back into grooves and install flange bolts. Tighten discharge line bolts in a crossing pattern to a range of 81.4 to 135.6 N-m (60 to 100 ft-lb). Tighten motor cooling/economizer bolts to a range of 81.4 to 108.5 N-m (60 to 80 ft-lb). Do NOT overtighten as damage may result to O-rings.
 17. Reconnect the oil filter to the shutoff valve and oil line to the compressor. Install oil line straight into fitting until ferrule seats against fitting. Thread packing nut onto fitting and tighten finger tight. Use a backup wrench to finish tightening the nut. Do not overtighten.
 18. Reinstall the loader and oil solenoids, high-pressure switch, and oil pressure transducer. Make sure the loader solenoids are installed on the correct number loader.
 19. Reconnect conduits back into compressor junction box. Reconnect all wiring that was removed in Steps 4, 5, and 7. Temporarily install the reverse rotation low pressure switch that is supplied with the replacement compressor. Connect the switch to the second high pressure port using a standard 1/4-in. service hose. The switch will not reset until 10 psig of pressure is present on the switch. Temporarily wire the reverse rotation low pressure switch in series with the compressor's high pressure switch as shown in Fig. 21.
 20. Leak check compressor and refrigerant lines with nitrogen. Repair any leaks found. Remove nitrogen from system.
- Evacuate compressor and refrigerant lines. Refer to the Refrigerant and Oil Charging sections on pages 56 and 57 for recharging procedures.
21. Open all shutoff valves and leak check the circuit and all fittings and joints. Repair any leaks found.
 22. Reset the reverse rotation low pressure switch.
 23. Restore main and control power to the machine. Using the HSIO, enter the quick test function by pressing **1** **TEST ALARM** (for compressor A1 or A2 replacement) or **2** **TEST ALARM** (for compressor B1 replacement). Test the operation of the solenoids. Press **1** **ENTER** to test each loader solenoid, then use the **▼** key to find the motor cooling and oil solenoids and test them in the same manner. Pressing the **▼** key after each output turns the solenoid off (or press **0** **ENTER**). It is important that the loaders are located properly (loader 1 on right hand side when viewed from side opposite control box on 30HX units, on left hand side when reaching over compressor to far side on 30GX units).
 24. Start the compressor using the Manual mode. Press **8** **SRVC** at the HSIO. Press **1** **ENTER** to enable the Manual mode. When display changes to "Enable," switch the Local-Off-Remote switch to the Local position. Select the desired compressor using the down arrow key. Press **1** **ENTER** to start the compressor. Use the down arrow key and press **1** **ENTER** to energize both loaders. Let the circuit stabilize with both loaders energized. Refer to the Refrigerant and Oil Charging sections of this document for recharging procedures and performance criteria.
 25. Once proper rotation has been verified disconnect and lockout the power to the chiller. The reverse rotation low pressure switch can now be removed from the compressor and high pressure switch circuit.




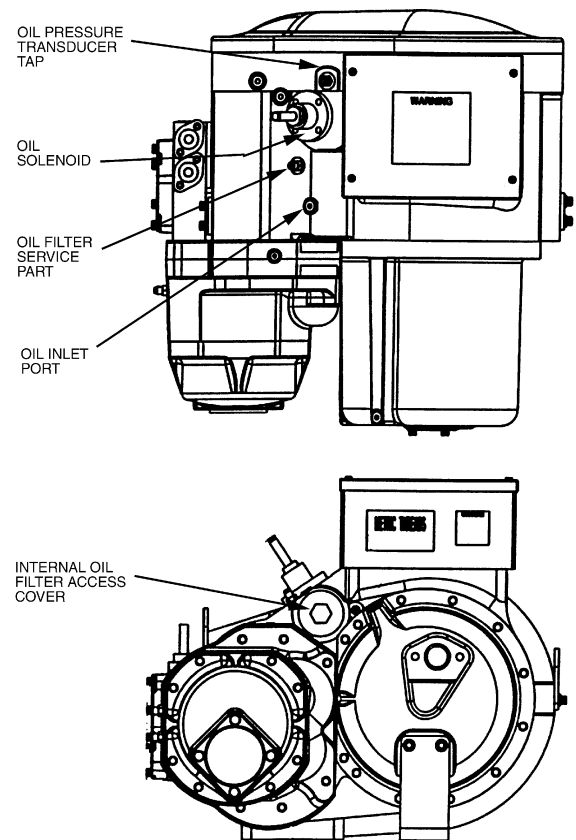


Fig. 19 — Compressor Component Diagram

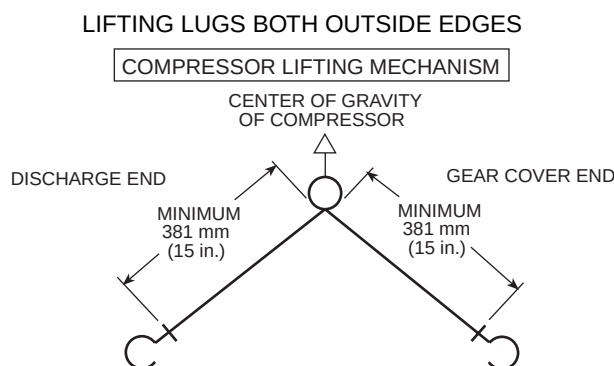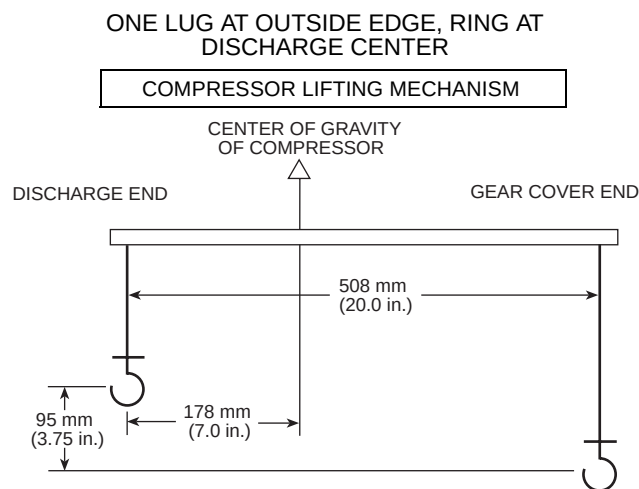

LIFTING LUGS BOTH OUTSIDE EDGES
EQUIDISTANT FROM GEAR COVER END

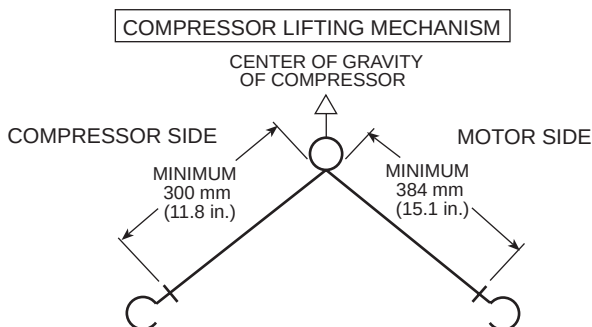

NOTE: Locate strap from center of gravity lifting ring and support motor casing to provide 3-point level rigging.

Fig. 20 — Compressor Lifting Diagrams

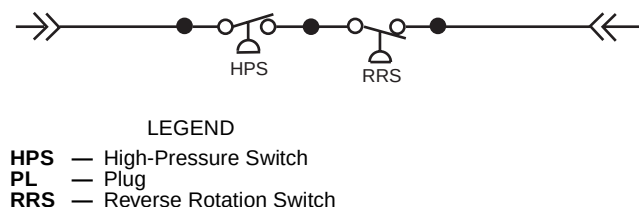


Fig. 21 — Reverse Rotation Switch Wiring

BURNOUT CLEAN-UP PROCEDURE — If a screw compressor motor burns out on a 30GX,HX chiller, a simple clean-up should be performed. The following procedure provides the minimum steps to be taken before restarting the circuit.

1. Remove the oil from the oil separator. This can be facilitated by connecting a hose to the port located on the service valve entering the external oil filter. Run the hose to a container(s) that can hold up to 5 to 6 gallons (19 to 20 L) of oil. To force out most of the oil in the separator pressurize the circuit. To remove the remaining oil, the pre-lube pump can be run in **TEST ALARM** mode from the HSIO. To prevent wear to the gears, do not allow the pre-lube pump to operate "dry."
2. Remove the failed compressor following the Compressor Changeout Sequence procedure above.
3. Once the compressor is removed access the oil catch pan through the cooler-compressor mounting flange. Clean out any debris which may have collected in the oil catch pan.
4. Install a new compressor.
5. To dilute and remove any residual oil left in the separator, pump approximately $\frac{1}{2}$ gallon (2 L) of compressor oil into the oil separator using the Schrader port located on top of the separator (30GX) or on the discharge line (30HX) and remove using the pre-lube pump described in Step 1.
6. Disconnect the hose from the external oil filter service valve.
7. Install a new filter drier and compressor external oil filter.
8. Measure in the amount of Castrol SW 220 Polyolester oil as specified on the nameplate of the chiller.
9. Leak check, evacuate and recharge the machine as described in this manual with the amount of R-134a stated on the chiller nameplate.
10. Perform periodic acid checks on the circuit and change the filter drier in the motor cooling line as necessary. Use the Carrier Standard Service Techniques Manual as a source of reference.

Moisture-Liquid Indicator — Clear flow of liquid refrigerant indicates sufficient charge in the system. Note, however, that bubbles in the sight glass do not necessarily indicate insufficient charge. Moisture in the system is measured in parts per million (ppm), changes of color of indicator are:

Green — moisture is below 80 ppm;
Yellow-green (chartreuse) — 80 to 225 ppm (caution);
Yellow (wet) — above 225 ppm.

Change filter drier at the first sign of moisture in the system.

IMPORTANT: Unit must in operation for at least 12 hours before moisture indicator can give an accurate reading. With the unit running, the indicating element must be in contact with liquid refrigerant to give true reading.

Filter Drier — Whenever moisture-liquid indicator shows presence of moisture, replace filter drier. Refer to Carrier Standards Service Technique Manual, Chapter 1, Refrigerants, for details on servicing filter driers. Cleanable strainers have been installed in each circuit's liquid line to aid in removal of system contaminants and debris.

Liquid Line Service Valve — This valve is located ahead of the filter drier and provides a $\frac{1}{4}$ -in. Schrader connection (30GX only) for field charging. In combination with compressor discharge service valve, each circuit can be pumped down into the high side for servicing.

Thermistors — To aid in verifying thermistor performance, resistances at various temperatures are listed for all thermistors (except motor thermistors) in Tables 42A and 42B. See Table 43 for motor thermistor values.

LOCATION — General location of thermistor sensors and terminal connections in the control box are listed in Table 2.

THERMISTOR REPLACEMENT

⚠ CAUTION

Liquid level thermistors are installed in the top of the cooler using compression fittings. All other thermistors are installed in wells and will slide out of the wells easily. The wells are under refrigerant pressure (cooler EWT and LWT are under waterside pressure) and do not need to be removed to replace a faulty thermistor.

To replace thermistors T1, T2, T5, or T6 (Entering, Leaving Water; Discharge Gas Temperature):

Disconnect appropriate wires from PSIO-2 in unit control box. Remove thermistor cable from harness. Remove and discard original thermistor from well. Insert new thermistor in well body to its full depth. Add a small amount of thermal conductive grease to thermistor probe and well. Thermistors are friction-fit thermistors and will slip back into well located at the cooler head (T1, T2) or at the top of the condenser shell (T5, T6). Secure thermistor to well body with a wire tie to prevent thermistor from working its way out of the well. See Fig. 22.

To replace thermistors T3 or T4 (Liquid Level Sensors):

See the Inspecting/Opening Economizers section on page 53 for information on transferring the refrigerant charge to the high side. Transfer refrigerant and recover any refrigerant remaining in the low side.

NOTE: A new packing nut and ferrule will be required as the old one is not removable from the old thermistor.

For all units, disconnect plug assembly at liquid level sensor. Loosen the packing nut fully from the well threads. Remove and discard old thermistor and packing nut. Slide new packing nut then ferrule up onto new thermistor probe from inserted end. Insertion depth is dependent on unit model number. See Fig. 23 and Table 44.

Hand tighten packing nut to position ferrule while holding thermistor in position. With wrench, tighten enough to firmly secure thermistor in place in well. Run new harness wires into main control box for 30GX080-176 and all 30HX units. Reconnect blue wires at PSIO-1 for thermistor reading and red wires to TRAN-7. Reconnect plug assembly to new liquid level sensor for 30GX205-265 units. Restore unit control power only and verify that level thermistor is reading correctly. Check system low side for leaks and repair as necessary. Evacuate low side and open circuit discharge and liquid valves.

To service compressor motor thermistors:

Two thermistors are factory installed in each compressor. Connections for the thermistors are located in the compressor junction box. There are 3 terminals for the thermistors: S1, S2, and C. Motor temperature is measured by leads connected to one of the S terminals and the C terminal. If a compressor motor thermistor failure occurs, verify that there is a true short or open circuit at these terminals. If one of the thermistors fails, disconnect and relocate the wire on one of the S terminals to the other S terminal (S1 to S2 or S2 to S1). The thermistors are not serviceable in the field. If both of the compressor motor thermistors fail, compressor replacement is required. See Table 43 for motor thermistor temperature and resistance values.

Pressure Transducers — A single style of pressure transducer is used for both high- and low-pressure sensing on

the 30GX,HX chillers. The transducers operate on a 5 vdc supply. The power supply for this is a 24 vac to 5 vdc full wave rectified power supply, PS1. See unit component arrangement label for mounting location and terminal connections in the control box. Refer to Fig. 24A and 24B for pressure transducer locations.

PRESSURE TRANSDUCER CALIBRATION — Pressure transducers are factory installed on all models to read Discharge, Suction, Economizer (reads leaving condenser pressure on models without economizer), and Oil pressure. DO NOT attempt to calibrate any of these transducers by the pressure gage method unless the transducer is connected to a fully charged refrigerant system. A more accurate method of calibration is used by the 30GX,HX software and corrects for ambient temperature when calibrating. Calibrating a transducer when the system is under nitrogen charge will result in an incorrect offset being applied to the reading (due to temperature correction). Although these transducers are calibrated at the factory, replacement transducers require calibration for accurate readings. Calibration is also required when replacing a PSIO. Access to the transducer calibration area is through the Service function and the transducers can be calibrated at the current system pressure using a pressure gage at the same point or exposed to atmospheric pressure. In the example in Table 45, the Circuit A Discharge Pressure transducer has been replaced and needs to be calibrated. A pressure gage has been installed at the transducer and reads 85 psi (must be in the range of -5.0 to 185.0 psi). See Table 45.

⚠ CAUTION

Use care when removing the oil pressure transducers from the compressor fitting. The fitting that the transducers mount in is sealed with an O-ring Schrader fitting into the compressor casting. Do NOT overtighten the transducer when replacing after calibration. Hold both fittings with wrenches when removing and reinstalling.

The control will apply the 0.8 psi offset from the calibration example in Table 45 to all future readings. The calibration process for any of the other pressure transducers is done in a similar manner. A transducer can also be calibrated at atmospheric pressure by removing the transducer from the system. To do this, carefully unplug the transducer connector. Unscrew the transducer from its mounting location and reconnect the connector. Follow the steps in Table 45 to read the current pressure and enter 0.0 psig as the gage pressure. Remove the connector from the transducer, thread the transducer back onto the fitting from which it was removed (do NOT use thread sealant/compound), and reinstall the connector. Maximum offset is 6 psig.

If it is necessary, all of the transducers may be calibrated at 0.0 psig. All of the transducers must be removed from the system and reconnected in atmosphere as described. When complete, scroll down under   to "Calibrate All at 0 PSIG" and press. A "Yes" will be displayed at this step and will automatically change back to "No" once all transducers have been successfully calibrated. Reconnect the transducers and connectors as described above. All transducers are mounted on Schrader fittings. Therefore, it is NOT necessary to remove system refrigerant charge. Use a catch pan when removing the oil pressure transducer for calibration as oil will leak out through the Schrader fitting.

TROUBLESHOOTING — If transducer is suspected of being faulty, first check supply voltage to transducer. Supply voltage should be 5 vdc $\pm$.2 v. If supply voltage is correct, compare pressure reading displayed on keypad and display module against pressure shown on a calibrated pressure gage. If the 2 pressure readings are not reasonably close, replace pressure transducer.

**Table 42A — Thermistor Temperatures (°F) vs Resistance/Voltage Drop
(NOTE: These values do NOT Apply to the Motor Temperature Thermistors)**

TEMP (F)	VOLTAGE DROP (V)	RESISTANCE (Ohms)	TEMP (F)	VOLTAGE DROP (V)	RESISTANCE (Ohms)	TEMP (F)	VOLTAGE DROP (V)	RESISTANCE (Ohms)
-25	4.821	98,010	59	3.437	7,868	143	1.250	1,190
-24	4.818	94,707	60	3.409	7,665	144	1.230	1,165
-23	4.814	91,522	61	3.382	7,468	145	1.211	1,141
-22	4.806	88,449	62	3.353	7,277	146	1.192	1,118
-21	4.800	85,486	63	3.323	7,091	147	1.173	1,095
-20	4.793	82,627	64	3.295	6,911	148	1.155	1,072
-19	4.786	79,871	65	3.267	6,735	149	1.136	1,050
-18	4.779	77,212	66	3.238	6,564	150	1.118	1,029
-17	4.772	74,648	67	3.210	6,399	151	1.100	1,007
-16	4.764	72,175	68	3.181	6,238	152	1.082	986
-15	4.757	69,790	69	3.152	6,081	153	1.064	965
-14	4.749	67,490	70	3.123	5,929	154	1.047	945
-13	4.740	65,272	71	3.093	5,781	155	1.029	925
-12	4.734	63,133	72	3.064	5,637	156	1.012	906
-11	4.724	61,070	73	3.034	5,497	157	0.995	887
-10	4.715	59,081	74	3.005	5,361	158	0.978	868
-9	4.705	57,162	75	2.977	5,229	159	0.962	850
-8	4.696	55,311	76	2.947	5,101	160	0.945	832
-7	4.688	53,526	77	2.917	4,976	161	0.929	815
-6	4.676	51,804	78	2.884	4,855	162	0.914	798
-5	4.666	50,143	79	2.857	4,737	163	0.898	782
-4	4.657	48,541	80	2.827	4,622	164	0.883	765
-3	4.648	46,996	81	2.797	4,511	165	0.868	750
-2	4.636	45,505	82	2.766	4,403	166	0.853	734
-1	4.624	44,066	83	2.738	4,298	167	0.838	719
0	4.613	42,679	84	2.708	4,196	168	0.824	705
1	4.602	41,339	85	2.679	4,096	169	0.810	690
2	4.592	40,047	86	2.650	4,000	170	0.797	677
3	4.579	38,800	87	2.622	3,906	171	0.783	663
4	4.567	37,596	88	2.593	3,814	172	0.770	650
5	4.554	36,435	89	2.563	3,726	173	0.758	638
6	4.540	35,313	90	2.533	3,640	174	0.745	626
7	4.527	34,231	91	2.505	3,556	175	0.734	614
8	4.514	33,185	92	2.476	3,474	176	0.722	602
9	4.501	32,176	93	2.447	3,395	177	0.710	591
10	4.487	31,202	94	2.417	3,318	178	0.700	581
11	4.472	30,260	95	2.388	3,243	179	0.689	570
12	4.457	29,351	96	2.360	3,170	180	0.678	561
13	4.442	28,473	97	2.332	3,099	181	0.668	551
14	4.427	27,624	98	2.305	3,031	182	0.659	542
15	4.413	26,804	99	2.277	2,964	183	0.649	533
16	4.397	26,011	100	2.251	2,898	184	0.640	524
17	4.381	25,245	101	2.217	2,835	185	0.632	516
18	4.366	24,505	102	2.189	2,773	186	0.623	508
19	4.348	23,789	103	2.162	2,713	187	0.615	501
20	4.330	23,096	104	2.136	2,655	188	0.607	494
21	4.313	22,427	105	2.107	2,597	189	0.600	487
22	4.295	21,779	106	2.080	2,542	190	0.592	480
23	4.278	21,153	107	2.053	2,488	191	0.585	473
24	4.258	20,547	108	2.028	2,436	192	0.579	467
25	4.241	19,960	109	2.001	2,385	193	0.572	461
26	4.223	19,393	110	1.973	2,335	194	0.566	456
27	4.202	18,843	111	1.946	2,286	195	0.560	450
28	4.184	18,311	112	1.919	2,239	196	0.554	445
29	4.165	17,796	113	1.897	2,192	197	0.548	439
30	4.145	17,297	114	1.870	2,147	198	0.542	434
31	4.125	16,814	115	1.846	2,103	199	0.537	429
32	4.103	16,346	116	1.822	2,060	200	0.531	424
33	4.082	15,892	117	1.792	2,018	201	0.526	419
34	4.059	15,453	118	1.771	1,977	202	0.520	415
35	4.037	15,027	119	1.748	1,937	203	0.515	410
36	4.017	14,614	120	1.724	1,898	204	0.510	405
37	3.994	14,214	121	1.702	1,860	205	0.505	401
38	3.968	13,826	122	1.676	1,822	206	0.499	396
39	3.948	13,449	123	1.653	1,786	207	0.494	391
40	3.927	13,084	124	1.630	1,750	208	0.488	386
41	3.902	12,730	125	1.607	1,715	209	0.483	382
42	3.878	12,387	126	1.585	1,680	210	0.477	377
43	3.854	12,053	127	1.562	1,647	211	0.471	372
44	3.828	11,730	128	1.538	1,614	212	0.465	367
45	3.805	11,416	129	1.517	1,582	213	0.459	361
46	3.781	11,112	130	1.496	1,550	214	0.453	356
47	3.757	10,816	131	1.474	1,519	215	0.446	350
48	3.729	10,529	132	1.453	1,489	216	0.439	344
49	3.705	10,250	133	1.431	1,459	217	0.432	338
50	3.679	9,979	134	1.408	1,430	218	0.425	332
51	3.653	9,717	135	1.389	1,401	219	0.417	325
52	3.627	9,461	136	1.369	1,373	220	0.409	318
53	3.600	9,213	137	1.348	1,345	221	0.401	311
54	3.575	8,973	138	1.327	1,318	222	0.393	304
55	3.547	8,739	139	1.308	1,291	223	0.384	297
56	3.520	8,511	140	1.291	1,265	224	0.375	289
57	3.493	8,291	141	1.289	1,240	225	0.366	282
58	3.464	8,076	142	1.269	1,214			

Table 42B — Thermistor Temperatures (°C) vs Resistance/Voltage Drop
(NOTE: These values do NOT Apply to the Motor Temperature Thermistors)

TEMP (C)	VOLTAGE DROP (V)	RESISTANCE (Ohms)	TEMP (C)	VOLTAGE DROP (V)	RESISTANCE (Ohms)	TEMP (C)	VOLTAGE DROP (V)	RESISTANCE (Ohms)
-40	4.896	168,230	10	3.680	9,949	60	1.291	1,244
-39	4.889	157,440	11	3.633	9,485	61	1.258	1,200
-38	4.882	147,410	12	3.585	9,044	62	1.225	1,158
-37	4.874	138,090	13	3.537	8,627	63	1.192	1,118
-36	4.866	129,410	14	3.487	8,231	64	1.160	1,079
-35	4.857	121,330	15	3.438	7,855	65	1.129	1,041
-34	4.848	113,810	16	3.387	7,499	66	1.099	1,006
-33	4.838	106,880	17	3.337	7,161	67	1.069	971
-32	4.828	100,260	18	3.285	6,840	68	1.040	938
-31	4.817	94,165	19	3.234	6,536	69	1.012	906
-30	4.806	88,480	20	3.181	6,246	70	0.984	876
-29	4.794	83,170	21	3.129	5,971	71	0.949	836
-28	4.782	78,125	22	3.076	5,710	72	0.920	805
-27	4.769	73,580	23	3.023	5,461	73	0.892	775
-26	4.755	69,250	24	2.970	5,225	74	0.865	747
-25	4.740	65,205	25	2.917	5,000	75	0.838	719
-24	4.725	61,420	26	2.864	4,786	76	0.813	693
-23	4.710	57,875	27	2.810	4,583	77	0.789	669
-22	4.693	54,555	28	2.757	4,389	78	0.765	645
-21	4.676	51,450	29	2.704	4,204	79	0.743	623
-20	4.657	48,536	30	2.651	4,028	80	0.722	602
-19	4.639	45,807	31	2.598	3,861	81	0.702	583
-18	4.619	43,247	32	2.545	3,701	82	0.683	564
-17	4.598	40,845	33	2.493	3,549	83	0.665	547
-16	4.577	38,592	34	2.441	3,404	84	0.648	531
-15	4.554	36,476	35	2.389	3,266	85	0.632	516
-14	4.531	34,489	36	2.337	3,134	86	0.617	502
-13	4.507	32,621	37	2.286	3,008	87	0.603	489
-12	4.482	30,866	38	2.236	2,888	88	0.590	477
-11	4.456	29,216	39	2.186	2,773	89	0.577	466
-10	4.428	27,633	40	2.137	2,663	90	0.566	456
-9	4.400	26,202	41	2.087	2,559	91	0.555	446
-8	4.371	24,827	42	2.039	2,459	92	0.545	436
-7	4.341	23,532	43	1.991	2,363	93	0.535	427
-6	4.310	22,313	44	1.944	2,272	94	0.525	419
-5	4.278	21,163	45	1.898	2,184	95	0.515	410
-4	4.245	20,079	46	1.852	2,101	96	0.506	402
-3	4.211	19,058	47	1.807	2,021	97	0.496	393
-2	4.176	18,094	48	1.763	1,944	98	0.486	385
-1	4.140	17,184	49	1.719	1,871	99	0.476	376
0	4.103	16,325	50	1.677	1,801	100	0.466	367
1	4.065	15,515	51	1.635	1,734	101	0.454	357
2	4.026	14,749	52	1.594	1,670	102	0.442	346
3	3.986	14,026	53	1.553	1,609	103	0.429	335
4	3.945	13,342	54	1.513	1,550	104	0.416	324
5	3.903	12,696	55	1.474	1,493	105	0.401	312
6	3.860	12,085	56	1.436	1,439	106	0.386	299
7	3.816	11,506	57	1.399	1,387	107	0.370	285
8	3.771	10,959	58	1.363	1,337			
9	3.726	10,441	59	1.327	1,290			

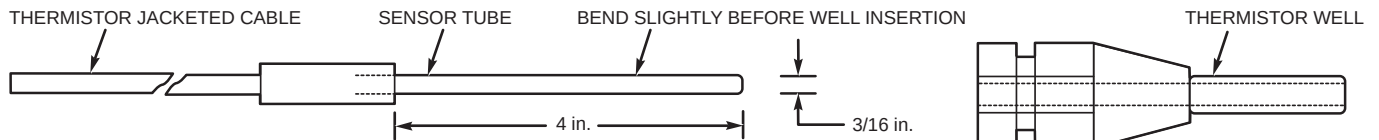


Fig. 22 — Thermistor Replacement (T1, T2, T5, or T6)

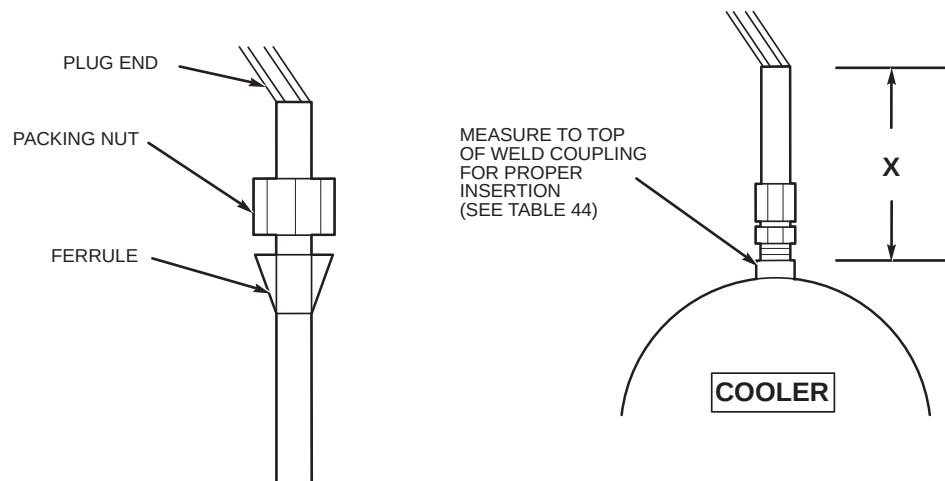


Fig. 23 — Thermistor (Liquid Level Sensor) Replacement

Table 43 Thermistor Temperatures vs Resistance, Motor Temperature Thermistors

TEMP (F)	TEMP (C)	RESISTANCE (Ohms)
-22	-30	88,480.0
-13	-25	65,205.0
-4	-20	48,536.0
5	-15	36,476.0
14	-10	27,663.0
23	-5	21,163.0
32	0	16,325.0
41	5	12,696.0
50	10	9,949.5
59	15	7,855.5
68	20	6,246.0
77	25	5,000.0
86	30	4,028.4
95	35	3,265.7
104	40	2,663.2
113	45	2,184.2
122	50	1,801.2
131	55	1,493.1
140	60	1,243.9
149	65	1,041.4
158	70	875.8
167	75	739.7
176	80	627.6
185	85	534.9
194	90	457.7
203	95	393.3
212	100	339.3
221	105	293.8
230	110	255.3
239	115	222.6
248	120	194.8

NOTE: Motor temperature thermistor values must be verified using resistance. Voltage drop cannot be used.

**Table 44 — Thermistor
(Liquid Level Sensor) Depth**

UNIT MODEL NUMBER	THERMISTOR DEPTH "X"-in. (mm)
30GX080-090	6.00 (152.4)
30GX105-115	4.25 (108.0)
30GX125-136	5.56 (141.2)
30GX150,151	6.00 (152.4)
30GX160,161	4.25 (108.0)
30GX175,176	4.25 (108.0)
30GX205-226	3.94 (100.0)
30GX250-265	4.82 (122.4)
30GX281-350	5.00 (127.0)
30HXA, C076-086	5.13 (130.3)
30HXA, C096	6.00 (152.4)
30HXA, C106	4.25 (108.0)
30HXA, C116-126	5.13 (130.3)
30HXA, C136-146	6.00 (152.4)
30HXA, C161-171	4.25 (108.0)
30HXA, C186	5.56 (141.2)
30HXA, C206	3.94 (100.0)
30HXA, C246-271	4.82 (122.4)

**Table 45 — Calibrating Pressure Transducers
(Pressure Gauge Installed)**

KEYPAD ENTRY	DISPLAY RESPONSE	COMMENTS
7 [SRVC]	CALIBRATION OFFSET	
▼	CIRCUIT A PRESSURE	
▼	Discharge Pressure 84.2 PSI	Current reading is displayed.
8 5 . 0 [ENTER]	Discharge Pressure 85.0 PSI	Enter gauge pressure reading to nearest tenth. Control will allow offset of up to 6 psig. Transducer calibration is now complete.

Safety Devices — The 30GX/HX chillers contain many safety devices and protection logic built into the electronic control. Following is a description of the major safeties.

COMPRESSOR PROTECTION

Motor Overload — The compressor protection modules (CPM) protect each compressor against overcurrent. Do not bypass the current transducers or make any changes to the factory-installed and configured 8 pin headers. The configuration of these headers defines the Must Trip Amps (MTA) at which the CPM will turn the compressors off. Determine the cause for trouble and correct the problem before resetting the CPM. See Appendix A for setting of MTAs and configuration headers.

Each CPM board also reads the status of each compressor's high-pressure switch. All compressors have factory-installed high-pressure switches. For 30GX units, the switch is set to trip at 303 ± 7 psig (2089 ± 48 kPa). The setting for 30HXA units is 275 ± 7 psig (1896 ± 48 kPa) and for 30HXC units the setting is 191 ± 7 psig (1317 ± 48 kPa). If the switch opens during operation, the compressor will be shut down. The CPM will reset automatically when the switch closes, however, a manual reset is required to restart the compressor.

OIL SEPARATOR HEATERS (30GX) — Each oil separator circuit has a heater mounted on the underside of the vessel. The heater is energized with control circuit power. Oil heaters are energized when the discharge gas temperature falls below 105 F (40.6 C). The heaters are deenergized when the discharge gas temperature rises above 110 F (43.3 C). The control will allow the chiller to attempt to start with the heaters energized and will keep the heaters on, even when running, until the discharge gas temperature reaches 110 F (43.3 C). Note that the oil heaters are deenergized if the oil level switch is open.

COOLER PROTECTION

Low Water Temperature — Microprocessor is programmed to shut the chiller down if the leaving fluid temperature drops below 34 F (1.1 C) for water or more than 8° F (4.4° C) below set point for brine units. When the fluid temperature rises 6° F (3.3° C) above the leaving fluid set point, the safety resets and the chiller restarts. Reset is automatic as long as this is the first occurrence of the day.

IMPORTANT: If the unit is installed in an area where ambient temperatures fall below 32 F (0° C), cooler heaters and inhibited ethylene glycol or other suitable solution must be used in the chilled fluid circuit.

Relief Devices — Fusible plugs are located in each circuit (30GX only) between the condenser and the liquid line shutoff valve.

PRESSURE RELIEF VALVES — Valves are installed in each circuit and are located on all coolers. One relief valve is also installed on each 30HXC condenser. Both circuits' oil separators on 30GX and 30HXA units have factory-installed relief valves as well. These valves are designed to relieve if an abnormal pressure condition arises. Relief valves on all coolers and 30HXC condensers relieve at 220 psi (1517 kPa). Relief valves on 30GX and 30HXA oil separators relieve at 320 psi (2206 kPa). All 30HXA, HXC units with factory-installed suction service valves also have a relief valve in each compressor discharge line. These valves are designed to relieve at 350 psig (2413 kPa). These valves should not be capped. If a valve relieves, it should be replaced. If the valve is not replaced, it may relieve at a lower pressure, or leak due to trapped dirt from the system which may prevent resealing.

Pressure relief valves located on cooler and condenser shells and 30HXA oil separator shells have $\frac{3}{4}$ -in. NPT connections for relief. The 30GX oil separators have $\frac{1}{2}$ -in. male flare connections. Some local building codes require that relieved gases be removed. This connection allows conformance to this requirement.

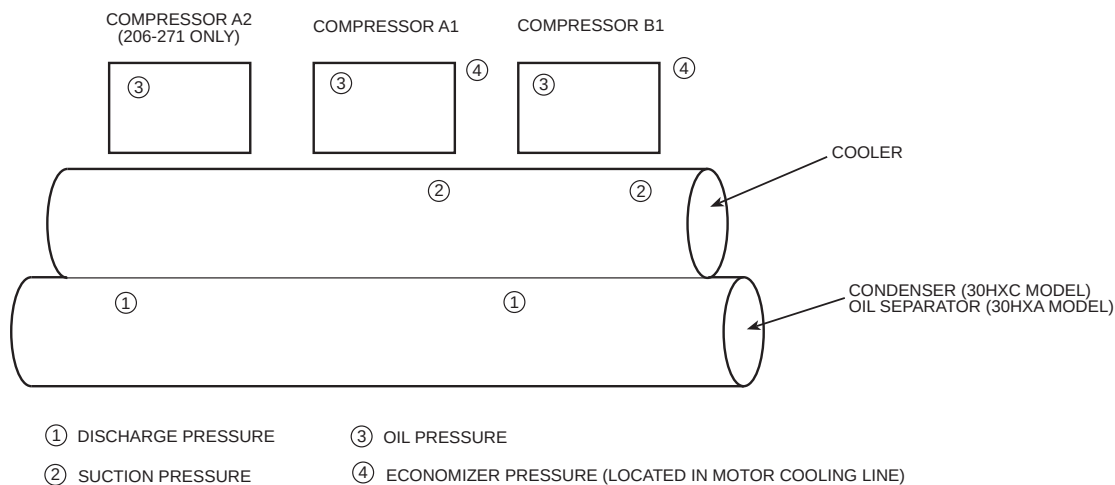


Fig. 24A — 30HX Pressure Transducer Locations

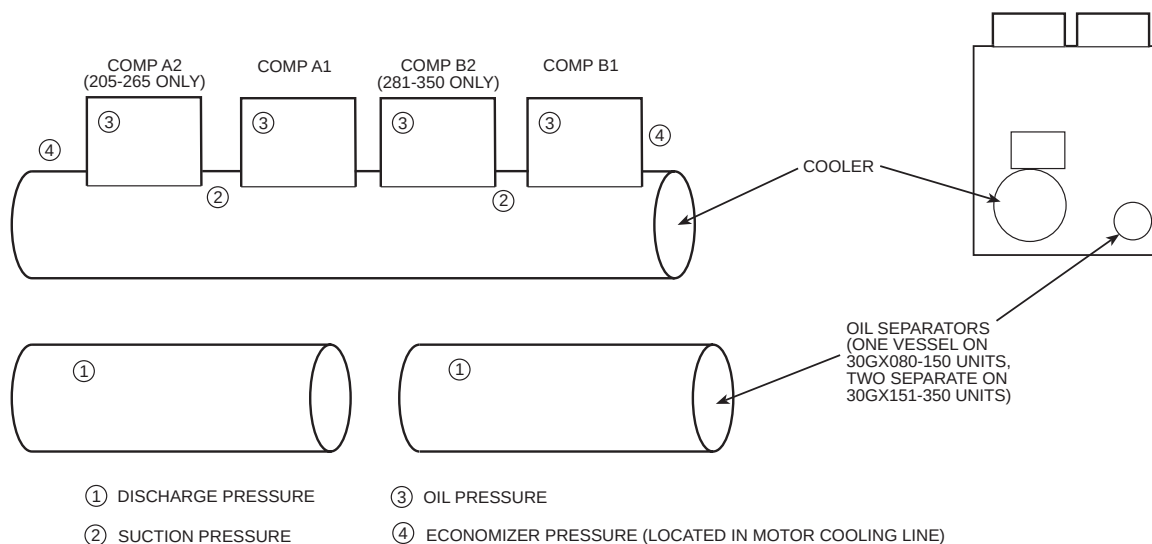


Fig. 24B — 30GX Pressure Transducer Locations

Control Modules

⚠ CAUTION

Turn controller power off before servicing controls. This ensures safety and prevents damage to controller.

PROCESSOR MODULE (PSIO-1), COMPRESSOR PROTECTION MODULE (CPM), HIGH-VOLTAGE RELAY MODULE (DSIO-HV), AND EXV DRIVER MODULE (DSIO-EXV), 12/6 MODULE (PSIO-2) — The PSIO and DSIO modules all perform continuous diagnostic evaluations of the condition of the hardware. Proper operation of these modules is indicated by LEDs on the front surface of the DSIOs, and on the top horizontal surface of the PSIOs.

RED LED — Blinking continuously at a 1 to 2 second rate indicates proper operation. Lighted continuously indicates a problem requiring replacement of module. Off continuously indicates power should be checked. If there is no input power, check fuses. If fuse is bad, check for shorted secondary of transformer, tripped circuit breaker or bad module. On the PSIO module, if the light is blinking at a rate of twice per second, the module should be replaced.

GREEN LED — On a PSIO module, this is the green LED closest to COMM connectors. The other green LED on module indicates external communications, when used. Green LED should always be blinking when power is on. It indicates modules are communicating properly. If green LED is not blinking,

check red LED. If red LED is normal, check module address switches. Correct addresses are as follows:

PSIO-1 (Processor Module)	— 01
CPM-1 (Protection Module)	— 20
CPM-2 (Protection Module)	— 32
DSIO (EXV Driver Module)	— 50
DSIO-HV (Relay Module)	— 62
PSIO-2 (12/6 I/O Module)	— 74

The first number of the address for a DSIO module should be set on the switch closest to the silver mounting plate.

If *all* modules indicate communication failure, check COMM plug on PSIO-1 module for proper seating. If a good connection is assured and condition persists, replace PSIO-1 module.

If only a DSIO module indicates communication failure, check COMM plug on that module for proper seating. If a good connection is assured and the condition persists, replace the DSIO module.

All system operating intelligence rests in the PSIO-1 module, the module that controls unit. This module monitors conditions through input and output ports and through DSIO modules (high-voltage relay module and EXV driver module).

The machine operator communicates with microprocessor through keypad and display module. Communication between PSIO and other modules is accomplished by a 3-wire sensor bus. These 3 wires run in parallel from module to module.

On sensor bus terminal strips, terminal 1 of PSIO module is connected to terminal 1 of each of the other modules. Terminals 2 and 3 are connected in the same manner. See Fig. 25. If a terminal 2 wire is connected to terminal 1, system does not work.

In the 30GX control box, the processor module (PSIO-1), DSIO-HV, and HSIO are all powered from a common 21 vac power source (PSIO-1 and HSIO are powered from 24 vac source on 30HX units) which connects to terminals 1 and 2 of the power connector on each module. A separate source of 21 vac power is used to power the PSIO-2 module and liquid level sensor heaters. A separate 12.5 vdc power source is used for the DSIO-EXV module through terminals 1 and 2 on the power connector. The CPM modules are connected to 24 vac power sources. Refer to Table 46 for control troubleshooting information.

CONTROL MODULE BATTERY REPLACEMENT — The PSIO-1 contains software that is stored in the RAM (Random Access Memory). For this reason, a battery is required to maintain power and retain the software in the control module memory.

A 3.6 volt AA lithium battery (part no. CEC0120803-01) is required for all PSIO-1 modules. The nominal voltage is 3.6 to 3.7 volts, which is maintained throughout the life of the battery. The power circuitry is designed so that the battery is always in the circuit. The battery life will diminish faster if the module is not powered. Battery life also depends on the steady state voltage of the unit and the ambient temperature of the module. Battery life expectancy of a 3.6 volt, AA lithium battery is about 4 years. Voltage drops rapidly at the end of battery life.

A part of a yearly maintenance schedule, check the voltage level of the battery on each PSIO-1 module. If the battery reads 3.5 volts or less, the battery is approaching the end of its usage life and should be replaced. The voltage should be measured with the battery in place inside the module. With the control voltage on, check the voltage by placing one test lead on each pole of the battery.

⚠ CAUTION

Power must be applied to PSIO-1 module while replacing battery or software loss will occur.

As part of unit scheduled maintenance, replace the battery every 4 years regardless of voltage reading.

Carrier Comfort Network (CCN) Interface — The 30GX,HX chiller units can be connected to the CCN if desired. The communication bus wiring is a shielded, 3-conductor cable with drain wire and is supplied and installed

in the field. The system elements are connected to the communication bus in a daisy chain arrangement as shown in Fig. 25. The positive pin of each system element communication connector must be wired to the positive pins of the system elements on either side of it. This is also required for the negative and signal ground pins of each system element. Wiring connections for CCN should be made at the COMM1 plug on the PSIO-1 module. Consult the CCN Contractor's Manual for further information.

NOTE: Conductors and drain wire must be 20 AWG (American Wire Gauge) minimum stranded, tinned copper. Individual conductors must be insulated with PVC, PVC/nylon, vinyl, Teflon, or polyethylene. An aluminum/polyester 100% foil shield and an outer jacket of PVC, PVC/nylon, chrome vinyl, or Teflon with a minimum operating temperature range of -20 C to 60 C is required. Wire manufactured by Alpha (2413 or 5463), American (A22503), Belden (8772), or Columbia (02525) meets the above mentioned requirements.

It is important when connecting to a CCN communication bus that a color coding scheme be used for the entire network to simplify the installation. It is recommended that red be used for the signal positive, black for the signal negative, and white for the signal ground. Use a similar scheme for cables containing different colored wires.

At each system element, the shields of its communication bus cables must be tied together. If the communication bus is entirely within one building, the resulting continuous shield must be connected to a ground at one point only. If the communication bus cable exits from one building and enters another, the shields must be connected to grounds at the lightning suppressor in each building where the cable enters or exits the building (one point per building only). To connect the unit to the network:

1. Turn off power to the control box.
2. Cut the CCN wire and strip the ends of the red (+), white (ground), and black (-) conductors. (Substitute appropriate colors for different colored cables.)
3. Remove the 4-pin female plug from the PSIO-1 COMM1 plug and connect the red wire to terminal 1 of the plug, the white wire to terminal 2, and the black wire to terminal 3.
4. Insert the plug back into the COMM1 plug.

IMPORTANT: A shorted CCN bus cable will prevent some routines from running and may prevent the unit from starting. If abnormal conditions occur, unplug the connector. If conditions return to normal, check the CCN connector and cable. Run new cable if necessary. A short in one section of the bus can cause problems with all system elements on the bus.

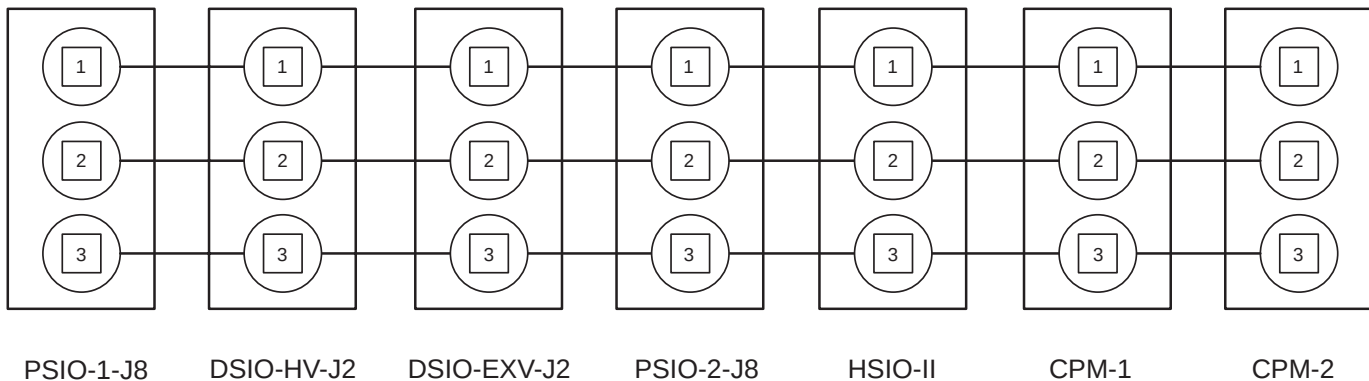


Fig. 25 — Sensor Bus Wiring (Communications)

Table 46 — Compressor Control Troubleshooting

SYMPTOMS	CAUSE	REMEDY
COMPRESSOR DOES NOT RUN	Power line open Control fuse open High-Pressure Switch (HPS) tripped Tripped motor overload Loose terminal connection Improperly wired controls Low line voltage Compressor motor defective Seized compressor Pre-lubrication not successful	Check main disconnect. Check control circuit for ground or short. Replace fuse. Move LOCAL/OFF/REMOTE switch to OFF position then back to LOCAL or REMOTE position. Check the controls. Find cause of trip. Reset overload. Check connections. Check wiring and rewire. Check line voltage. Determine location of voltage drop and remedy deficiency. Check motor winding for open or short. Replace compressor if necessary. Replace compressor. Check oil pump operation, oil pressure transducer, verify oil level/flow switch operation.
COMPRESSOR CYCLES OFF ON LOW PRESSURE	Loss of charge Bad transducer Low refrigerant charge Failed expansion device	Repair leak and recharge. Replace transducer. Add refrigerant. Repair/replace as needed.
COMPRESSOR SHUTS DOWN ON HIGH PRESSURE CONTROL	High-pressure switch erratic in action Compressor discharge valve partially closed Condenser fan(s) not operating (air cooled units) Condenser coil plugged or dirty (air cooled units) Condenser water valve not operating (water cooled units) Circuit overcharged Liquid valve closed*	Replace switch. Open valve or replace if defective. Check wiring. Repair or replace motor(s) if defective. Clean coil. Check wiring. Repair or replace valve if defective. Clean condenser. Open valve or replace if defective.
UNIT OPERATES LONG OR CONTINUOUSLY	Low refrigerant charge Control contacts fused Partially plugged or plugged expansion valve or filter drier Defective insulation Service load exceeding design capacity Inefficient compressor	Add refrigerant. Replace control. Clean or replace. Replace or repair. Keep doors and windows closed. Check loader solenoid valves. Replace if necessary.
SYSTEM NOISES	Piping vibration Expansion valve hissing Compressor noisy	Support piping as required. Add refrigerant. Check for plugged liquid line filter drier. Replace compressor (worn bearings). Check for loose compressor bolts securing compressor to cooler.
COMPRESSOR LOSES OIL	Leak in system Mechanical damage to rotors	Find and repair leak. Replace compressor.
HOT LIQUID LINE	Shortage of refrigerant due to leak	Repair leak and recharge.
FROSTED LIQUID LINE	Shutoff valve partially closed or restricted	Open valve or remove restriction.
COMPRESSOR LOADERS NOT WORKING PROPERLY	Burned out coil Defective capacity control valve Miswired solenoid	Replace coil. Replace valve. Rewire correctly.

*30GX251, 265 sizes have two Circuit A discharge and liquid valves.

PROCESSOR MODULE (PSIO-1)

Inputs — Each input channel has 3 terminals; only 2 of the terminals are used. Application of machine determines which terminals are used. Always refer to the individual unit wiring for terminal numbers.

Outputs — Output is 20 vdc or 4 to 20 mA. There are 3 terminals, only 2 of which are used, depending on the application. Refer to unit the wiring diagram.

NOTE: The 12/6 Input/Output module (PSIO-2) has identical input and output configurations as the PSIO-1. There is NO operating software in the PSIO-2 module.

HIGH VOLTAGE RELAY MODULE (DSIO-HV)

Inputs — Inputs on strip J3 are discrete inputs (ON/OFF). When 24-vac power is applied across the 2 terminals in a channel it reads the input as an On signal. Zero volts input is read as an Off signal.

Outputs — Terminal strips J4 and J5 are internal relays whose coils are signaled to be turned on and off by the microprocessor (PSIO-1). The relays switch the circuit to which they are connected. No power is supplied to these connections by DSIO-HV module.

Replacing Defective Processor Module — The PSIO-1 module replacement part numbers are shown in Table 47. The unit model and serial numbers are printed on the unit nameplate located on an exterior corner post (30GX) or the corner of the control box (30HX). The proper software and unit configuration data is factory installed by Carrier in the replacement module. Therefore, when ordering a replacement processor module (PSIO-1), specify the replacement part number, *full* unit model number, and serial number. The replacement modules are downloaded with default configuration values that must be verified for proper operation. Using Table 25, enter   from the HSIO and correct any of the configuration codes that do not match those in Table 25 for the corresponding chiller size. If these numbers are not provided, the replacement module will be downloaded with the base software. The base software settings must be reconfigured by the installer in the field.

Verify the existing PSIO-1 module is defective by using the procedure described in the Control Modules section.

Refer to Start-Up Checklist for 30GX,HX Liquid Chillers (completed at time of original start-up) found in the job folder. This information is needed later in this procedure. If the checklist does not exist, fill out the current factory and service configuration codes ( ) sections on a new check-list. Tailor the various options and configurations as needed for this particular installation.

⚠ CAUTION

Electrical shock can cause personal injury. Disconnect all electrical power before servicing.

1. Check that all power to unit is off. Carefully disconnect all wires from defective module by unplugging the 6 connectors. It is not necessary to remove any of the individual wires from the connectors. Remove the screws securing the green ground wire and communication drain wire. Save the screws.
2. Remove the defective PSIO-1 module by removing its mounting screws with a Phillips screwdriver, and removing the module from the control box. Save the screws for later use.

3. Use a small screwdriver to set the address switches S1 and S2 on the new PSIO module to exactly match the settings on the defective module.
4. Package the defective module in the carton of the new module for return to Carrier.
5. Mount the new module in the unit control box using a Phillips screwdriver and the screws saved in Step 2.
6. Reinstall all 6 wire connectors, the green ground wire, and the communications drain wire.
7. Carefully check all wiring connections before restoring power.
8. Verify the LOCAL/OFF/REMOTE switch is in the OFF position.
9. Restore control power. Verify the red and green lights on top of the PSIO-1 and on front of each DSIO module respond as described in Control Modules section. The keypad and display module should also begin its rotating display.
Using the keypad and display module, press   to verify that the software version number matches the ER (engineering requirement) number shown on the PSIO-1 label.
10. Press  , scroll down one level at a time, and check the 3 factory and 2 service configuration codes as recorded on checklist. These codes must exactly match the codes stored in the previous PSIO-1 module for proper unit operation. These should already be downloaded if the proper information was supplied when ordering the replacement module. If the codes do not match, the codes must be entered by the procedure described in the factory service code section of Table 25.
11. Once all codes have been verified, and all configurations, set points, and schedules re-entered, return the LOCAL/OFF/REMOTE switch to its previous position.

Winter Shutdown Preparation — At the end of each cooling season the fluid should be drained from the system. However, due to the cooler circuiting, some fluid will remain in the cooler after draining. To prevent freeze-up damage to the cooler tubes perform the following procedure.

1. If accessory cooler heaters have been installed, deenergize the heaters to prevent damage and possible safety hazards when draining, or when there is no liquid in the system. Remove Fuse 1 to deenergize the heaters. Drain the fluid from the system.
2. Isolate the cooler from the rest of the system with water shut off valves.
3. Fill the cooler with an appropriate amount of inhibited ethylene glycol solution (or other suitable corrosion-inhibitive antifreeze) for 15° F (8.3° C) below the expected low ambient conditions.
4. Leave the cooler filled with the antifreeze solution for the winter, or drain if desired. Be sure to deenergize heaters (if installed) as explained in Step 1 to prevent damage. Use an approved method of disposal when removing the antifreeze solution.

Table 47 — Replacement Processor Module Part Numbers

UNIT	REPLACEMENT MODULE
30GX080-150,160	30GX502892
30GX151,161,175	30GX502891
30GX176	30GX502890
30GX205-265	30GX502842
30GX281-350	30GX503172
30HX076-186	30HX501216
30HX206-271	30HX501215

PRE-START-UP PROCEDURE

IMPORTANT: Before beginning Pre-Start-Up or Start-Up, complete the Start-Up Checklist for the 30GX,HX Liquid Chillers on pages CL-1 to CL-8. This Checklist assures proper start-up of the chiller, and provides a record of unit condition, application requirements, system information and operation at initial start-up. The checklist should be removed from the manual and kept with the job file for future reference.

IMPORTANT: DO NOT ATTEMPT TO START THE CHILLER UNTIL THE FOLLOWING CHECKS HAVE BEEN COMPLETED.

⚠ CAUTION

DO NOT make any changes to the factory-installed compressor power wiring in the control box or at the compressor junction box. Doing so will cause permanent damage to the compressor and will require compressor replacement. Proper phasing has already been checked at the factory.

System Check

1. Check all auxiliary components such as the chilled fluid circulating pump, air-handling equipment, or other equipment to which the chiller supplies liquid. Consult the manufacturer's instructions. If the unit has field-installed accessories, be sure all are properly installed and wired correctly. Refer to the unit wiring diagrams.
2. Check the cooler flow switch for proper configuration and operation (☐ 8 ☐ STAT from HSIO). Ensure the switch closes when the pump is on and opens when the pump is turned off. A flow switch must be installed.
3. Open the discharge and liquid valves in each circuit. The discharge shutoff valves are in-line ball type and are open when parallel with the refrigerant flow.
4. If factory-installed suction service valves are installed, open the suction service valves in each circuit. Service valve is located below the compressor in the cooler suction connection flange. To operate the valve, first remove the cap. Use a back-up wrench on the packing gland to prevent loosening while removing cap. Loosen the jam nut. Turn the stem counterclockwise to open. Tighten the jam nut.
5. Open the oil shutoff valves located by the oil pre-filter. Open bubbler tube valve on 30HX machines equipped with economizers.
6. Check the tightness of all electrical connections. Check incoming power supply for proper nameplate voltage.
7. Check to ensure the unit is level per the installation instructions.
8. Check all field configuration data and set points.

9. Enter correct date, time, and operating schedule(s).
10. Verify operation of solenoids, pumps, valves, compressors, fans, etc. as listed in the Start-Up Checklist.
11. Open condenser water valves. Check condenser water pump for proper operation (30HX).

START-UP AND OPERATION

Actual Start-Up — *Actual start-up should be done only under supervision of a qualified refrigeration mechanic and qualified Carrier Comfort Network personnel.*

1. Set leaving fluid temperature. No cooling range adjustment is necessary.
2. Start chilled fluid pump and condenser pump (30HXC) if not controlled by unit.
3. Switch LOCAL/OFF/REMOTE switch to LOCAL or REMOTE.
4. Provided there is a load on the chiller, allow the machine to operate and confirm that everything is functioning properly. Verify that the leaving fluid temperature agrees with the cooling set point (1 or 2), or if reset is being used, the modified set point. Chiller is controlling to the Control Point displayed under ☐ 2 ☐ STAT.

Operating Sequence — The chiller is started by switching the LOCAL/OFF/REMOTE switch to either LOCAL or REMOTE. If cooler pump control is enabled, the cooler pump is started. If condenser pump control (30HXC) is enabled, the condenser pump is started. On a command for cooling, the oil pump is turned on to start the pre-lubrication process. After 20 seconds, the oil solenoid is opened and the control reads the oil pressure from the transducer and determines if sufficient pressure has been built up. If there is not sufficient pressure, an alarm is generated after the second attempt and the compressor is not started.

Upon building pressure, the compressor is allowed to start. For across-the-line (XL) start chillers, the compressor starts and comes up to full speed within 1 to 3 seconds. For Wye-Delta start chillers, contactors 1M and S (starter contactor assembly) are closed and the compressor is started in a Wye configuration. This method reduces the locked rotor current requirements by approximately 60% while maintaining enough torque to bring the compressor up to full speed.

After 5 seconds, the CPM module switches out contactor S and brings in contactor 2M, which runs the motor in a Delta configuration (same configuration in which XL units run). The oil pump will shut off within 10 seconds after the compressor is started. Once the compressor is successfully running, the control loads the compressor and adds additional stages of capacity as needed to satisfy the leaving fluid set point. Head pressure is controlled by fan cycling (30GX) or can be controlled with a field installed accessory Motormaster® III controller (30GX) or field installed condenser water valves (30HX).

FIELD WIRING

Field wiring is shown in Fig. 26-38.


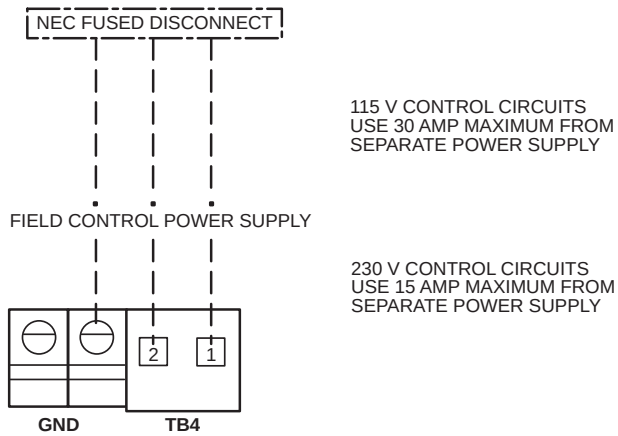


Fig. 26 — Power Supply Wiring

LEGEND FOR FIG. 26-38


ALM	— Alarm
C	— Contactor
CFC	— Condenser Fan Contactor
CPR	— Condenser Pump Relay
CWP	— Chilled Water Pump
DSIO	— High Voltage Relay Module
EQUIP	— Equipment
EXV	— Electronic Expansion Valve
FU	— Fuse
GFI-CO	— Ground Fault Interrupter Convenience Outlet
GND	— Ground
NEC	— National Electrical Code
PL	— Plug
PSIO	— Processor Sensor Input/Output Module
RB	— Relay Board
TB	— Terminal Block
---	Field-Wired
—	Factory Wired

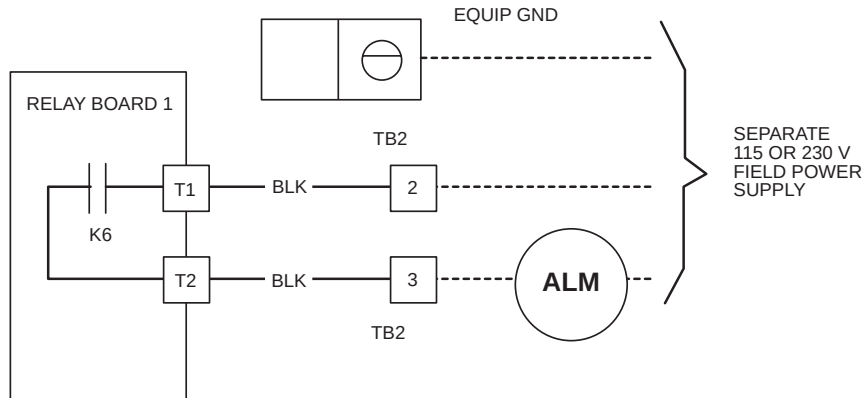

MAX. LOAD ALLOWED FOR THE ALARM RELAY IS
125 VA SEALED, 1250 VA INRUSH AT 115 OR 230 VOLT.
MIN. LOAD 10 VA SEALED.

FIELD SUPPLIED


Fig. 27 — Remote Alarm Relay Accessory Wiring; 30HXA,C

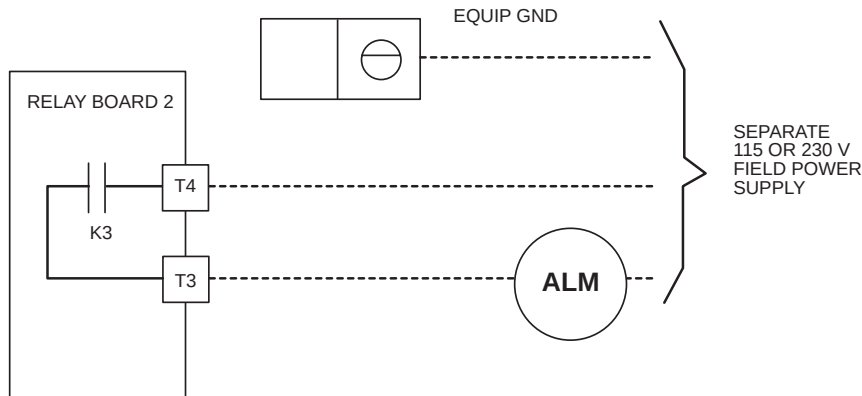

MAX. LOAD ALLOWED FOR THE ALARM RELAY IS
125 VA SEALED, 1250 VA INRUSH AT 115 OR 230 VOLT.
MIN. LOAD 10 VA SEALED.

FIELD SUPPLIED


Fig. 28 — Remote Alarm Relay Accessory Wiring; 30GX

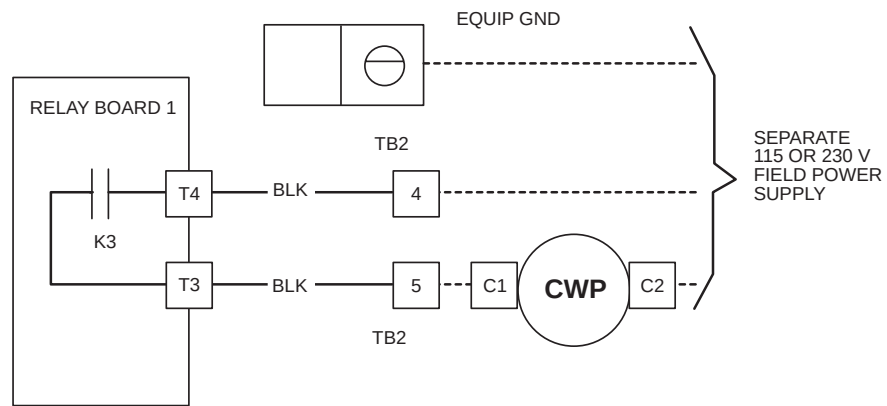

MAX. LOAD ALLOWED FOR THE CWP RELAY IS
125 VA SEALED, 1250 VA INRUSH AT 115 OR 230 VOLT.
MIN. LOAD 10 VA SEALED.

ACCESSORY ONLY

Fig. 29 — Chilled Water Pump Relay Wiring; 30HXA,C

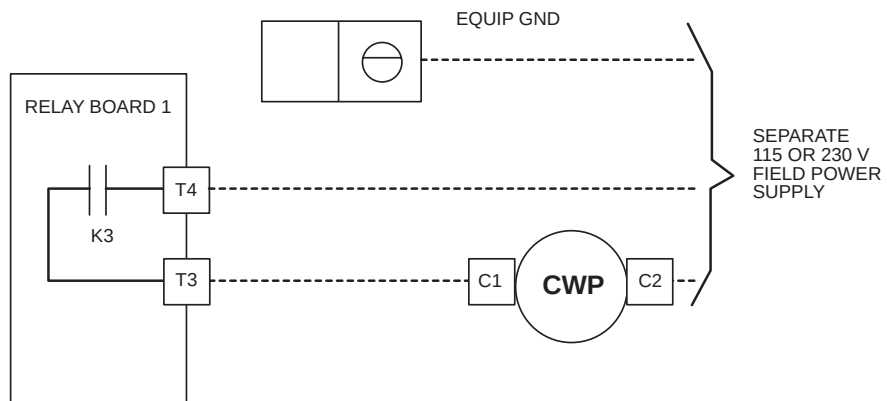

MAX. LOAD ALLOWED FOR THE CWP RELAY IS
125 VA SEALED, 1250 VA INRUSH AT 115 OR 230 VOLT.
MIN. LOAD 10 VA SEALED.

ACCESSORY ONLY

Fig. 30 — Chilled Water Pump Relay Wiring; 30GX


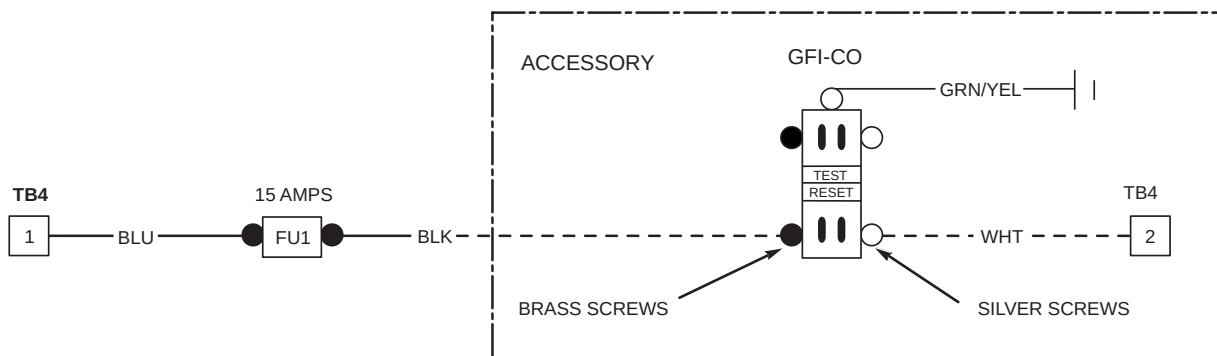


Fig. 31 — Ground Fault Interrupter-Convenience Outlet Accessory Wiring

230V CONTROL CIRCUIT WIRING

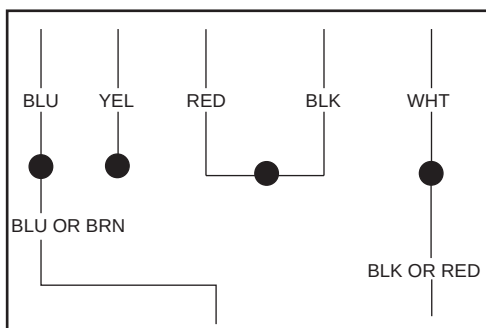

115V CONTROL CIRCUIT WIRING

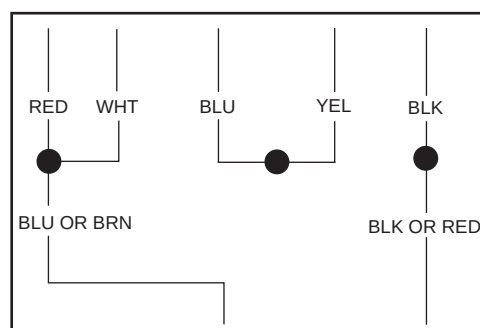


Fig. 32 — Oil Pump Motor Junction Box Wiring



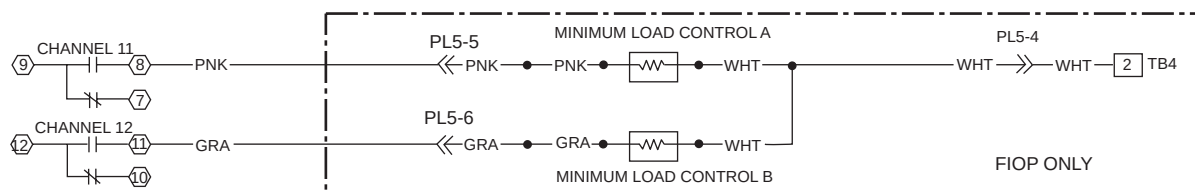


Fig. 33A — 30GX Minimum Load Valve Accessory Wiring

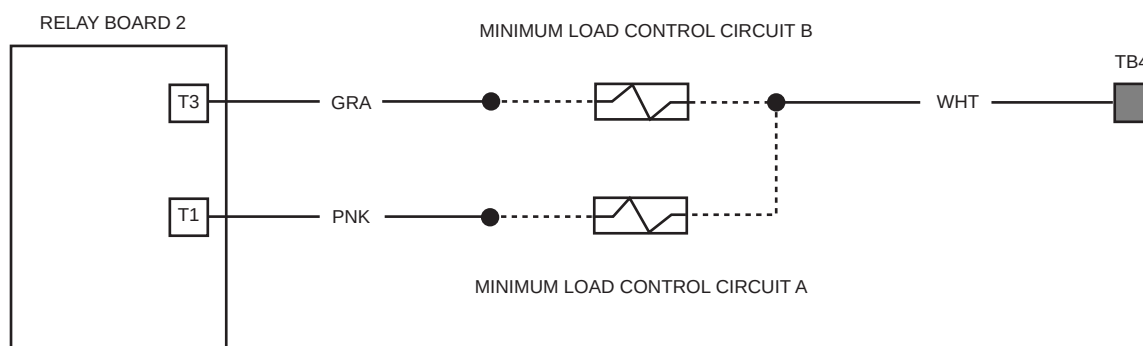

NOTE: Gray, Pink, and White wires are included in the control box as part of the factory wire harness. Field supplied and installed wire is needed from control box to solenoid valves.

Fig. 33B — 30HX Minimum Load Valve Accessory Wiring

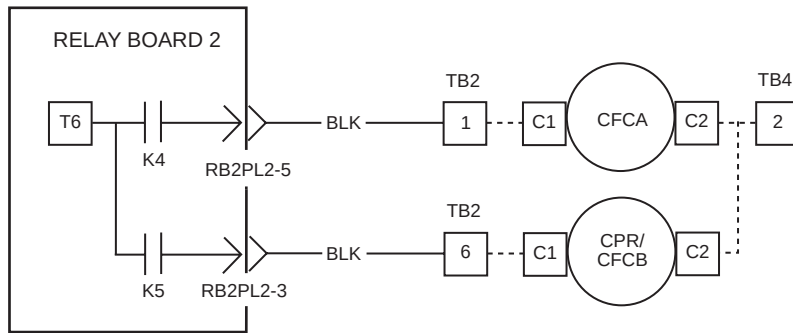

MAX. LOAD ALLOWED AT TB2-1 AND TB2-6 IS
125 VA SEALED, 1250 VA INRUSH AT 115 OR 230 VOLTS.
MIN. LOAD 10 VA SEALED.

FIELD SUPPLIED

Fig. 34 — Condensing Pump Relay Wiring; 30HXC and Remote Condensing Fan On/Off Wiring; 30HXA

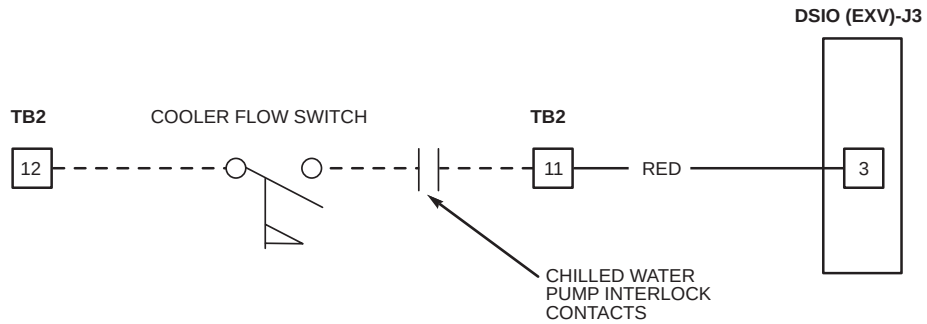


Fig. 35 — Chilled Water Interlock and Flow Switch Input Wiring

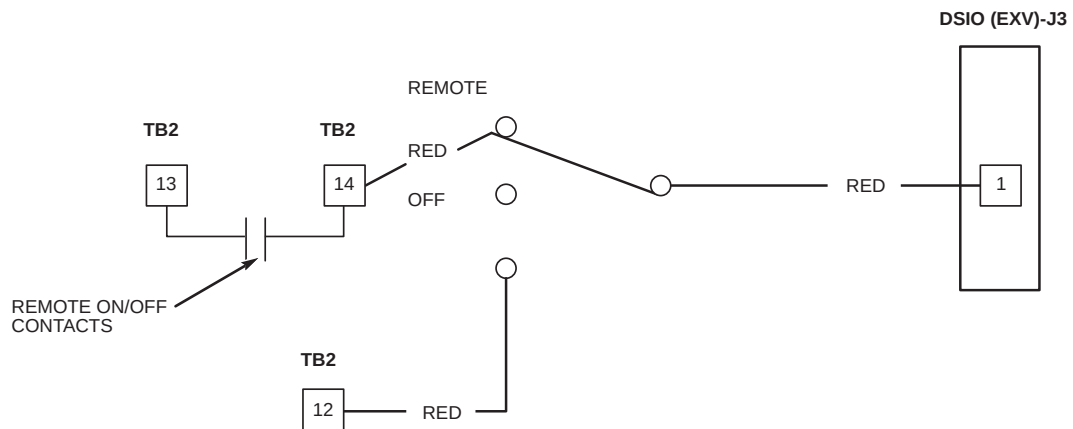


Fig. 36 — Remote On/Off Switch Input Wiring

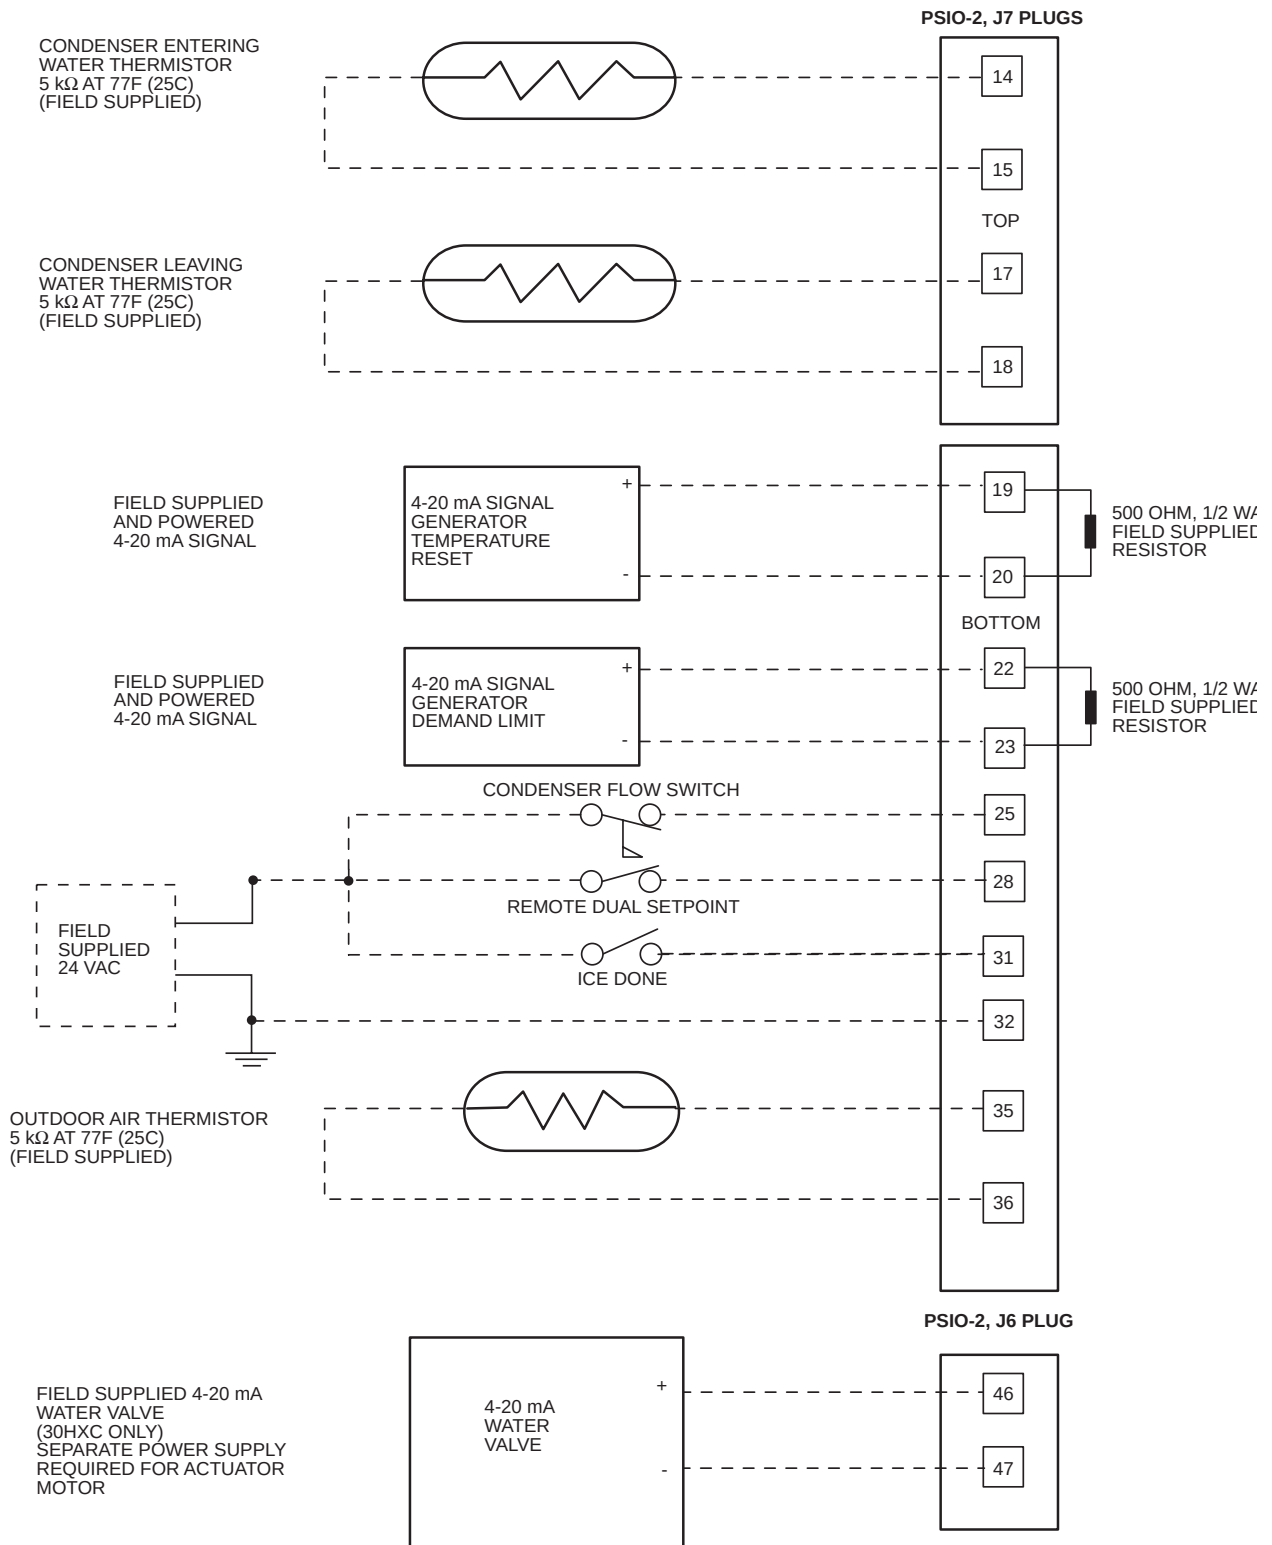


Fig. 37 — PSIO-2 Wiring for Accessories and Field-Installed Options, 30HX Units



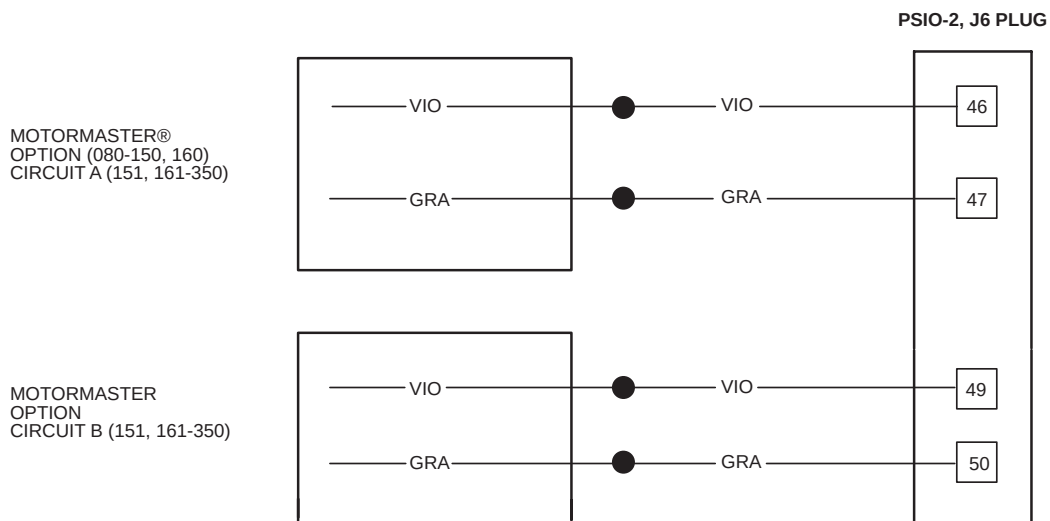



Fig. 38 — PSIO-2 Wiring for Accessories and Field-Installed Options, 30GX Units

APPENDIX A **Compressor Protection Module Configuration Header Punch-Outs and Must Trip Amps**

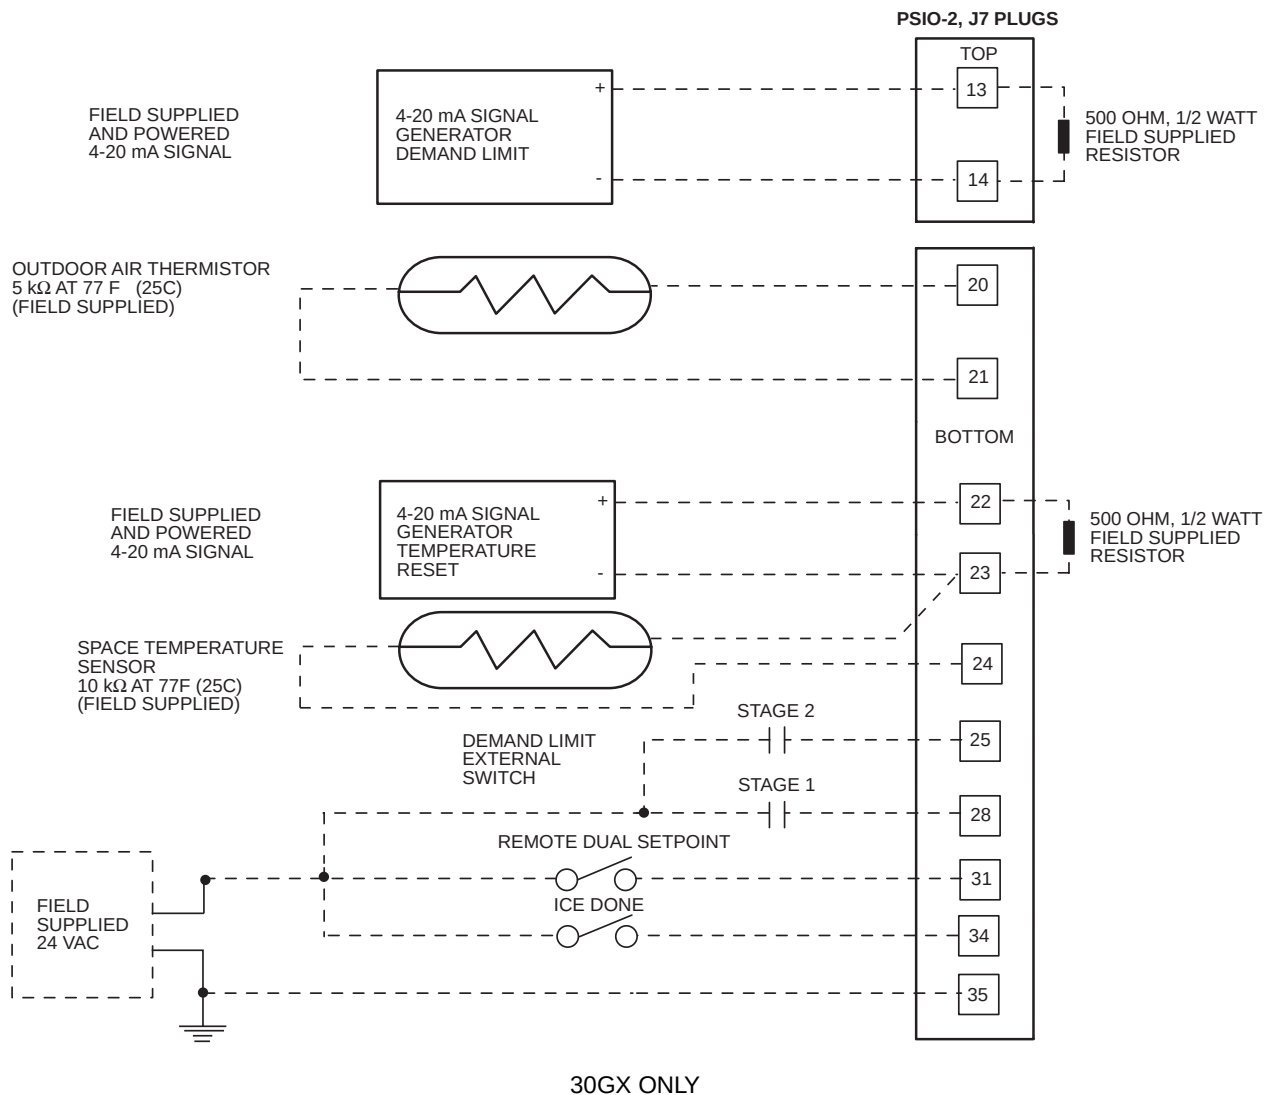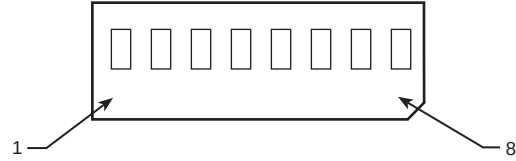


UNIT MODEL NUMBER	PUNCH OUTS FOR COMP A1	PUNCH OUTS FOR COMP A2	PUNCH OUTS FOR COMP B1	COMP A1 MUST TRIP AMPS SETTING	COMP A2 MUST TRIP AMPS SETTING	COMP B1 MUST TRIP AMPS SETTING
30GX-080---1	1, 2, 3, 6, 7, 8	—	1, 2, 3, 5, 6, 7, 8	98	—	82
30GX-080---2	1, 2, 5, 6, 7	—	1, 2, 4, 5, 7	148	—	124
30GX-080---5	1, 4, 8	—	1, 3, 6, 7, 8	270	—	226
30GX-080---6	1, 2, 4, 5, 7, 8	—	1, 2, 3, 6, 8	122	—	102
30GX-080---8	1, 4, 5	—	1, 3, 5, 6, 7	256	—	212
30GX-080---9	1, 2, 6, 7	—	1, 2, 4, 5	156	—	128
30GX-090---1	1, 2, 4, 5, 6	—	1, 2, 3, 5, 6, 7, 8	120	—	82
30GX-090---2	1, 3, 4, 5, 6, 7	—	1, 2, 4, 5, 7	180	—	124
30GX-090---5	2, 3, 4, 6	—	1, 3, 6, 7, 8	328	—	226
30GX-090---6	1, 2, 5, 6, 7	—	1, 2, 3, 6, 8	148	—	102
30GX-090---8	2, 3, 4, 5, 6, 8	—	1, 3, 5, 6, 7	310	—	212
30GX-090---9	1, 3, 4, 5, 7	—	1, 2, 4, 5	188	—	128
30GX-105---8	2, 3, 5, 6	—	1, 3, 8	344	—	238
30GX-105---9	1, 3, 4	—	1, 2, 4	208	—	144
30GX-106---1	1, 2, 4, 6, 8	—	1, 2, 3, 5, 7	134	—	92
30GX-106---2	1, 3, 4, 7, 8	—	1, 2, 4, 7	202	—	140
30GX-106---5	2, 3	—	1, 4, 5, 8	368	—	254
30GX-106---6	1, 2, 6	—	1, 2, 4, 5, 6, 7, 8	168	—	114
30GX-106---8	2, 3, 5, 6	—	1, 3, 8	344	—	238
30GX-106---9	1, 3, 4	—	1, 2, 4	208	—	144
30GX-115---1	1, 2, 6, 7, 8	—	1, 2, 3, 5, 7	162	—	92
30GX-115---2	1, 4, 5, 6, 8	—	1, 2, 4, 7	246	—	140
30GX-115---5	3, 4, 5	—	1, 4, 5, 8	448	—	254
30GX-115---6	1, 3, 4, 7	—	1, 2, 4, 5, 6, 7, 8	204	—	114
30GX-115---8	2, 6, 7, 8	—	1, 3, 8	418	—	238
30GX-115---9	1, 4, 5, 8	—	1, 2, 4	254	—	144
30GX-125---1	1, 2, 6, 7, 8	—	1, 2, 3, 8	162	—	110
30GX-125---2	1, 4, 5, 6, 8	—	1, 2, 6	246	—	168
30GX-125---5	3, 4, 5	—	2, 3, 4, 5, 6, 7, 8	448	—	306
30GX-125---6	1, 3, 4, 7	—	1, 2, 4, 7, 8	204	—	138
30GX-125---8	2, 6, 7, 8	—	1, 5	418	—	288
30GX-125---9	1, 4, 5, 8	—	1, 2, 8	254	—	174
30GX-136---1	1, 2, 6, 7, 8	—	1, 2, 4, 6, 8	162	—	134
30GX-136---2	1, 4, 5, 6, 8	—	1, 3, 4, 7, 8	246	—	202
30GX-136---5	3, 4, 5	—	2, 3	448	—	368
30GX-136---6	1, 3, 4, 7	—	1, 2, 6	204	—	168
30GX-136---8	2, 6, 7, 8	—	2, 3, 5, 6	418	—	344
30GX-136---9	1, 4, 5, 8	—	1, 3, 4	254	—	208
30GX-150---8	2, 3, 5, 6	—	4, 6	344	—	520
30GX-150---9	1, 3, 4	—	2, 3, 4, 5, 7, 8	208	—	314
30GX-151---1	1, 3, 4, 6, 8	—	1, 2, 4, 6, 8	198	—	134
30GX-151---2	1, 7	—	1, 3, 4, 7, 8	300	—	202
30GX-151---5	6, 7, 8	—	2, 3	546	—	368
30GX-151---6	1, 4, 5, 6	—	1, 2, 6	248	—	168
30GX-160---8	2, 6, 7, 8	—	4, 6	418	—	520
30GX-160---9	1, 4, 5, 8	—	2, 3, 4, 5, 7, 8	254	—	314
30GX-161---1	1, 3, 4, 6, 8	—	1, 2, 6, 7, 8	198	—	162
30GX-161---2	1, 7	—	1, 4, 5, 6, 8	300	—	246
30GX-161---5	6, 7, 8	—	3, 4, 5	546	—	448
30GX-161---6	1, 4, 5, 6	—	1, 3, 4, 7	248	—	204
30GX-161---8	4, 6	—	2, 6, 7, 8	520	—	418
30GX-161---9	2, 3, 4, 5, 7, 8	—	1, 4, 5, 8	314	—	254
30GX-175---8	4, 6	—	4, 6	520	—	520
30GX-175---9	2, 3, 4, 5, 7, 8	—	2, 3, 4, 5, 7, 8	314	—	314
30GX-176---1	1, 3, 4, 6, 8	—	1, 3, 4, 6, 8	198	—	198
30GX-176---2	1, 7	—	1, 7	300	—	300
30GX-176---5	6, 7, 8	—	6, 7, 8	546	—	546
30GX-176---6	1, 4, 5, 6	—	1, 4, 5, 6	248	—	248

APPENDIX A (cont) **Compressor Protection Module Configuration Header Punch-Outs and Must Trip Amps**

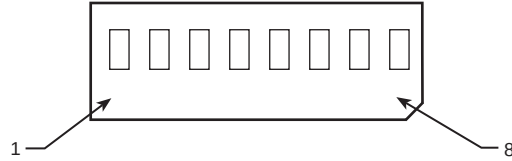


UNIT MODEL NUMBER	PUNCH OUTS FOR COMP A1	PUNCH OUTS FOR COMP A2	PUNCH OUTS FOR COMP B1	PUNCH OUTS FOR COMP B2	COMP A1 MUST TRIP AMPS SETTING	COMP A2 MUST TRIP AMPS SETTING	COMP B1 MUST TRIP AMPS SETTING	COMP B2 MUST TRIP AMPS SETTING
30GX-205---8	2, 6, 7, 8	1, 3, 8	4, 6	—	418	238	520	—
30GX-205---9	1, 4, 5, 8	1, 2, 4	2, 3, 4, 5, 7, 8	—	254	144	314	—
30GX-206---1	1, 3, 4, 6, 8	1, 2, 3, 5, 7	1, 2, 6, 7, 8	—	198	92	162	—
30GX-206---2	1, 7	1, 2, 4, 7	1, 4, 5, 6, 8	—	300	140	246	—
30GX-206---5	6, 7, 8	1, 4, 5, 8	3, 4, 5	—	546	254	448	—
30GX-206---6	1, 4, 5, 6	1, 2, 4, 5, 6, 7, 8	1, 3, 4, 7	—	248	114	204	—
30GX-225---8	4, 6	1, 5	4, 6	—	520	288	520	—
30GX-225---9	2, 3, 4, 5, 7, 8	1, 2, 8	2, 3, 4, 5, 7, 8	—	314	168	314	—
30GX-226---1	1, 3, 4, 6, 8	1, 2, 3, 8	1, 3, 4, 6, 8	—	198	110	198	—
30GX-226---2	1, 7	1, 2, 6	1, 7	—	300	168	300	—
30GX-226---5	6, 7, 8	2, 3, 4, 5, 6, 7, 8	6, 7, 8	—	546	306	546	—
30GX-226---6	1, 4, 5, 6	1, 2, 4, 7, 8	1, 4, 5, 6	—	248	138	248	—
30GX-226---8	4, 6	1, 5	4, 6	—	520	388	520	—
30GX-226---9	2, 3, 4, 5, 7, 8	1, 2, 8	2, 3, 4, 5, 7, 8	—	314	174	314	—
30GX-250---8	4, 6	2, 6, 7, 8	4, 6	—	520	418	520	—
30GX-250---9	2, 3, 4, 5, 7, 8	1, 4, 5, 6	2, 3, 4, 5, 7, 8	—	314	254	314	—
30GX-251---1	1, 3, 4, 6, 8	1, 3, 4, 6, 8	1, 2, 6, 7, 8	—	198	198	162	—
30GX-251---2	1, 7	1, 7	1, 4, 5, 6, 8	—	300	300	246	—
30GX-251---5	6, 7, 8	6, 7, 8	3, 4, 5	—	546	546	448	—
30GX-251---6	1, 4, 5, 6	1, 4, 5, 6	1, 3, 4, 7	—	248	248	204	—
30GX-265---1	1, 3, 4, 6, 8	1, 3, 4, 6, 8	1, 3, 4, 6, 8	—	198	198	198	—
30GX-265---2	1, 7	1, 7	1, 7	—	300	300	300	—
30GX-265---5	6, 7, 8	6, 7, 8	6, 7, 8	—	546	546	546	—
30GX-265---6	1, 4, 5, 6	1, 4, 5, 6	1, 4, 5, 6	—	248	248	248	—
30GX-265---8	4, 6	4, 6	4, 6	—	520	520	520	—
30GX-265---9	2, 3, 4, 5, 7, 8	2, 3, 4, 5, 7, 8	2, 3, 4, 5, 7, 8	—	314	314	314	—
30GX-281---1	1, 3, 4, 6, 8	1, 2, 3, 8	1, 3, 4, 6, 8	1, 2, 3, 8	198	110	198	110
30GX-281---2	1, 7	1, 2, 6	1, 7	1, 2, 6	300	168	300	168
30GX-281---6	1, 4, 5, 6	1, 2, 4, 7, 8	1, 4, 5, 6	1, 2, 4, 7, 8	248	138	248	138
30GX-281---9	2, 3, 4, 5, 7, 8	1, 2, 8	2, 3, 4, 5, 7, 8	1, 2, 8	314	174	314	174
30GX-301---1	1, 3, 4, 6, 8	1, 2, 4, 6, 8	1, 3, 4, 6, 8	1, 2, 4, 6, 8	198	134	198	134
30GX-301---2	1, 7	1, 3, 4, 7, 8	1, 7	1, 3, 4, 7, 8	300	202	300	202
30GX-301---6	1, 4, 5, 6	1, 2, 6	1, 4, 5, 6	1, 2, 6	248	168	248	168
30GX-301---9	2, 3, 4, 5, 7, 8	1, 3, 4	2, 3, 4, 5, 7, 8	1, 3, 4	314	208	314	208
30GX-325---1	1, 3, 4, 6, 8	1, 2, 6, 7, 8	1, 3, 4, 6, 8	1, 2, 6, 7, 8	198	162	198	162
30GX-325---2	1, 7	1, 4, 5, 6, 8	1, 7	1, 4, 5, 6, 8	300	246	300	246
30GX-325---6	1, 4, 5, 6	1, 3, 4, 7	1, 4, 5, 6	1, 3, 4, 7	248	204	248	204
30GX-325---9	2, 3, 4, 5, 7, 8	1, 4, 5, 8	2, 3, 4, 5, 7, 8	1, 4, 5, 8	314	254	314	254
30GX-350---1	1, 3, 4, 6, 8	1, 3, 4, 6, 8	1, 3, 4, 6, 8	1, 3, 4, 6, 8	198	198	198	198
30GX-350---2	1, 7	1, 7	1, 7	1, 7	300	300	300	300
30GX-350---6	1, 4, 5, 6	1, 4, 5, 6	1, 4, 5, 6	1, 4, 5, 6	248	248	248	248
30GX-350---9	2, 3, 4, 5, 7, 8	2, 3, 4, 5, 7, 8	2, 3, 4, 5, 7, 8	2, 3, 4, 5, 7, 8	314	314	314	314
30HXA076---1	1, 2, 3, 5, 6, 7, 8	—	1, 2, 5, 6, 7, 8	—	82	—	82	—
30HXA076---2	1, 2, 4, 5, 7	—	1, 2, 4, 5, 7	—	124	—	124	—
30HXA076---3	1, 2, 4, 7	—	1, 2, 4, 7	—	140	—	140	—
30HXA076---5	1, 3, 6, 7, 8	—	1, 3, 6, 7, 8	—	226	—	226	—
30HXA076---6	1, 2, 3, 6, 8	—	1, 2, 3, 6, 8	—	102	—	102	—
30HXA076---8	1, 3, 5, 6, 7	—	1, 3, 5, 6, 7	—	212	—	212	—
30HXA076---9	1, 2, 4, 5	—	1, 2, 4, 5	—	128	—	128	—
30HXA086---1	1, 2, 3, 6, 7, 8	—	1, 2, 3, 5, 6, 7, 8	—	98	—	82	—
30HXA086---2	1, 2, 5, 6, 7	—	1, 2, 4, 5, 7	—	148	—	124	—
30HXA086---3	1, 2, 7, 8	—	1, 2, 4, 7	—	170	—	140	—
30HXA086---5	1, 4, 8	—	1, 3, 6, 7, 8	—	270	—	226	—
30HXA086---6	1, 2, 4, 5, 7, 8	—	1, 2, 3, 6, 8	—	122	—	102	—
30HXA086---8	1, 4, 5	—	1, 3, 5, 6, 7	—	256	—	212	—
30HXA086---9	1, 2, 5, 7	—	1, 2, 4, 5	—	156	—	128	—
30HXA096---1	1, 2, 4, 5, 6	—	1, 2, 3, 5, 6, 7, 8	—	120	—	82	—
30HXA096---2	1, 3, 4, 5, 6, 7	—	1, 2, 4, 5, 7	—	180	—	124	—
30HXA096---3	1, 3, 4, 8	—	1, 2, 4, 7	—	206	—	140	—
30HXA096---5	2, 3, 4, 6	—	1, 3, 6, 7, 8	—	328	—	226	—
30HXA096---6	1, 2, 5, 6, 7	—	1, 2, 3, 6, 8	—	148	—	102	—
30HXA096---8	2, 3, 4, 5, 6, 8	—	1, 3, 5, 6, 7	—	310	—	212	—
30HXA096---9	1, 3, 4, 5, 7	—	1, 2, 4, 5	—	188	—	128	—
30HXA106---1	1, 2, 4	—	1, 2, 3, 5, 6, 7, 8	—	144	—	82	—
30HXA106---2	1, 3, 5, 7, 8	—	1, 2, 4, 5, 7	—	218	—	124	—
30HXA106---3	1, 4, 5, 7, 8	—	1, 2, 4, 7	—	250	—	140	—
30HXA106---5	2, 4	—	1, 3, 6, 7, 8	—	400	—	226	—
30HXA106---6	1, 3, 4, 5, 6, 7	—	1, 2, 3, 6, 8	—	180	—	102	—
30HXA106---8	2, 4, 5, 6	—	1, 3, 5, 6, 7	—	376	—	212	—
30HXA106---9	1, 3, 6, 7	—	1, 2, 4, 5	—	228	—	128	—

APPENDIX A (cont)
Compressor Protection Module Configuration Header Punch-Outs and Must Trip Amps

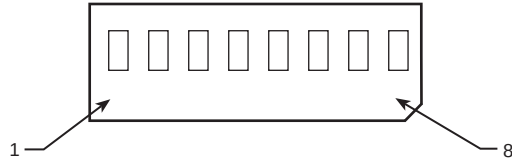


UNIT MODEL NUMBER	PUNCH OUTS FOR COMP A1	PUNCH OUTS FOR COMP A2	PUNCH OUTS FOR COMP B1	COMP A1 MUST TRIP AMPS SETTING	COMP A2 MUST TRIP AMPS SETTING	COMP B1 MUST TRIP AMPS SETTING
30HXA116---1	1, 2, 4	—	1, 2, 3, 6, 7, 8	144	—	98
30HXA116---2	1, 3, 5, 7, 8	—	1, 2, 5, 6, 7	218	—	148
30HXA116---3	1, 4, 5, 7, 8	—	1, 2, 7, 8	250	—	170
30HXA116---5	2, 4	—	1, 4, 8	400	—	270
30HXA116---6	1, 3, 4, 5, 6, 7	—	1, 2, 4, 5, 7, 8	180	—	122
30HXA116---8	2, 4, 5, 6	—	1, 4, 5	376	—	256
30HXA116---9	1, 3, 6, 7	—	1, 2, 5, 7	228	—	156
30HXA126---1	1, 2, 4	—	1, 2, 4, 5, 6	144	—	120
30HXA126---2	1, 3, 5, 7, 8	—	1, 3, 4, 5, 6, 7	218	—	180
30HXA126---3	1, 4, 5, 7, 8	—	1, 3, 4, 8	250	—	206
30HXA126---5	2, 4	—	2, 3, 4, 6	400	—	328
30HXA126---6	1, 3, 4, 5, 6, 7	—	1, 2, 5, 6, 7	180	—	148
30HXA126---8	2, 4, 5, 6	—	2, 3, 4, 5, 6, 8	376	—	310
30HXA126---9	1, 3, 6, 7	—	1, 3, 4, 5, 7	228	—	188
30HXA136---1	1, 2	—	1, 2, 4, 5, 6	176	—	120
30HXA136---2	1, 4, 7, 8	—	1, 3, 4, 5, 6, 7	266	—	180
30HXA136---3	2, 3, 4, 5, 6, 7, 8	—	1, 3, 4, 8	306	—	206
30HXA136---5	3, 6, 8	—	2, 3, 4, 6	486	—	328
30HXA136---6	1, 3, 5, 7	—	1, 2, 5, 6, 7	220	—	148
30HXA136---8	3, 4, 8	—	2, 3, 4, 5, 6, 8	462	—	310
30HXA136---9	1, 5, 6	—	1, 3, 4, 5, 7	280	—	188
30HXA146---1	1, 2	—	1, 2, 4	176	—	144
30HXA146---2	1, 4, 7, 8	—	1, 3, 5, 7, 8	266	—	218
30HXA146---3	2, 3, 4, 5, 6, 7, 8	—	1, 4, 5, 7, 8	306	—	250
30HXA146---5	3, 6, 8	—	2, 4	486	—	400
30HXA146---6	1, 3, 5, 7	—	1, 3, 4, 5, 6, 7	220	—	180
30HXA146---8	3, 4, 8	—	2, 4, 5, 6	462	—	376
30HXA146---9	1, 5, 6	—	1, 3, 6, 7	280	—	228
30HXA161---1	1, 3, 4, 6, 8	—	1, 2, 4, 6, 8	198	—	134
30HXA161---2	1, 7	—	1, 3, 4, 7, 8	300	—	202
30HXA161---3	2, 3, 5, 6	—	1, 3, 6, 7	344	—	228
30HXA161---5	6, 7, 8	—	2, 3	546	—	368
30HXA161---6	1, 4, 5, 6	—	1, 2, 6	248	—	168
30HXA161---8	4, 6	—	2, 3, 5, 6	520	—	344
30HXA161---9	2, 3, 4, 5, 7, 8	—	1, 3, 4	314	—	208
30HXA171---1	1, 2, 6, 7, 8	—	1, 3, 4, 6, 8	162	—	198
30HXA171---2	1, 4, 5, 6, 8	—	1, 7	246	—	300
30HXA171---3	1, 5, 6, 8	—	2, 3, 5, 6	278	—	344
30HXA171---5	3, 4, 5	—	6, 7, 8	448	—	546
30HXA171---6	1, 3, 4, 7	—	1, 4, 5, 6	204	—	248
30HXA171---8	2, 6, 7, 8	—	4, 6	418	—	520
30HXA171---9	1, 4, 5, 8	—	2, 3, 4, 5, 7, 8	254	—	314
30HXA186---1	1, 3, 4, 6, 8	—	1, 3, 4, 6, 8	198	—	198
30HXA186---2	1, 7	—	1, 7	300	—	300
30HXA186---3	2, 3, 5, 6	—	2, 3, 5, 6	344	—	344
30HXA186---5	6, 7, 8	—	6, 7, 8	546	—	546
30HXA186---6	1, 4, 5, 6	—	1, 4, 5, 6	248	—	248
30HXA186---8	4, 6	—	4, 6	520	—	520
30HXA186---9	2, 3, 4, 5, 7, 8	—	2, 3, 4, 5, 7, 8	314	—	314
30HXA206---1	1, 2, 6, 7, 8	1, 2, 3, 5, 7	1, 3, 4, 6, 8	162	92	198
30HXA206---2	1, 4, 5, 6, 8	1, 2, 4, 7	1, 7	246	138	300
30HXA206---3	1, 5, 6, 8	1, 2, 5, 8	2, 3, 5, 6	278	158	344
30HXA206---5	3, 4, 5	1, 4, 5, 8	6, 7, 8	448	254	546
30HXA206---6	1, 3, 4, 7	1, 2, 4, 5, 6, 7, 8	1, 4, 5, 6	204	116	248
30HXA206---8	2, 6, 7, 8	1, 3, 8	4, 6	418	238	520
30HXA206---9	1, 4, 5, 8	1, 2, 4	2, 3, 4, 5, 7, 8	254	144	314

APPENDIX A (cont)
Compressor Protection Module Configuration Header Punch-Outs and Must Trip Amps

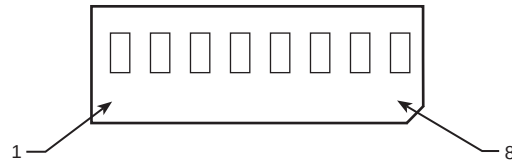

UNIT MODEL NUMBER	PUNCH OUTS FOR COMP A1	PUNCH OUTS FOR COMP A2	PUNCH OUTS FOR COMP B1	COMP A1 MUST TRIP AMPS SETTING	COMP A2 MUST TRIP AMPS SETTING	COMP B1 MUST TRIP AMPS SETTING
30HXA246--1	1, 3, 4, 6, 8	1, 2, 4, 6, 8	1, 3, 4, 6, 8	198	134	198
30HXA246--2	1, 7	1, 3, 4, 7, 8	1, 7	300	202	300
30HXA246--3	2, 3, 5, 6	1, 3, 6, 7	2, 3, 5, 6	344	228	344
30HXA246--5	6, 7, 8	2, 3	6, 7, 8	546	368	546
30HXA246--6	1, 4, 5, 6	1, 2, 6	1, 4, 5, 6	248	168	248
30HXA246--8	4, 6	2, 3, 5, 6	4, 6	520	344	520
30HXA246--9	2, 3, 4, 5, 7, 8	1, 3, 4	2, 3, 4, 5, 7, 8	314	208	314
30HXA261--1	1, 3, 4, 6, 8	1, 2, 6, 7, 8	1, 3, 4, 6, 8	198	162	198
30HXA261--2	1, 7	1, 4, 5, 6, 8	1, 7	300	246	300
30HXA261--3	2, 3, 5, 6	1, 5, 6, 8	2, 3, 5, 6	344	278	344
30HXA261--5	6, 7, 8	3, 4, 5	6, 7, 8	546	448	546
30HXA261--6	1, 4, 5, 6	1, 3, 4, 7	1, 4, 5, 6	248	204	248
30HXA261--8	4, 6	2, 6, 7, 8	4, 6	520	418	520
30HXA261--9	2, 3, 4, 5, 7, 8	1, 4, 5, 8	2, 3, 4, 5, 7, 8	314	254	314
30HXA271--1	1, 3, 4, 6, 8	1, 3, 4, 6, 8	1, 3, 4, 6, 8	198	198	198
30HXA271--2	1, 7	1, 7	1, 7	300	300	300
30HXA271--3	2, 3, 5, 6	2, 3, 5, 6	2, 3, 5, 6	344	344	344
30HXA271--5	6, 7, 8	6, 7, 8	6, 7, 8	546	546	546
30HXA271--6	1, 4, 5, 6	1, 4, 5, 6	1, 4, 5, 6	248	248	248
30HXA271--8	4, 6	4, 6	4, 6	520	520	520
30HXA271--9	2, 3, 4, 5, 7, 8	2, 3, 4, 5, 7, 8	2, 3, 4, 5, 7, 8	314	314	314
30HXC076--1	1, 2, 3, 4, 5, 6	—	1, 2, 3, 4, 5, 6	56	—	56
30HXC076--2	1, 2, 3, 5, 6, 7	—	1, 2, 3, 5, 6, 7	84	—	84
30HXC076--3	1, 2, 3, 5	—	1, 2, 3, 5	96	—	96
30HXC076--5	1, 2, 5, 7, 8	—	1, 2, 5, 7, 8	154	—	154
30HXC076--6	1, 2, 3, 4, 6, 8	—	1, 2, 3, 4, 6, 8	70	—	70
30HXC076--8	1, 2, 4	—	1, 2, 4	144	—	144
30HXC076--9	1, 2, 3, 5, 6	—	1, 2, 3, 5, 6	88	—	88
30HXC086--1	1, 2, 3, 4, 6, 7	—	1, 2, 3, 4, 5, 6	68	—	56
30HXC086--2	1, 2, 3, 6, 8	—	1, 2, 3, 5, 6, 7	102	—	84
30HXC086--3	1, 2, 4, 5, 6, 7	—	1, 2, 3, 5	116	—	96
30HXC086--5	1, 3, 4, 5, 7, 8	—	1, 2, 5, 7, 8	186	—	154
30HXC086--6	1, 2, 3, 5, 6, 7	—	1, 2, 3, 4, 6, 8	84	—	70
30HXC086--8	1, 2	—	1, 2, 4	176	—	144
30HXC086--9	1, 2, 3, 7, 8	—	1, 2, 3, 5, 6	106	—	88
30HXC096--1	1, 2, 3, 5, 6, 7, 8	—	1, 2, 3, 4, 5, 6	82	—	56
30HXC096--2	1, 2, 4, 5, 7	—	1, 2, 3, 5, 6, 7	124	—	84
30HXC096--3	1, 2, 4, 7	—	1, 2, 3, 5	140	—	96
30HXC096--5	1, 3, 6, 7, 8	—	1, 2, 5, 7, 8	226	—	154
30HXC096--6	1, 2, 3, 6	—	1, 2, 3, 4, 6, 8	104	—	70
30HXC096--8	1, 3, 5, 6, 7	—	1, 2, 4	212	—	144
30HXC096--9	1, 2, 4, 5	—	1, 2, 3, 5, 6	128	—	88
30HXC106--1	1, 2, 3, 6, 7	—	1, 2, 3, 4, 5, 6	100	—	56
30HXC106--2	1, 2, 5, 6, 8	—	1, 2, 3, 5, 6, 7	150	—	84
30HXC106--3	1, 2, 6	—	1, 2, 3, 5	168	—	96
30HXC106--5	1, 5, 6, 7, 8	—	1, 2, 5, 7, 8	274	—	154
30HXC106--6	1, 2, 4, 5, 7	—	1, 2, 3, 4, 6, 8	124	—	70
30HXC106--8	1, 4, 5, 8	—	1, 2, 4	254	—	144
30HXC106--9	1, 2, 5, 7, 8	—	1, 2, 3, 5, 6	154	—	88
30HXC116--1	1, 2, 3, 6, 7	—	1, 2, 3, 4, 6, 7	100	—	68
30HXC116--2	1, 2, 5, 6, 8	—	1, 2, 3, 6, 8	150	—	102
30HXC116--3	1, 2, 6	—	1, 2, 4, 5, 6, 7	168	—	116
30HXC116--5	1, 5, 6, 7, 8	—	1, 3, 4, 5, 7, 8	274	—	186
30HXC116--6	1, 2, 4, 5, 7	—	1, 2, 3, 5, 6, 7	124	—	84
30HXC116--8	1, 4, 5, 8	—	1, 2	254	—	176
30HXC116--9	1, 2, 5, 7, 8	—	1, 2, 3, 7, 8	154	—	106

APPENDIX A (cont)
Compressor Protection Module Configuration Header Punch-Outs and Must Trip Amps

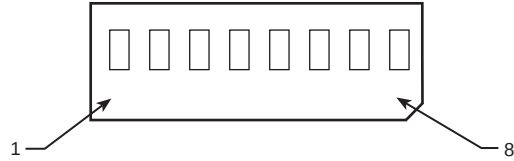

UNIT MODEL NUMBER	PUNCH OUTS FOR COMP A1	PUNCH OUTS FOR COMP A2	PUNCH OUTS FOR COMP B1	COMP A1 MUST TRIP AMPS SETTING	COMP A2 MUST TRIP AMPS SETTING	COMP B1 MUST TRIP AMPS SETTING
30HXC126--1	1, 2, 3, 6, 7	—	1, 2, 3, 5, 6, 7, 8	100	—	82
30HXC126--2	1, 2, 5, 6, 8	—	1, 2, 4, 5, 7	150	—	124
30HXC126--3	1, 2, 6	—	1, 2, 4, 7	168	—	140
30HXC126--5	1, 5, 6, 7, 8	—	1, 3, 6, 7, 8	274	—	226
30HXC126--6	1, 2, 4, 5, 7	—	1, 2, 3, 6	124	—	104
30HXC126--8	1, 4, 5, 8	—	1, 3, 5, 6, 7	254	—	212
30HXC126--9	1, 2, 5, 7, 8	—	1, 2, 4, 5	154	—	128
30HXC136--1	1, 2, 4, 5, 6	—	1, 2, 3, 5, 6, 7, 8	120	—	82
30HXC136--2	1, 3, 4, 5, 6, 7	—	1, 2, 4, 5, 7	180	—	124
30HXC136--3	1, 3, 4, 7	—	1, 2, 4, 7	204	—	140
30HXC136--5	2, 3, 4, 6	—	1, 3, 6, 7, 8	328	—	226
30HXC136--6	1, 2, 5, 6, 7	—	1, 2, 3, 6	148	—	104
30HXC136--8	2, 3, 4, 5, 6, 7	—	1, 3, 5, 6, 7	308	—	212
30HXC136--9	1, 3, 4, 5, 7, 8	—	1, 2, 4, 5	186	—	128
30HXC146--1	1, 2, 4, 5, 6	—	1, 2, 3, 6, 7	120	—	100
30HXC146--2	1, 3, 4, 5, 6, 7	—	1, 2, 5, 6, 8	180	—	150
30HXC146--3	1, 3, 4, 7	—	1, 2, 6	204	—	168
30HXC146--5	2, 3, 4, 6	—	1, 5, 6, 7, 8	328	—	274
30HXC146--6	1, 2, 5, 6, 7	—	1, 2, 4, 5, 7	148	—	124
30HXC146--8	2, 3, 4, 5, 6, 7	—	1, 4, 5, 8	308	—	254
30HXC146--9	1, 3, 4, 5, 7, 8	—	1, 2, 5, 7, 8	186	—	154
30HXC161--1	1, 2, 4, 6, 7, 8	—	1, 2, 3, 5, 7, 8	130	—	90
30HXC161--2	1, 3, 4, 6, 7	—	1, 2, 4, 6	196	—	136
30HXC161--3	1, 3, 5, 7	—	1, 2, 5, 6	220	—	152
30HXC161--5	2, 3, 6, 8	—	1, 4, 5, 6, 8	358	—	246
30HXC161--6	1, 2, 6, 7, 8	—	1, 2, 3	162	—	112
30HXC161--8	2, 4, 5, 7	—	1, 3, 6, 7	332	—	228
30HXC161--9	1, 3, 4, 7, 8	—	1, 2, 4, 7, 8	202	—	138
30HXC171--1	1, 2, 3, 7	—	1, 2, 4, 6, 7, 8	108	—	130
30HXC171--2	1, 2, 6, 7	—	1, 3, 4, 6, 7	164	—	196
30HXC171--3	1, 3, 4, 5, 6, 8	—	1, 3, 5, 7	182	—	220
30HXC171--5	1, 7, 8	—	2, 3, 6, 8	298	—	358
30HXC171--6	1, 2, 4, 6	—	1, 2, 6, 7, 8	136	—	162
30HXC171--8	1, 5, 6, 7, 8	—	2, 3, 4, 7	274	—	332
30HXC171--9	1, 2, 6, 8	—	1, 3, 4, 7, 8	166	—	202
30HXC186--1	1, 2, 4, 6, 7, 8	—	1, 2, 4, 6, 7, 8	130	—	130
30HXC186--2	1, 3, 4, 6, 7	—	1, 3, 4, 6, 7	196	—	196
30HXC186--3	1, 3, 5, 7	—	1, 3, 5, 7	220	—	220
30HXC186--5	2, 3, 6, 8	—	2, 3, 6, 8	358	—	358
30HXC186--6	1, 2, 6, 7, 8	—	1, 2, 6, 7, 8	162	—	162
30HXC186--8	2, 3, 4, 7	—	2, 3, 4, 7	332	—	332
30HXC186--9	1, 3, 4, 7, 8	—	1, 3, 4, 7, 8	202	—	202
30HXC206--1	1, 2, 3, 7	1, 2, 3, 4, 5, 8	1, 2, 4, 6, 7, 8	108	62	130
30HXC206--2	1, 2, 6, 7	1, 2, 3, 5, 7	1, 3, 4, 6, 7	164	92	196
30HXC206--3	1, 3, 4, 5, 6, 8	1, 2, 3, 6	1, 3, 5, 7	182	104	220
30HXC206--5	1, 7, 8	1, 2, 6	2, 3, 6, 8	298	168	358
30HXC206--6	1, 2, 4, 6	1, 2, 3, 4, 7	1, 2, 6, 7, 8	136	76	162
30HXC206--8	1, 5, 6, 7, 8	1, 2, 5, 7	2, 3, 4, 7	274	156	332
30HXC206--9	1, 2, 6, 8	1, 2, 3, 5, 8	1, 3, 4, 7, 8	166	94	202
30HXC246--1	1, 2, 4, 6, 7, 8	1, 2, 3, 5, 7, 8	1, 2, 4, 6, 7, 8	130	90	130
30HXC246--2	1, 3, 4, 6, 7	1, 2, 4, 6	1, 3, 4, 6, 7	196	136	196
30HXC246--3	1, 3, 5, 7	1, 2, 5, 6	1, 3, 5, 7	220	152	220
30HXC246--5	2, 3, 6, 8	1, 4, 5, 6, 8	2, 3, 6, 8	358	246	358
30HXC246--6	1, 2, 6, 7, 8	1, 2, 3	1, 2, 6, 7, 8	162	112	162
30HXC246--8	2, 3, 4, 7	1, 3, 6, 7	2, 3, 4, 7	332	228	332
30HXC246--9	1, 3, 4, 7, 8	1, 2, 4, 7, 8	1, 3, 4, 7, 8	202	138	202
30HXC261--1	1, 2, 4, 6, 7, 8	1, 2, 3, 7	1, 2, 4, 6, 7, 8	130	108	130
30HXC261--2	1, 3, 4, 6, 7	1, 2, 6, 7	1, 3, 4, 6, 7	196	164	196
30HXC261--3	1, 3, 5, 7	1, 3, 4, 5, 6, 8	1, 3, 5, 7	220	182	220
30HXC261--5	2, 3, 6, 8	1, 7, 8	2, 3, 6, 8	358	298	358
30HXC261--6	1, 2, 6, 7, 8	1, 2, 4, 6	1, 2, 6, 7, 8	162	136	162
30HXC261--8	2, 3, 4, 7	1, 5, 6, 7, 8	2, 3, 4, 7	332	274	332
30HXC261--9	1, 3, 4, 7, 8	1, 2, 4, 6, 8	1, 3, 4, 7, 8	202	166	202
30HXC271--1	1, 2, 4, 6, 7, 8	1, 2, 4, 6, 7, 8	1, 2, 4, 6, 7, 8	130	130	130
30HXC271--2	1, 3, 4, 6, 7	1, 3, 4, 6, 7	1, 3, 4, 6, 7	196	196	196
30HXC271--3	1, 3, 5, 7	1, 3, 5, 7	1, 3, 5, 7	220	220	220
30HXC271--5	2, 3, 6, 8	2, 3, 6, 8	2, 3, 6, 8	358	358	358
30HXC271--6	1, 2, 6, 7, 8	1, 2, 6, 7, 8	1, 2, 6, 7, 8	162	162	162
30HXC271--8	2, 3, 4, 7	2, 3, 4, 7	2, 3, 4, 7	332	332	332
30HXC271--9	1, 3, 4, 7, 8	1, 3, 4, 7, 8	1, 3, 4, 7, 8	202	202	202

APPENDIX B

Capacity Loading Sequence Example — The following tables show the loading sequence for a 30HX186 (50/50 split) and a 30HX161 (59/41 split) chiller. Each

compressor has 2 loaders. There is no difference in operation between “Staged” and “Equal” circuit loading on 2 compressor chillers.

STANDARD LOADING SEQUENCE (CIRCUIT A LEAD CIRCUIT, 2-COMPRESSOR UNIT)								
STAGE	COMP A1	LOADER A1	LOADER A2	COMP B1	LOADER B1	LOADER B2	% TOTAL CAPACITY (50/50 Split)	% TOTAL CAPACITY (59/41 Split)
0	0	0	0	0	0	0	0.0	0.0
1	1	0	0	0	0	0	20.0	23.5
2	1	1	0	0	0	0	35.0	41.1
3	1	1	1	0	0	0	50.0	58.8
4	1	1	0	1	1	0	70.0	70.0
5	1	1	0	1	1	1	85.0	82.4
6	1	1	1	1	1	1	100.0	100.0

CLOSE CONTROL LOADING SEQUENCE (CIRCUIT A LEAD CIRCUIT, 2-COMPRESSOR UNIT)								
STAGE	COMP A1	LOADER A1	LOADER A2	COMP B1	LOADER B1	LOADER B2	% TOTAL CAPACITY (50/50 Split)	% TOTAL CAPACITY (59/41 Split)
0	0	0	0	0	0	0	0.0	0.0
1	1	0	0	0	0	0	20.0	23.5
2	1	1	0	0	0	0	35.0	41.1
3	1	1	1	0	0	0	50.0	58.8
3A	1	0	0	1	0	0	40.0	40.0
3B	1	0	0	1	1	0	55.0	52.4
4	1	0	0	1	1	1	70.0	64.7
5	1	1	0	1	1	1	85.0	82.4
6	1	1	1	1	1	1	100.0	100.0

LEGEND
0 — Off
1 — On

NOTES:

1. Stage 3A (and 3B for 59/41 split) is not used by the algorithm when increasing stages. Stage 3 (and 2 for a 59/41 split) is not used when decreasing stages.
2. The % Total Capacities above are calculated based on compressor nominal tons. For the case of the 59/41 split above, the 30HX uses compressors with flow rates of 250 and 174 cfm (from compressor model numbers 06N_250 and 06N_174), which represent nominal tons of 80 and 56 (respectively) at 60Hz. A factor of 40% is used when no loaders are energized, and a factor of 70% is used when Loader 1 is energized. The capacity shown for Stage 3B above is calculated as follows:

$$\% \text{ Total Capacity} = [(0.40 \times 80 + 0.70 \times 56) / (80 + 56)] \times 100\%$$

$$= 52.4 \%$$

Nominal Tons

COMPRESSOR PART NO.	60 Hz NOM. TONS	50 Hz NOM. TONS
06N_123	39	—
06N_146	46	39
06N_174	56	46
06N_209	66	56
06N_250	80	66
06N_300	—	80

APPENDIX B (cont)

The following tables show the loading sequence for 30HX206 (57/43 split) and 30HX271 (67/33 split) chillers. All compressors

have two loaders and the chillers are configured for *equal circuit loading*. See Note 2.

STANDARD LOADING SEQUENCE (CIRCUIT A LEAD CIRCUIT, 3-COMPRESSOR UNIT)									
STAGE	COMP A1	LOADER A1	LOADER A2	COMP A2	COMP B1	LOADER B1	LOADER B2	% TOTAL CAPACITY (57/43 Split)	% TOTAL CAPACITY (67/33 Split)
0	0	0	0	0	0	0	0	0.0	0.0
1	1	0	0	0	0	0	0	14.3	13.3
2	1	1	0	0	0	0	0	25.0	23.3
3	1	1	1	0	0	0	0	35.7	33.3
4	1	1	0	0	1	1	0	55.2	46.7
5	1	1	0	0	1	1	1	68.2	56.7
6	1	1	1	0	1	1	1	78.9	66.7
7	1	1	0	1	1	1	1	83.0	80.0
8	1	1	1	1	1	1	1	100.0	100.0

CLOSE CONTROL LOADING SEQUENCE (CIRCUIT A LEAD CIRCUIT, 3-COMPRESSOR UNIT)									
STAGE	COMP A1	LOADER A1	LOADER A2	COMP A2	COMP B1	LOADER B1	LOADER B2	% TOTAL CAPACITY (57/43 Split)	% TOTAL CAPACITY (67/33 Split)
0	0	0	0	0	0	0	0	0.0	0.0
1	1	0	0	0	0	0	0	14.3	13.3
2	1	1	0	0	0	0	0	25.0	23.3
3	1	1	1	0	0	0	0	35.7	33.3
3A	1	0	0	0	1	0	0	31.6	26.7
4	1	0	0	0	1	1	0	44.5	36.7
5	1	0	0	0	1	1	1	57.5	46.7
6	1	1	0	0	1	1	1	68.2	56.7
7	1	1	1	0	1	1	1	78.9	66.7
7A	1	0	0	1	1	1	1	65.9	60.0
8	1	1	0	1	1	1	1	83.0	80.0
9	1	1	1	1	1	1	1	100.0	100.0

LEGEND
0 — Off
1 — On

NOTES:

1. Stages 3A and 7A are not used by the algorithm when increasing stages. Stages 3 and 7 are not used when decreasing stages.
2. The loading sequence for 30GX205-265 units is the same as those shown for the 30HX206,271 above.

APPENDIX B (cont)

The following tables show the loading sequence for 30HX206 (57/43 split) and 30HX271 (67/33 split) chillers. All compressors have two loaders and the chiller is configured for *staged*

circuit loading. Loaders A1 on compressors A1 and A2 are energized in parallel. The same is true for Loaders A2 on both compressors A1 and A2. See Note 3.

STANDARD LOADING SEQUENCE (CIRCUIT A LEAD CIRCUIT, 3-COMPRESSOR UNIT)

STAGE	COMP A1	LOADER A1	LOADER A2	COMP A2	COMP B1	LOADER B1	LOADER B2	% TOTAL CAPACITY (57/43 Split)	% TOTAL CAPACITY (67/33 Split)
0	0	0	0	0	0	0	0	0.0	0.0
1	1	0	0	0	0	0	0	14.3	13.3
2	1	1	0	0	0	0	0	25.0	23.3
3	1	1	1	0	0	0	0	35.7	33.3
4	1	1	0	1	0	0	0	39.7	46.7
5	1	1	1	1	0	0	0	56.8	66.7
6	1	1	1	1	1	1	0	87.0	90.0
7	1	1	1	1	1	1	1	100.0	100.0

CLOSE CONTROL LOADING SEQUENCE (CIRCUIT A LEAD CIRCUIT, 3-COMPRESSOR UNIT)

STAGE	COMP A1	LOADER A1	LOADER A2	COMP A2	COMP B1	LOADER B1	LOADER B2	% TOTAL CAPACITY (57/43 Split)	% TOTAL CAPACITY (67/33 Split)
0	0	0	0	0	0	0	0	0.0	0.0
1	1	0	0	0	0	0	0	14.3	13.3
2	1	1	0	0	0	0	0	25.0	23.3
3	1	1	1	0	0	0	0	35.7	33.3
3A	1	0	0	1	0	0	0	22.7	26.7
4	1	1	0	1	0	0	0	39.7	46.7
5	1	1	1	1	0	0	0	56.8	66.7
6	1	1	1	1	1	0	0	74.1	80.0
7	1	1	1	1	1	1	0	87.0	90.0
8	1	1	1	1	1	1	1	100.0	100.0

LEGEND

0 — Off
1 — On

NOTES:

1. Stage 3A is not used by the algorithm when increasing stages. Stage 3 is not used by the algorithm when decreasing stages.
2. The % Total Capacities above are calculated based on compressor nominal tons. For the case of the 57/43 split above, the 30HX uses compressors

with flow rates of 209, 123, and 250 cfm (from compressor model numbers 06N_209, 06N_123, and 06N_250), which represent nominal tons of 66, 39, and 80 (respectively) at 60Hz. A factor of 40% is used when no loaders are energized, and a factor of 70% is used when Loader 1 is energized. The capacity shown for Stage 4 above is calculated as follows:
% Total Capacity = $\frac{[(0.70 \times 66 + 0.70 \times 39 + 0.0 \times 80)]}{(66 + 39 + 80)} \times 100\%$
= 39.7 %

3. The loading sequence for 30GX205-265 units is the same as those shown for the 30HX206, 271 above.

APPENDIX B (cont)

The following tables show the loading sequence for a 30GX350 chiller. Each compressor has 2 loaders and the chiller is configured for *equal circuit loading*. See Note 2.

STANDARD LOADING SEQUENCE (CIRCUIT A LEAD CIRCUIT, 4-COMPRESSOR UNIT)									
STAGE	COMP A1	LOADER A1	LOADER A2	COMP A2	COMP B1	LOADER B1	LOADER B2	COMP B2	% TOTAL CAPACITY (50/50 Split)
0	0	0	0	0	0	0	0	0	0.0
1	1	0	0	0	0	0	0	0	10.0
2	1	1	0	0	0	0	0	0	18.0
3	1	1	1	0	0	0	0	0	25.0
4	1	1	0	0	1	1	0	0	35.0
5	1	1	1	0	1	1	0	0	43.0
6	1	1	1	0	1	1	1	0	50.0
7	1	1	0	1	1	1	1	0	60.0
8	1	1	0	1	1	1	0	1	70.0
9	1	1	1	1	1	1	0	1	85.0
10	1	1	1	1	1	1	1	1	100.0

CLOSE CONTROL LOADING SEQUENCE (CIRCUIT A LEAD CIRCUIT, 4-COMPRESSOR UNIT)									
STAGE	COMP A1	LOADER A1	LOADER A2	COMP A2	COMP B1	LOADER B1	LOADER B2	COMP B2	% TOTAL CAPACITY (50/50 Split)
0	0	0	0	0	0	0	0	0	0.0
1	1	0	0	0	0	0	0	0	10.0
2	1	1	0	0	0	0	0	0	18.0
3	1	1	1	0	0	0	0	0	25.0
3A	1	0	0	0	1	0	0	0	20.0
4	1	0	0	0	1	1	0	0	28.0
5	1	1	0	0	1	1	0	0	35.0
6	1	1	1	0	1	1	0	0	43.0
7	1	1	1	0	1	1	1	0	50.0
7A	1	0	0	1	1	1	1	0	45.0
8	1	1	0	1	1	1	1	0	60.0
9	1	1	0	1	1	1	0	1	70.0
10	1	1	1	1	1	1	0	1	85.0
11	1	1	1	1	1	1	1	1	100.0

LEGEND
0 — Off
1 — On

NOTES:

1. Stages 3A and 7A are not used by the algorithm when increasing stages. Stages 3 and 7 are not used by the algorithm when decreasing stages.
2. The loading sequence for 30GX281-325 units is the same as those shown for the 30GX350 above.

APPENDIX B (cont)

The following tables show the loading sequence for a 30GX350 chiller. Each compressor has 2 loaders and the chillers are configured for *staged circuit loading*. See Note 2.

STANDARD LOADING SEQUENCE (CIRCUIT A LEAD CIRCUIT, 4-COMPRESSOR UNIT)									
STAGE	COMP A1	LOADER A1	LOADER A2	COMP A2	COMP B1	LOADER B1	LOADER B2	COMP B2	% TOTAL CAPACITY (50/50 Split)
0	0	0	0	0	0	0	0	0	0.0
1	1	0	0	0	0	0	0	0	10.0
2	1	1	0	0	0	0	0	0	18.0
3	1	1	1	0	0	0	0	0	25.0
4	1	1	0	1	0	0	0	0	35.0
5	1	1	1	1	0	0	0	0	50.0
6	1	1	1	1	1	1	0	0	68.0
7	1	1	1	1	1	1	1	0	75.0
8	1	1	1	1	1	1	0	1	85.0
9	1	1	1	1	1	1	1	1	100.0

CLOSE CONTROL LOADING SEQUENCE (CIRCUIT A LEAD CIRCUIT, 4-COMPRESSOR UNIT)									
STAGE	COMP A1	LOADER A1	LOADER A2	COMP A2	COMP B1	LOADER B1	LOADER B2	COMP B2	% TOTAL CAPACITY (50/50 Split)
0	0	0	0	0	0	0	0	0	0.0
1	1	0	0	0	0	0	0	0	10.0
2	1	1	0	0	0	0	0	0	18.0
3	1	1	1	0	0	0	0	0	25.0
3A	1	0	0	1	0	0	0	0	20.0
4	1	1	0	1	0	0	0	0	35.0
5	1	1	1	1	0	0	0	0	50.0
6	1	1	1	1	1	0	0	0	60.0
7	1	1	1	1	1	1	0	0	68.0
8	1	1	1	1	1	1	1	0	75.0
8A	1	1	1	1	1	0	0	1	70.0
9	1	1	1	1	1	1	0	1	85.0
10	1	1	1	1	1	1	1	1	100.0

LEGEND
0 — Off
1 — On

NOTES:

1. Stages 3A and 8A are not used by the algorithm when increasing stages. Stages 3 and 8 are not used by the algorithm when decreasing stages.
2. The loading sequence for 30GX281-325 units is the same as those shown for the 30GX350 above.

APPENDIX C

The following are the available accessories for 30GX,HXA,HXC units.

ACCESSORY PART NUMBER	USED ON	DESCRIPTION OF ACCESSORY	COMMENTS
30GX-900-001	30GX080-105	Condenser Grille Package	
30GX-900-002	30GX106-125	Condenser Grille Package	
30GX-900-003	30GX136, 150, 160	Condenser Grille Package	
30GX-900-013	30GX151, 161, 175, 205, 225	Condenser Grille Package	
30GX-900-024	30GX176	Condenser Grille Package	
30GX-900-009	30GX206, 226, 250	Condenser Grille Package	
30GX-900-010	30GX251, 265	Condenser Grille Package	
30GX-900-034	30GX281-350	Condenser Grille Package	
30GX-900-004	30GX (115 V Control)	Minimum Load Valve	Both circuits
30GX-900-005	30GX (230 V Control)	Minimum Load Valve	Both circuits
30GX-900-006	30GX (230, 460 V)	Control Transformer	
30GX-900-007	30GX (575 V)	Control Transformer	
30GX-900-008	30GX (208 V)	Control Transformer	
30GX-900-012	30GX080-150, 160	3-Phase Motormaster® Control	Single controller
30GX-900-014	30GX151, 161-350	3-Phase Motormaster Control	Two controllers
30GX-900-015	30GX080-350	Sound Enclosure/Hail Guard/Wind Baffle	Header end only
30GX-900-016	30GX080-105	Sound Enclosure/Hail Guard/Wind Baffle	One side per package
30GX-900-017	30GX106-125	Sound Enclosure/Hail Guard/Wind Baffle	One side per package
30GX-900-018	30GX136, 150, 160	Sound Enclosure/Hail Guard/Wind Baffle	One side per package
30GX-900-019	30GX151, 161, 175, 205, 225	Sound Enclosure/Hail Guard/Wind Baffle	One side per package (151, 161, 175) cooler side only (205, 225)
30GX-900-020	30GX176, 206, 226, 250	Sound Enclosure/Hail Guard/Wind Baffle	One side per package (176) cooler side only (206, 226, 250)
30GX-900-028	30GX205, 225	Sound Enclosure/Hail Guard/Wind Baffle	Control box side only
30GX-900-029	30GX206, 226, 250	Sound Enclosure/Hail Guard/Wind Baffle	Control box side only
30GX-900-030	30GX251, 265	Sound Enclosure/Hail Guard/Wind Baffle	Cooler side only
30GX-900-031	30GX251, 265	Sound Enclosure/Hail Guard/Wind Baffle	Control box side only
30GX-900-039	30GX281-350	Sound Enclosure/Hail Guard/Wind Baffle	Cooler side only
30GX-900-040	30GX281-350	Sound Enclosure/Hail Guard/Wind Baffle	Control box side only
30GX-900-021	30GX (230 V Control)	Cooler Heater	
30GX-900-022	30GX (115 V Control)	Cooler Heater	
30GX-900-023	30GX080-265	Vibration Isolation Pads	
30GX-900-035	30GX281-350	Vibration Isolation Pads	
30GX-900-025	30GX105-136, 160-176 30HX161-186	Insulation Kit (16", 3-Pass Cooler with Economizer)	Tubesheets/heads/economizers
30GX-900-026	30GX150, 151	Insulation Kit (14", 2-Pass Cooler with Economizer)	Tubesheets/heads/economizers
30GX-900-027	30GX150, 151	Insulation Kit (14", 1-Pass Cooler with Economizer)	Tubesheets/heads/economizers
30GX-900-032	30GX205-265 30HX206-271	Insulation Kit (18", 3-Pass Cooler with Economizer)	Tubesheets/heads/economizers
30GX-900-033	30GX150-151	Insulation Kit (14", 3-Pass Cooler with Economizer)	Tubesheets/heads/economizers
30GX-900-036	30GX281-350	Insulation Kit (20", 3-Pass Cooler with Economizer)	Tubesheets/heads/economizers
30GX-900-037	30GX281-350	Insulation Kit (20", 2-Pass Cooler with Economizer)	Tubesheets/heads/economizers
30GX-900-038	30GX281-350	Insulation Kit (20", 1-Pass Cooler with Economizer)	Tubesheets/heads/economizers
30HX-900-001	30HX116-271	Sound Enclosure Panels	
30HX-900-011	30HX076-106	Sound Enclosure Panels	
30HX-900-002	30GX080-090, 150, 151 30HX076-096, 116-146	Victaulic Cooler Connections (14 in.)	
30HX-900-003	30GX105-136, 160-176 30HX106, 161-186	Victaulic Cooler Connections (16 in.)	
30HX-900-014	30GX205-265 30HX206-271	Victaulic Cooler Connections (18 in.)	
30HX-900-028	30GX281-350	Victaulic Cooler Connections (20 in.)	

APPENDIX C (cont)

The following are the available accessories for 30GX,HXA,HXC units.

ACCESSORY PART NUMBER	USED ON	DESCRIPTION OF ACCESSORY	COMMENTS
30HX-900-015	30HX206-271	Victaulic Condenser Connections (22 in.)	
30HX-900-004	30HX076-146	Victaulic Condenser Connections (18 in.)	
30HX-900-005	30HX161-186	Victaulic Condenser Connections (20 in.)	
30HX-900-006	30HX (230, 460 V)	Control Transformer	
30HX-900-013	30HX (575 V)	Control Transformer	
30HX-900-008	30HX (115 V Control)	Minimum Load Valve	Single circuit
30HX-900-009	30HX (230 V Control)	Minimum Load Valve	Single circuit
30HX-900-010	30HX076-271	Vibration Isolation Pads	
30HX-900-016	30GX080, 090 30HX076-096, 116-146	Insulation Kit (14", 3-Pass Cooler, no Economizer)	Tubesheets/heads
30HX-900-017	30GX080, 090 30HX076-096, 116-146	Insulation Kit (14", 2-Pass Cooler, no Economizer)	Tubesheets/heads
30HX-900-020	30GX105-136, 160-176 30HX161-186	Insulation Kit (16", 2-Pass Cooler with Economizer)	Tubesheets/heads/economizers
30HX-900-021	30GX160-176 30HX161-186	Insulation Kit (16", 1-Pass Cooler with Economizer)	Tubesheets/heads/economizers
30HX-900-022	30GX205-265 30HX206-271	Insulation Kit (18", 2-Pass Cooler with Economizer)	Tubesheets/heads/economizers
30HX-900-023	30GX205-265 30HX206-271	Insulation Kit (18", 1-Pass Cooler with Economizer)	Tubesheets/heads/economizers
CRLIDASY001A00	30GX, 30HX all	Remote Enhanced Display	
30GT-911-057	30GX all	Unit Control Display Access Door	

APPENDIX D

Building Interface — The 30GX,HX chiller can be interfaced with multi-vendor control systems through 3 levels of inter-operability using BacLink, DataPort, or DataLink. BacLink functions as a gateway between a CCN and a BACnet system to facilitate the passing of data from the CCN to BACnet. The Carrier DataPort is an interface device that allows other HVAC control systems to “read only” values in system elements connected to a CCN communication bus. The

Carrier DataLink is an interface device that allows other HVAC control systems to read and change (“read/write”) values in system elements connected to a CCN bus. Both DataPort and DataLink request data from a specified CCN system element and translate this data into ASCII characters off network. Information from the 30GX,HX chiller control to support interface are listed in the following tables.

BacLink Object Definition

CCN TABLE NAME	DESCRIPTION	POINT	ACCESS
A_UNIT_1	Control Mode	MODE	RO
	Run Status	STATUS	RO
	Occupied	OCC	RO
	CCN Enable	ENA_CCN	RW
	CCN Chiller Start/Stop	CHIL_S_S	RW
	Alarm State	ALM	RO
	Current Alarm 1	alarm_1	RO
	Current Alarm 2	alarm_2	RO
	Current Alarm 3	alarm_3	RO
	Current Alarm 4	alarm_4	RO
	Current Alarm 5	alarm_5	RO
	Active Demand Limit	DEM_LIM	RW
	Percent Total Capacity	CAP_T	RO
	Control Point	CTRL_PNT	RW
	Entering Fluid Temp	EWT	RO
	Leaving Fluid Temp	LWT	RO
	Emergency Stop	EMSTOP	RW
	Heat/Cool Status	HEATCOOL	RO
CIRCA_AN	Percent Total Capacity	CAPA_T	RO
	Percent Available Capacity	CAPA_A	RO
	Discharge Pressure	DP_A	RO
	Suction Pressure	SP_A	RO
	A1 Oil Pressure	OP_A1	RO
	A2 Oil Pressure	OP_A2	RO
	Saturated Condensing Temp	TMP_SCTA	RO
	Saturated Suction Temp	TMP_SSTA	RO
CIRCA_DIO	Compressor A1	K_A1_RLY	RO
	Compressor A2	K_A2_RLY	RO
	Loader A1	LOADR_A1	RO
	Loader A2	LOADR_A2	RO
	Min Load Valve, Valve A	MLV_A	RO
CIRCB_AN	Percent Total Capacity	CAPB_T	RO
	Percent Available Capacity	CAPB_A	RO
	Discharge Pressure	DP_B	RO
	Suction Pressure	SP_B	RO
	B1 Oil Pressure	OP_B1	RO
	B2 Oil Pressure	OP_B2	RO
	Saturated Condensing Temp	TMP_SCTB	RO
	Saturated Suction Temp	TMP_SSTB	RO
CIRB_DIO	Compressor B1	K_B1_RLY	RO
	Compressor B2	K_B2_RLY	RO
	Loader B1	LOADR_B1	RO
	Loader B2	LOADR_B2	RO
	Min Load Valve, Valve B	MLV_B	RO
UNIT_2	Cooler Entering Fluid	COOL_EWT	RO
	Cooler Leaving Fluid	COOL_LWT	RO
	Condenser Entering Fluid	COND_EWT	RO
	Condenser Leaving Fluid	COND_LWT	RO
	4 to 20 mA Reset	RST_MA	RO

LEGEND

RO — Read Only
RW — Read/Write

APPENDIX D (cont)

BacLink Object Definition (cont)

CCN TABLE NAME	DESCRIPTION	POINT	ACCESS
UNIT_3	Fan Relay 1	FAN_1	RO
	Fan Relay 2	FAN_2	RO
	Fan Relay 3	FAN_3	RO
	Fan Relay 4	FAN_4	RO
	Fan Relay 5	FAN_5	RO
	Fan Relay 6	FAN_6	RO
	4 to 20 mA Demand	LMT_MA	RW
	CCN Loadshed	DL_STAT	RO
	Cooler Pump Relay	COOL_PMP	RO
	Condenser Pump Relay	COND_PMP	RO
SETPOINT	Cool Set Point 1	CSP1	RW
	Cool Set Point 2	SCP2	RW
	Heat Set Point 1	HSP1	RW
	Heat Set Point 2	HSP2	RW
	Demand Switch 1 Set Point	dlswsp1	RW
	Demand Switch 2 Set Point	dlswsp2	RW

CCN TABLE NAME	DATA TABLE NAME	ACCESS
OCCDEFCS	OCCPC01S	RW
	OCCPC02S	RW
	OCCPC65S	RW

LEGEND
 RO — Read Only
 RW — Read/Write

APPENDIX D (cont)

DataPort/DataLink Object Definition

CCN TABLE NAME	DESCRIPTION	STATUS	UNITS	POINT	FORCIBLE
A_UNIT_1	GENERAL PARAMETERS				
	Control Mode	(Modes 5-12)		MODE	N
	Run Status	On/Off/Test		STATUS	N
	Occupied?	Yes/No		OCC	N
	CCN Enable	On/Off		ENA_CCN	Y
	CCN Chiller Start/Stop	Start/Stop		CHIL_S_S	Y
	Alarm State	Normal		ALM_	N
	Current Alarm 1	nn.n		alarm1	N
	Current Alarm 2	nn.n		alarm2	N
	Current Alarm 3	nn.n		alarm3	N
	Current Alarm 4	nn.n		alarm4	N
	Current Alarm 5	nn.n		alarm5	N
	Active Demand Limit	0-100	%	DEM_LIM	Y
	Percent Total Capacity	0-100	%	CAP_T	N
	Water/Brine Set Point	snn.n	°F	SP_	N
	Control Point	snn.n	°F	CTRL_PNT	Y
	Entering Fluid Temp	snnn.n	°F	EWT	N
	Leaving Fluid Temp	snnn.n	°F	LWT	N
	Emergency Stop	Enable/Emstop		EMSTOP	Y
	Minutes Left for Start	0-15	min	min_left	N
	Heat/Cool Status	Heat/Cool		HEATCOOL	N
CIRCA_AN	CIRCUIT A ANALOG VALUES				
	Total Capacity	0-100	%	CAPA_T	N
	Available Capacity	0-100	%	CAPA_A	N
	Discharge Pressure	nnn.n	PSI	DP_A	N
	Suction Pressure	nnn.n	PSI	SP_A	N
	A1 Oil Pressure Diff.	nnn.n	PSI	DOP_A1	N
	A2 Oil Pressure Diff.	nnn.n	PSI	DOP_A2	N
	A1 Oil Pressure	nnn.n	PSI	OP_A1	N
	A2 Oil Pressure	nnn.n	PSI	OP_A2	N
	Discharge Gas Temperature		°F	DISTMP_A	N
	A1 Motor Temperature		°F	TMTR_A1	N
	A2 Motor Temperature		°F	TMTR_A2	N
	Saturated Condensing Temp	snnn.n	°F	TMP_SCTA	N
	Saturated Suction Temp	snnn.n	°F	TMP_SSTA	N
	EXV Percent Open	0-100	%	EXV_A	N
	Motormaster Speed*	0-100	%	SPEEDA	Y
	Water Valve Position*	0-100	%	WV_A	Y
	Cooler Level Indicator	0-3	—	LEVEL_A	N
	CPM A1 Feedback	0-10	Volts	K_A1_FBK	N
	CPM A2 Feedback	0-10	Volts	K_A2_FBK	N
	Circuit A ECON Pressure	nnn.n	PSI	ECNP_A	N
CIRA_DIO	CIR. A DISCRETE OUTPUTS				
	Compressor A1	On/Off		K_A1_RLY	N
	Compressor A2	On/Off		K_A2_RLY	N
	Loader A1	On/Off		LOADR_A1	N
	Loader A2	On/Off		LOADR_A2	N
	Min. Load Valve, Valve A	On/Off		MLV_A	N
	Circuit A Oil Heater	On/Off		OILA_HTR	N
	A1 Mtr Cooling Solenoid	On/Off		MTRCL_A1	N
	A2 Mtr Cooling Solenoid	On/Off		MTRCL_A2	N
	Circuit A Oil Pump	On/Off		OILPMP_A	N
	Oil Solenoid A1	On/Off		OILSL_A1	N
	Oil Solenoid A2	On/Off		OILSL_A2	N
	CIR A DISCRETE INPUTS				
	Compressor A1 Feedback	On/Off		K_A1_FBK	N
	Compressor A2 Feedback	On/Off		K_A2_FBK	N

*These values may be modified at any time (Unit On/Off).

APPENDIX D (cont)

DataPort/DataLink Object Definition (cont)

CCN TABLE NAME	DESCRIPTION	STATUS	UNITS	POINT	FORCIBLE
CIRCB_AN	CIRCUIT A ANALOG VALUES				
	Total Capacity	0-100	%	CAPB_T	N
	Available Capacity	0-100	%	CAPB_A	N
	Discharge Pressure	nnn.n	PSI	DP_B	N
	Suction Pressure	nnn.n	PSI	SP_B	N
	B1 Oil Pressure Diff.	nnn.n	PSI	DOP_B1	N
	B2 Oil Pressure Diff.	nnn.n	PSI	DOP_B2	N
	B1 Oil Pressure	nnn.n	PSI	OP_B1	N
	B2 Oil Pressure	nnn.n	PSI	OP_B2	N
	Discharge Gas Temperature		°F	DISTMP_B	N
	B1 Motor Temperature		°F	TMTR_B1	N
	B2 Motor Temperature		°F	TMTR_B2	N
	Saturated Condensing Temp	snnn.n	°F	TMP_SCTB	N
	Saturated Suction Temp	snnn.n	°F	TMP_SSTB	N
	EXV Percent Open	0-100	%	EXV_B	N
	Motormaster Speed*	0-100	%	SPEEDB	Y
	Cooler Level Indicator	0-3	—	LEVEL_B	N
	CPM B1 Feedback	0-10	Volts	K_B1_FBK	N
	CPM B2 Feedback	0-10	Volts	K_B2_FBK	N
	Circuit B ECON Pressure	nnn.n	PSI	ECNP_B	N
CIRB_DIO	CIR. B DISCRETE OUTPUTS				
	Compressor B1	On/Off		K_B1_RLY	N
	Compressor B2	On/Off		K_B2_RLY	N
	Loader B1	On/Off		LOADR_B1	N
	Loader B2	On/Off		LOADR_B2	N
	Min. Load Valve, Valve B	On/Off		MLV_B	N
	Circuit B Oil Heater	On/Off		OILB_HTR	N
	B1 Mtr Cooling Solenoid	On/Off		MTRCL_B1	N
	B2 Mtr Cooling Solenoid	On/Off		MTRCL_B2	N
	Circuit B Oil Pump	On/Off		OILPMP_B	N
	Oil Solenoid B1	On/Off		OILSL_B1	N
	Oil Solenoid B2	On/Off		OILSL_B2	N
	CIR B DISCRETE INPUTS				
	Compressor B1 Feedback	On/Off		K_B1_FBK	N
	Compressor B2 Feedback	On/Off		K_B2_FBK	N
UNIT_2	UNIT ANALOG PARAMETERS				
	Cooler Entering Fluid	snnn.n	°F	COOL_EWT	N
	Cooler Leaving Fluid	snnn.n	°F	COOL_LWT	N
	Condenser Entering Fluid	snnn.n	°F	COND_EWT	N
	Condenser Leaving Fluid	snnn.n	°F	COND_LWT	N
	Reclaim Entering Fluid	snnn.n	°F	HR_EWT	N
	Reclaim Leaving Fluid	snnn.n	°F	HR_LWT	N
	5 Volt Supply	sn.n	Volts	P_REF	N
	TEMPERATURE RESET				
	4 to 20 mA Reset Signal	nn.n	mA	RST_MA	N
	Return Reset Signal	snnn.n	°F	RSTRTN	N
	External Reset Signal	snnn.n	°F	T_SPACE	Y
	Outdoor Air Temp	snnn.n	°F	OAT	Y
	Calculated Reset	snnn.n	°F	sp_delta	N

*These values may be modified at any time (Unit On/Off).

APPENDIX D (cont)

DataPort/DataLink Object Definition (cont)


CCN TABLE NAME	DESCRIPTION	STATUS	UNITS	POINT	FORCIBLE
UNIT_3	MISC INPUTS/OUTPUTS				
	Fan Relay 1	On/Off		FAN_1	N
	Fan Relay 2	On/Off		FAN_2	N
	Fan Relay 3	On/Off		FAN_3	N
	Fan Relay 4	On/Off		FAN_4	N
	Fan Relay 5	On/Off		FAN_5	N
	Fan Relay 6	On/Off		FAN_6	N
	DEMAND LIMIT				
	4 to 20 mA Demand Signal	nn.n	mA	LMT_MA	N
	Demand Switch 1	On/Off		DMD_SW1	N
	Demand Switch 2	On/Off		DMD_SW2	N
	CCN Loadshed Signal	Normal/Redline/Shed		DL_STAT	N
	Max Allowable CAP	0-100	%	DEM_LIM	Y
	PUMPS				
	Cooler Pump Relay	On/Off		COOL_PMP	N
	Cooler Pump Flow Switch	On/Off		CFLOW_SW	N
	Condenser Pump Relay	On/Off		COND_PMP	N
	Condenser Pump Flow Switch	On/Off		DFLOW_SW	N
	MISCELLANEOUS				
	Ice Valve	On/Off		ICE_VALVE	N
	Ice Build Complete	Yes/No		ICE_DONE	N
	Heat/Cool Switch	Heat/Cool		HC_SW	Y
	Dual Set Point Switch	On/Off		DUAL	Y
	Cooler Heater	On/Off		COOL_HTR	N
	Options Temperature 1	snnn.n	°F	OPT_TMP1	N
	Options Temperature 2	snnn.n	°F	OPT_TMP2	N

CCN TABLE NAME	DESCRIPTION	STATUS	DEFAULTS	UNITS	POINT
SETPOINT	COOLING				
	Cool Set Point 1*	snnn.n	44.0	°F	CSP1
	Cool Set Point 2*	snnn.n	44.0	°F	CSP2
	Cooling Ramp Loading*	0.2 to 2.0	1.0	^F	CRAMP
	HEATING				
	Heat Set Point 1*	snnn.n	100.0	°F	HSP1
	Heat Set Point 2*	snnn.n	100.0	°F	HSP2
	Heating Ramp Loading*	0.2 to 2.0	1.0	^F	HRAMP
	HEAD PRESSURE				
	Head Pressure Set Point A*	nnn.n	100.0	°F	HSP_A
	Head Pressure Set Point B*	nnn.n	100.0	°F	HSP_B
	DEMAND LIMIT				
	Demand Switch 1 Set Point*	0-100	0	%	dlswsp1
	Demand Switch 2 Set Point*	0-100	0	%	dlswsp2
	LCW Delta Alarm Limit*	2.0 to 60	60.0	^F	lcw_lmt
	Minute off time*	0 to 15	0	min	delay
	Motor Temp Set Point*	0.0 to 240.0	185.0	°F	mtr_t_sp

*These values may be modified at any time (Unit On/Off).

APPENDIX E


The following charts list pressure drops for coolers and condensers.

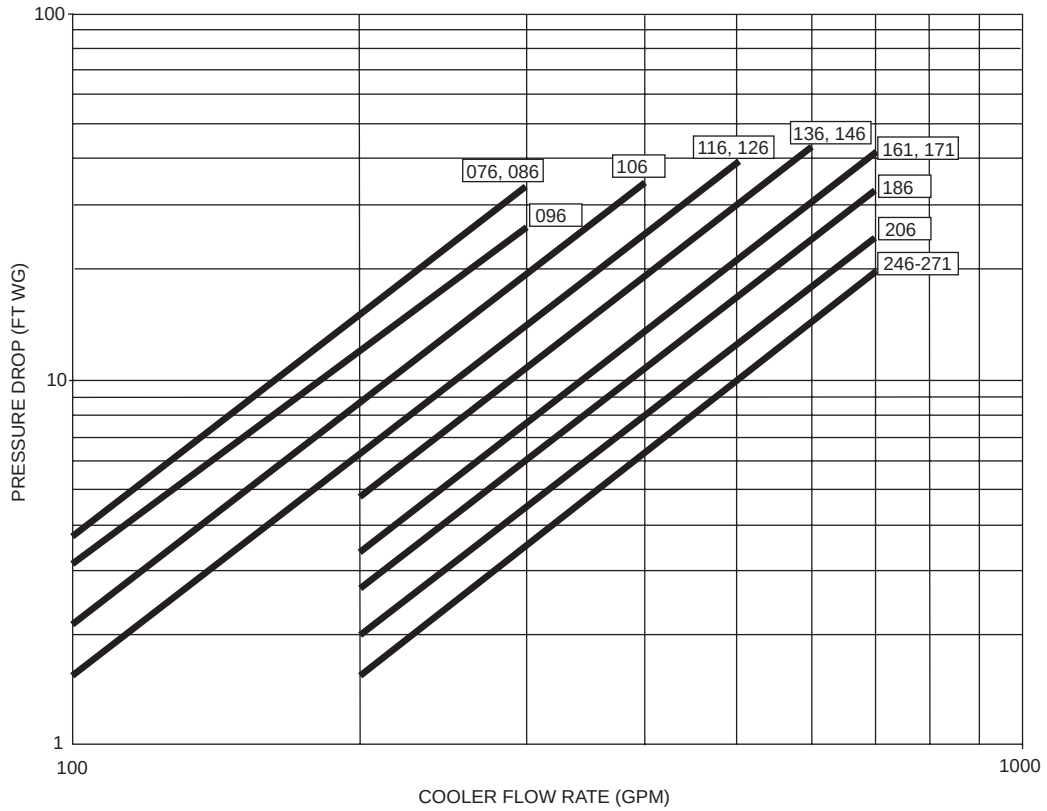

Unit Size Range

NOTE: Ft of water = 2.31 x psig.


30HX COOLER PRESSURE DROP — ENGLISH

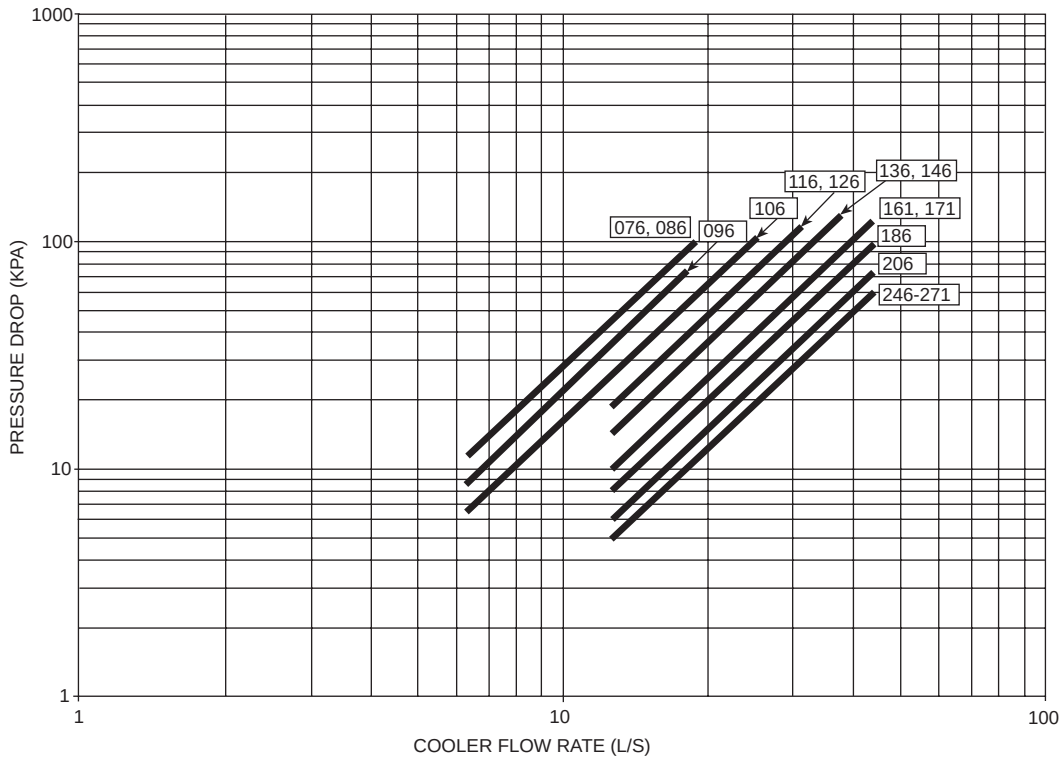

Unit Size Range

30HX COOLER PRESSURE DROP — SI


APPENDIX E (cont)

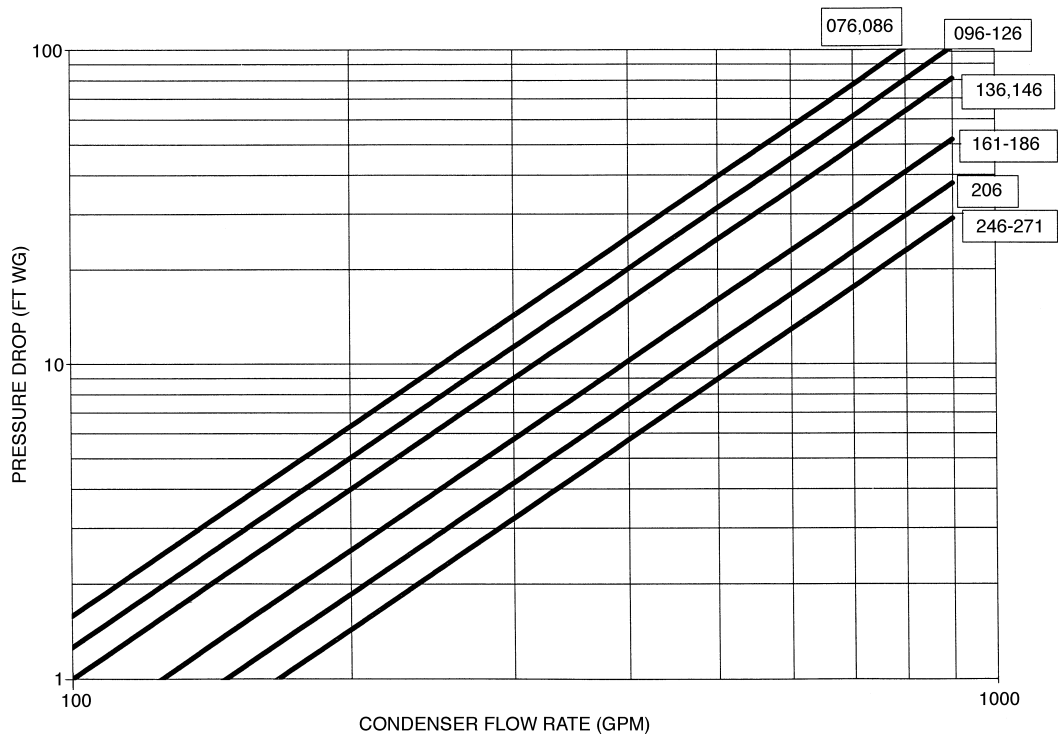

Unit Size Range

NOTE: Ft of water = 2.31 x psig.


30HX CONDENSER PRESSURE DROP — ENGLISH

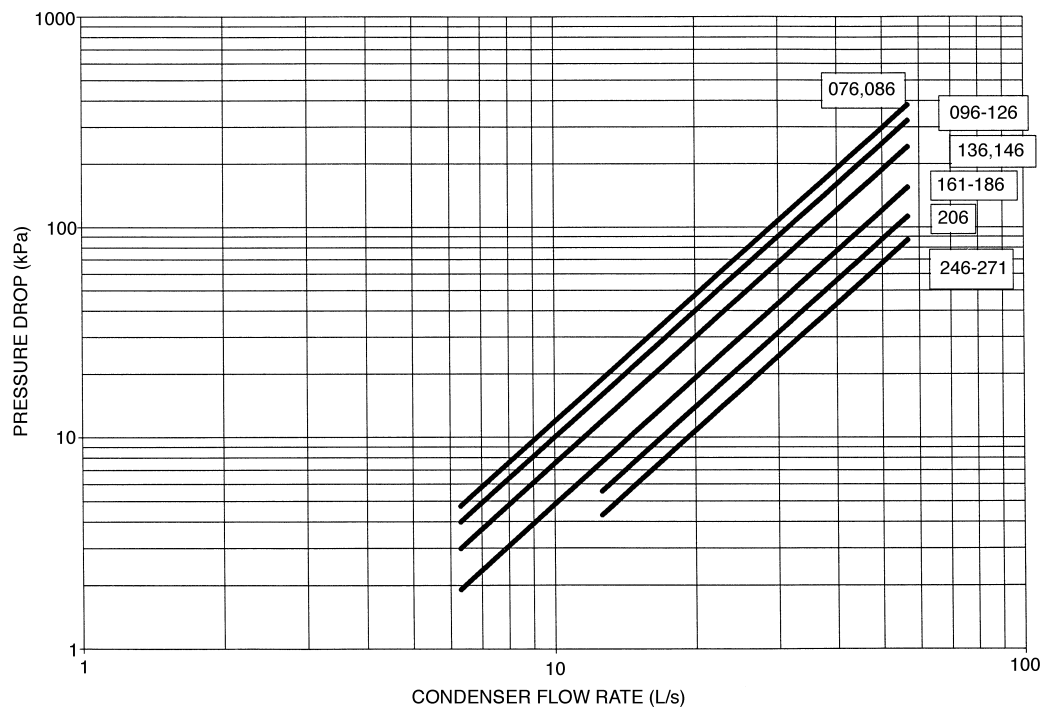

Unit Size Range


30HX CONDENSER PRESSURE DROP — SI

APPENDIX E (cont)

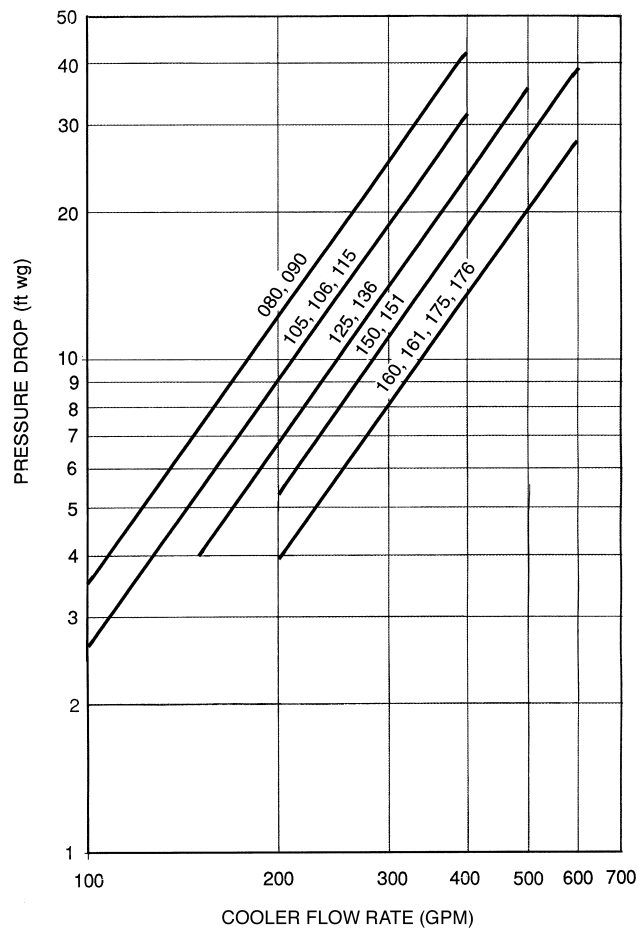


NOTE: Ft of water = 2.31 x psig.


30GX080-176 COOLER PRESSURE DROP — ENGLISH

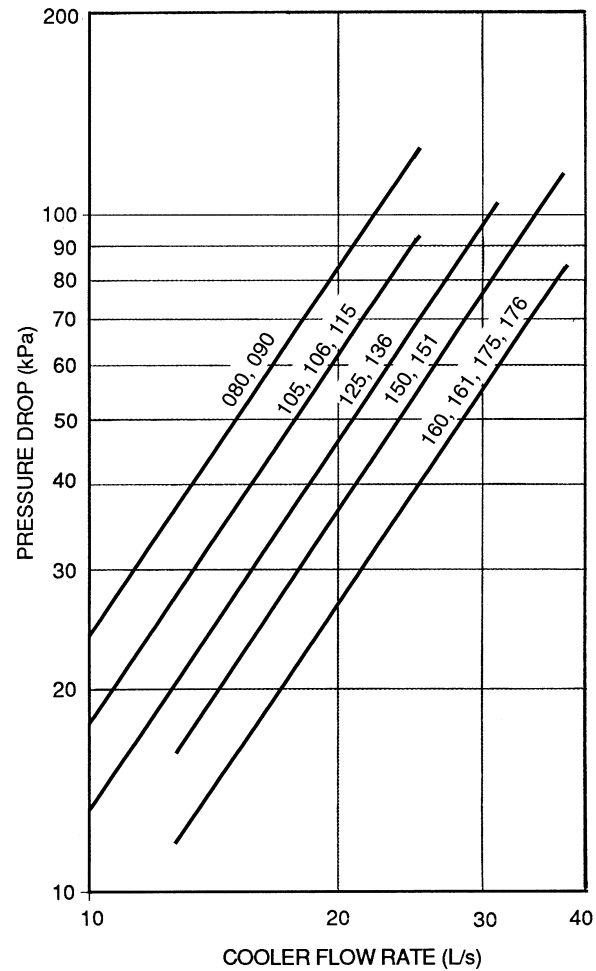

30GX080-176 COOLER PRESSURE DROP — SI

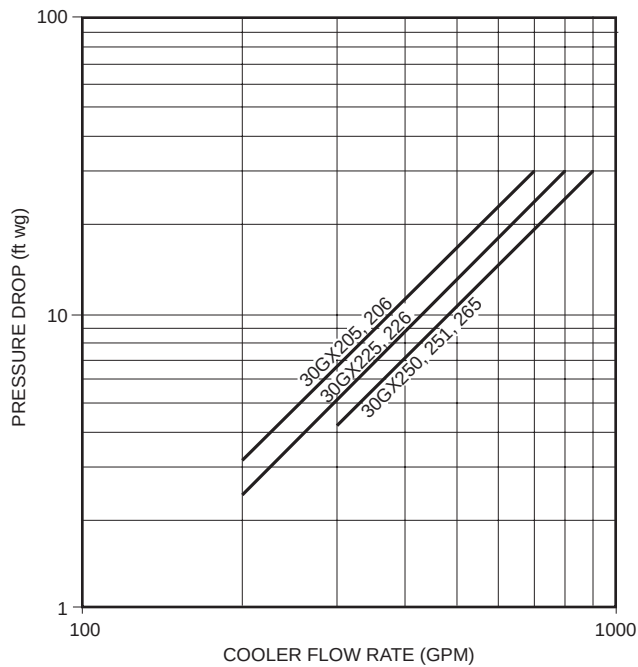


30GX205-265 COOLER PRESSURE DROP — ENGLISH

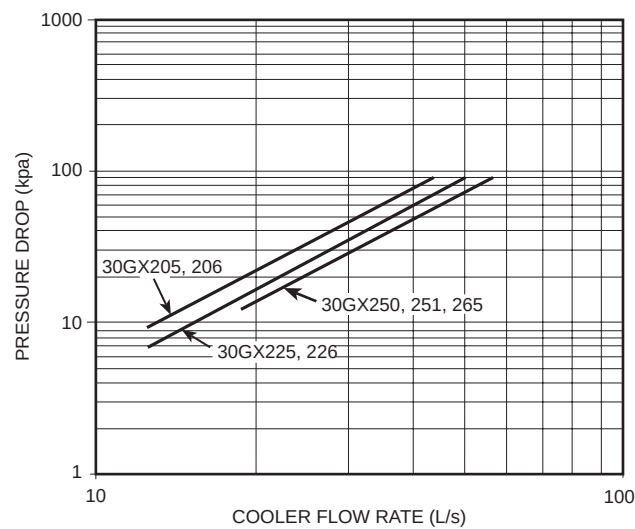


30GX205-265 COOLER PRESSURE DROP — SI

APPENDIX E (cont)

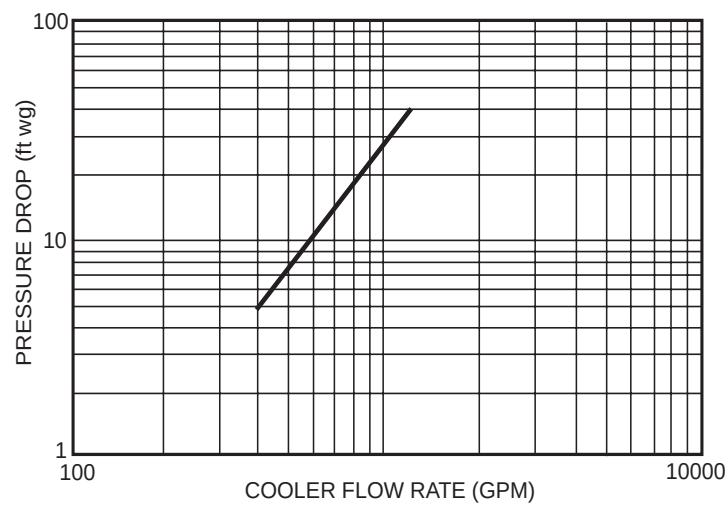


30GX281-350 COOLER PRESSURE DROP — ENGLISH

NOTE: Ft of water = 2.31 x psig.

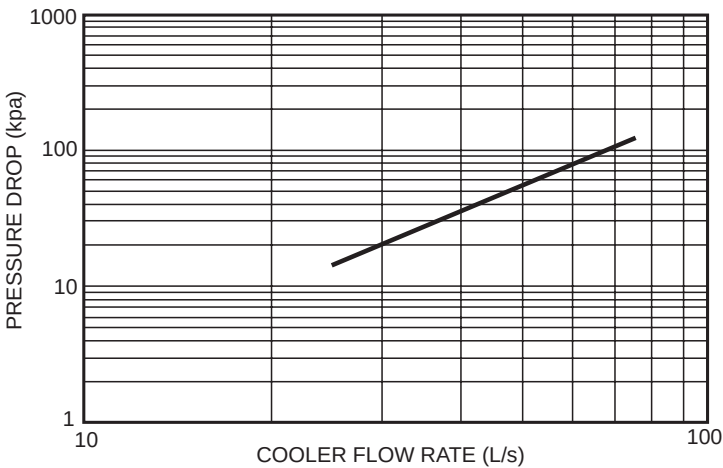


30GX281-350 COOLER PRESSURE DROP — SI

APPENDIX F

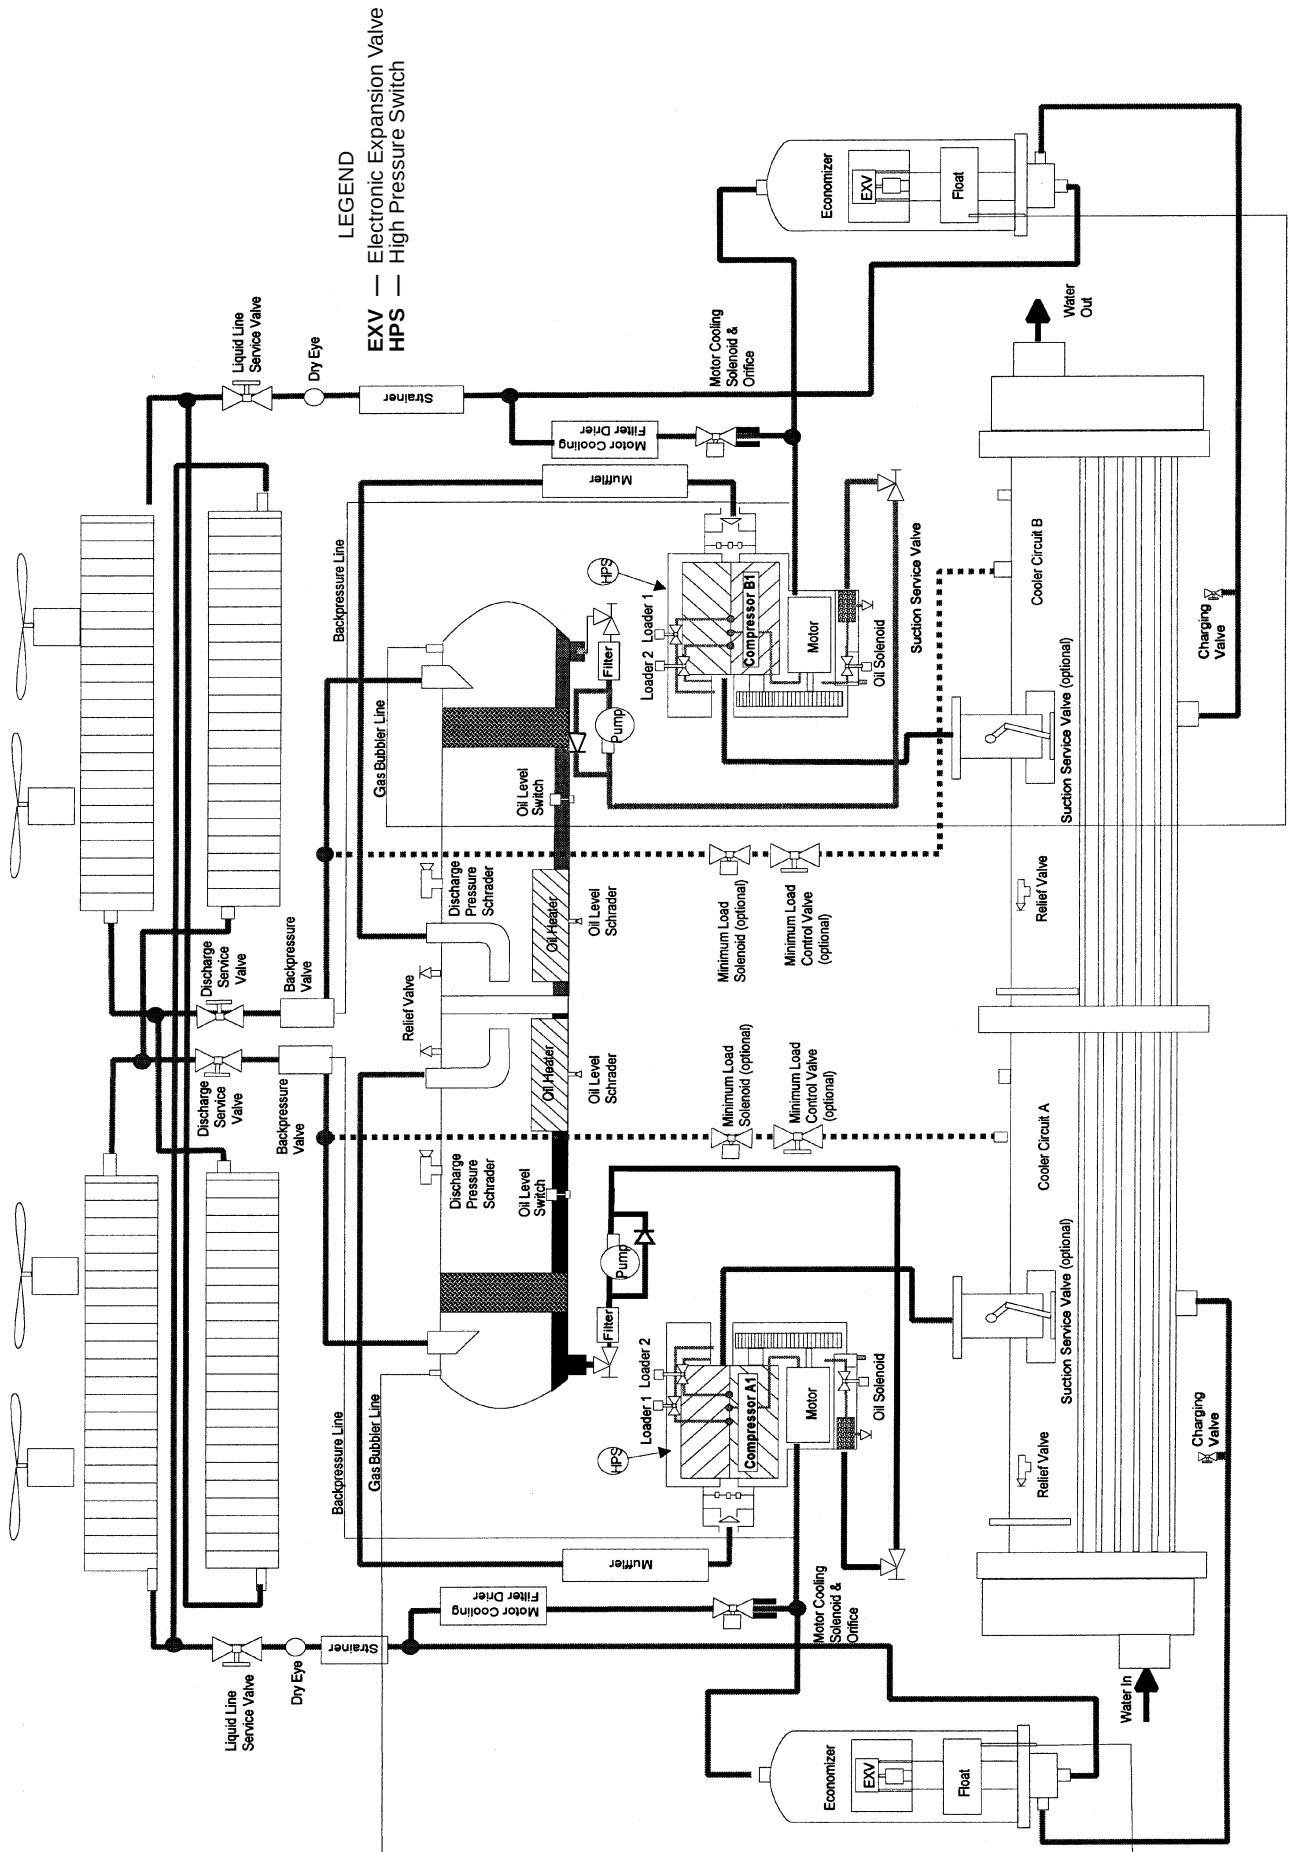

Typical System Components, 30GX, With Economizer

LEGEND
EXV — Electronic Expansion Valve
HPS — High Pressure Switch

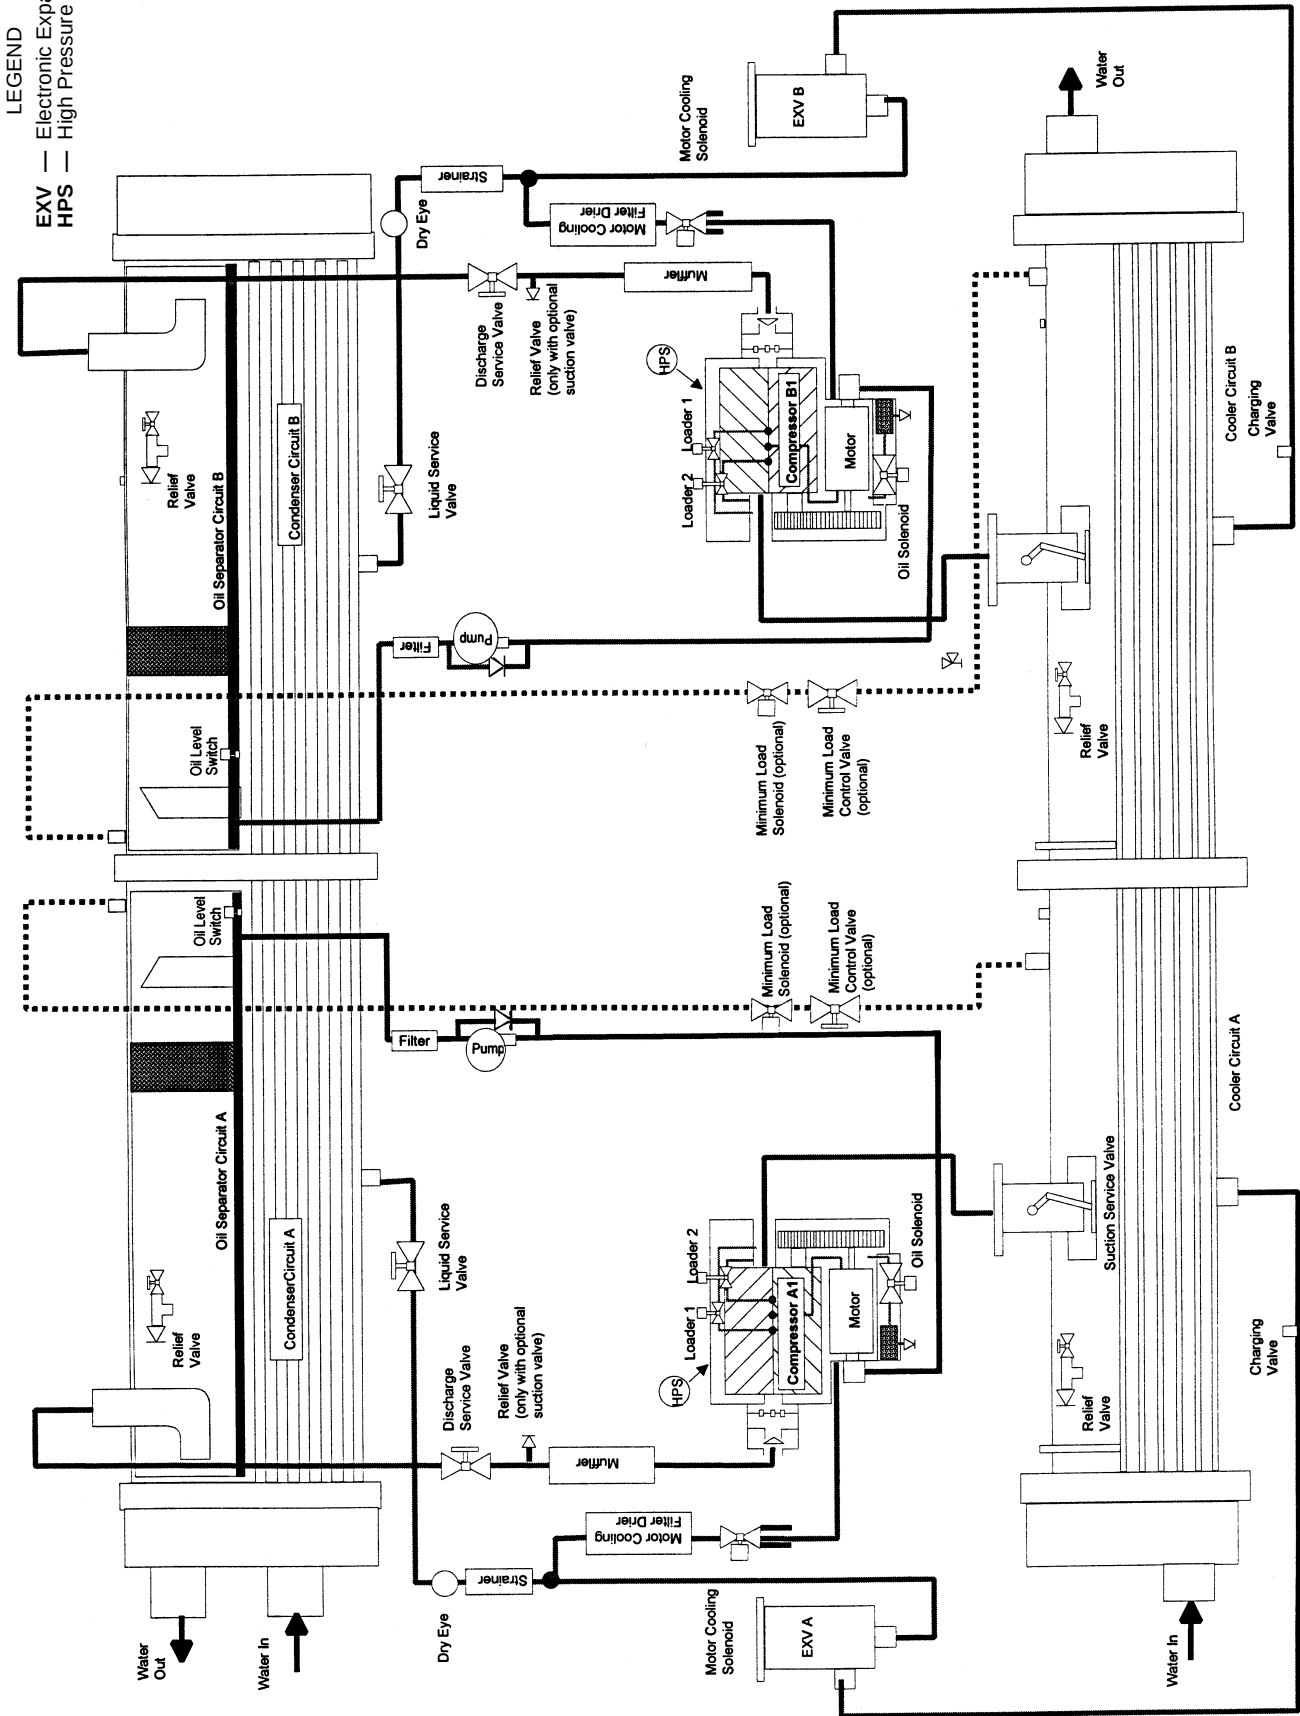

Typical System Components, 30HX, Without Economizer

INDEX

- 09DK Condensing Units, 11
- Accessing Functions and Subfunctions, 15
- Actual Start-Up, 69
- Adjusting PID Routines, 14
- Alarms and Alerts, 45
- Air-Cooled Units (30GX), 10
- Automatic Default Display, 15
- Back Pressure Valve, 4
- Burnout Clean-Up Procedure, 60
- Capacity Control Overrides, 9
- Capacity Control, 7
- Capacity Sequence Determination, 8
- Carrier Comfort Network (CCN) Interface, 66
- Checking Display Codes, 45
- Close Control, 7
- Coil Cleaning, 55
- Complete Unit Stoppage, 45
- Compressor Alarm/Alert Circuit, 46
- Compressor Changeout Sequence, 58
- Compressor Protection Module (CPM), 3, 4, 65
- Compressor Protection, 64
- Condenser Coils (30GX Only), 55
- Condenser Fans (30GX Only), 56
- Condenser Pump Control, 15
- Condenserless Units (30HXA), 11
- Control (LOR) Switch, 3
- Control Module Battery Replacement, 66
- Control Modules, 65
- Cooler and Condenser (30HXC) Pump Control, 14
- Cooler Heater Control, 15
- Cooler Protection, 64
- Cooler Pump Control, 14
- Demand Limit, 41
- Demand Limit (CCN Loadshed Controlled), 44
- Demand Limit (Switch Controlled, 30GX only), 41
- DSIO-HV Relay Module, 3, 65
- Economizer Operation, 4
- Electronic Expansion Device (EXD), 3
- Electronic Expansion Device Module, 3
- EXD Troubleshooting Procedure, 52
- External Temperature Reset, 41
- Externally Powered Demand Limit, 44
- Externally Powered Reset, 41
- EXV Driver Module (DSIO-EXV), 65
- EXV Operation, 3
- Field Wiring, 70
- Filter Drier, 60
- Head Pressure Control, 10
- High Voltage Relay Module (DSIO-HV), 65, 68
- History Function, 27
- Inspecting/Cleaning Heat Exchangers, 55
- Inspecting/Opening Economizers, 53
- Inspecting/Opening Electronic Expansion Valves, 53
- Keypad and Display Module (HSIO-II), 3, 15
- Lead/Lag Determination, 7
- Liquid Line Service Valve, 60
- Loading Sequence, 7
- Major System Components, 3
- Minimum Load Valve, 8
- Minutes Left for Start, 7
- Minutes Off Time, 7
- Moisture-Liquid Indicator, 60
- Motor Cooling, 4
- Oil Charging/Low Oil Recharging, 57
- Oil Filter Maintenance, 58
- Oil Heater Control, 15
- Oil Pumps, 4
- Oil Separator Heaters (30GX), 64
- Operating Sequence, 69
- Operation Data, 3
- Power Failure External to the Unit, 45
- Pre-Start-Up Procedure, 69
- Pressure Relief Valves, 64
- Pressure Transducer Calibration, 61
- Pressure Transducers, 61
- Processor Module (PSIO-1), 3, 65, 68
- PSIO-2 (8052) Module, 3, 65
- Refrigerant Charging/Adding Charge, 56
- Relief Devices, 64
- Replacing Defective Processor Module, 68
- Replacing the External Oil Filter, 58
- Replacing the Internal Oil Filter, 58
- Restart Procedure, 45
- Retubing, 54
- Return Fluid Temperature Reset, 41
- Safety Considerations, 1
- Safety Devices, 64
- Schedule Function, 39
- Sensors, 4
- Service Function, 32
- Service, 54
- Servicing Coolers and Condensers, 54
- Set Point Function, 27
- Single Circuit Stoppage, 45
- Start-Up and Operation, 69
- Start-Up Checklist, CL-1
- Status Function, 19
- System Check, 69
- Temperature Reset, 41
- Test Function, 27
- Thermistor Replacement, 61
- Thermistors, 61
- Tightening Cooler/Condenser Head Bolts, 54
- Troubleshooting, 45
- Tube Plugging, 54
- Unit Shutoff, 45
- Water-Cooled Units (30HXC), 11
- Water Treatment, 55
- Winter Shutdown Preparation, 68
- Wye-Delta vs. Across-the-Line (XL) Starting Option, 7

START-UP CHECKLIST FOR 30GX,HX LIQUID CHILLER
(Remove and use for job file.)

A. Preliminary Information

JOB NAME _____

LOCATION _____

INSTALLING CONTRACTOR _____

SALES OFFICE _____

START-UP PERFORMED BY _____

EQUIPMENT:

MODEL _____

S/N _____

COMPRESSORS:

CIRCUIT A _____

CIRCUIT B _____

1) MODEL # _____

1) MODEL # _____

S/N _____

S/N _____

2) MODEL # _____

2) MODEL # _____

S/N _____

S/N _____

COOLER:

MODEL # _____

S/N _____

CONDENSER: (30HX ONLY)

MODEL # _____

S/N _____

MODEL # _____

S/N _____

AIR-HANDLING EQUIPMENT:

MANUFACTURER _____

MODEL # _____

S/N _____

ADDITIONAL AIR-HANDLING UNITS AND ACCESSORIES _____

B. Preliminary Equipment Check

IS THERE ANY SHIPPING DAMAGE? _____ IF SO, WHERE _____

WILL THIS DAMAGE PREVENT UNIT START-UP? _____

- ☐ UNIT IS LEVEL IN ITS INSTALLATION
- ☐ UNIT IS SUPPLIED WITH THE PROPER CONTROL VOLTAGE _____ VAC
- ☐ ELECTRICAL CIRCUIT WIRING HAS BEEN SIZED AND INSTALLED PROPERLY
- ☐ UNIT GROUND WIRE HAS BEEN CONNECTED
- ☐ ELECTRICAL CIRCUIT PROTECTION HAS BEEN SIZED AND INSTALLED PROPERLY
- ☐ ALL TERMINALS ARE TIGHT
- ☐ ALL CABLES AND THERMISTORS HAVE BEEN INSPECTED FOR CROSSED WIRES
- ☐ ALL PLUG ASSEMBLIES ARE TIGHT

CHECK CHILLED WATER SYSTEM

- ☐ ALL CHILLED WATER VALVES ARE OPEN
- ☐ ALL FLUID PIPING IS CONNECTED PROPERLY
- ☐ ALL AIR HAS BEEN VENTED FROM THE SYSTEM
- ☐ CHILLED WATER PUMP (CWP) IS OPERATING WITH THE CORRECT ROTATION

CWP AMPERAGE: RATED: _____ ACTUAL: _____

PUMP PRESSURES: INLET: _____ OUTLET: _____

CHECK CONDENSER SYSTEM (30HXC ONLY):

- ☐ ALL CONDENSER WATER VALVES ARE OPEN
- ☐ ALL CONDENSER PIPING IS CONNECTED PROPERLY
- ☐ ALL AIR HAS BEEN VENTED FROM THE SYSTEM
- ☐ CONDENSER WATER PUMP IS OPERATING WITH THE CORRECT ROTATION

CONDENSER WATER PUMP AMP: RATED: _____ ACTUAL: _____

PUMP PRESSURES: INLET: _____ OUTLET: _____

CHECK REMOTE CONDENSER SYSTEM (30HXA ONLY):

- ☐ ALL REFRIGERANT PIPING IS CONNECTED PROPERLY
- ☐ CHILLER REFRIGERANT PIPING AND CONDENSER HAS BEEN EVACUATED, AS REQUIRED

C. Unit Start-Up

- ☐ CWP STARTER HAS BEEN PROPERLY INTERLOCKED WITH THE CHILLER
- ☐ ALL LIQUID VALVES ARE BACKSEATED
- ☐ ALL DISCHARGE VALVES ARE OPEN
- ☐ ALL SUCTION VALVES ARE OPEN, IF EQUIPPED
- ☐ ALL OIL LINE VALVES ARE OPEN
- ☐ UNIT HAS BEEN LEAK CHECKED

LOCATE, REPAIR, AND REPORT ANY REFRIGERANT LEAKS _____

- ☐ CHECK VOLTAGE IMBALANCE: AB _____ AC _____ BC _____

AVERAGE VOLTAGE = _____ (SEE INSTALLATION INSTRUCTIONS)

MAXIMUM DEVIATION = _____ (SEE INSTALLATION INSTRUCTIONS)

VOLTAGE IMBALANCE = _____ (SEE INSTALLATION INSTRUCTIONS)

- ☐ VOLTAGE IMBALANCE IS LESS THAN 2%

DO NOT START CHILLER IF VOLTAGE IMBALANCE IS GREATER THAN 2%. CONTACT LOCAL POWER COMPANY FOR ASSISTANCE.

- ☐ ALL INCOMING POWER VOLTAGE IS WITHIN RATED VOLTAGE RANGE

CHECK COMPRESSOR RUNNING CURRENT:

COMPRESSOR	NO LOADERS	ONE LOADER	FULL LOAD
COMP A1,L1	_____AMPS	_____AMPS	_____AMPS
COMP A1,L2	_____AMPS	_____AMPS	_____AMPS
COMP A1,L3	_____AMPS	_____AMPS	_____AMPS
COMP B1,L1	_____AMPS	_____AMPS	_____AMPS
COMP B1,L2	_____AMPS	_____AMPS	_____AMPS
COMP B1,L3	_____AMPS	_____AMPS	_____AMPS
COMP A2,L1	_____AMPS	_____AMPS	_____AMPS
COMP A2,L2	_____AMPS	_____AMPS	_____AMPS
COMP A2,L3	_____AMPS	_____AMPS	_____AMPS
COMP B2,L1	_____AMPS	_____AMPS	_____AMPS
COMP B2,L2	_____AMPS	_____AMPS	_____AMPS
COMP B2,L3	_____AMPS	_____AMPS	_____AMPS

CHECK COOLER WATER LOOP:

- ☐ INLET PIPING TO COOLER INCLUDES A 20 MESH STRAINER
- ☐ COOLER FLOW SWITCH SET FOR PROPER MINIMUM FLOW AND COOLER INTERLOCK ENABLED

WATER LOOP DESIGN VOLUME: _____ GALLONS (LITERS)

CALCULATED VOLUME _____ GALLONS (LITERS)

3 GALLONS/NOMINAL TON (3.32 LITERS/kW) FOR AIR CONDITIONING

6 GALLONS/NOMINAL TON (6.65 LITERS/kW) FOR PROCESS COOLING

- ☐ PROPER LOOP VOLUME ESTABLISHED
- ☐ PROPER LOOP CORROSION INHIBITOR INCLUDED _____ GALLONS (LITERS) OF _____

☐ PROPER LOOP FREEZE PROTECTION INCLUDED, IF REQUIRED

_____ GALLONS (LITERS) OF _____

☐ PIPING INCLUDES ELECTRIC HEATER TAPE, IF EXPOSED TO THE OUTSIDE

CHECK PRESSURE DROP ACROSS THE COOLER:

ENTERING COOLER: _____ PSIG (kPa)

LEAVING COOLER: _____ PSIG (kPa)

(LEAVING – ENTERING) x 2.31 FT OF H₂O/PSIG = _____ FT OF H₂O

(LEAVING – ENTERING) x 0.334 M OF H₂O/kPa = _____ M OF H₂O

PLOT COOLER PRESSURE DROP ON PERFORMANCE DATA CHART (IN APPENDIX E) TO DETERMINE TOTAL GALLONS/MINUTE (GPM) OR LITERS PER SECOND (L/S) AND FIND UNIT'S MINIMUM FLOW RATE.

TOTAL GPM (L/S): _____

GPM/NOMINAL TON (L/S PER TON) = _____

☐ TOTAL GPM (L/S) IS GREATER THAN UNIT'S MINIMUM FLOW RATE

☐ TOTAL GPM (L/S) MEETS JOB SPECIFIED REQUIREMENT OF _____ GPM (L/S)

☐ COOLER HEATER FUSE INSTALLED, AND HEATERS ARE ACTIVE (IF USED)

CHECK CONDENSER WATER LOOP:

☐ PROPER LOOP CORROSION INHIBITOR INCLUDED

_____ GALLONS (LITERS) OF _____

☐ INLET PIPING TO CONDENSER INCLUDES A 20 MESH STRAINER

CHECK PRESSURE DROP ACROSS THE CONDENSER (30HXC ONLY):

ENTERING CONDENSER: _____ PSIG (kPa)

LEAVING CONDENSER: _____ PSIG (kPa)

(LEAVING – ENTERING) x 2.31 FT OF H₂O/psig = _____ FT OF H₂O

(LEAVING – ENTERING) x 0.334 M OF H₂O/kPa = _____ M OF H₂O

PLOT CONDENSER PRESSURE DROP ON PERFORMANCE DATA CHART (IN APPENDIX E) TO DETERMINE TOTAL GALLONS/MINUTE (GPM) OR LITERS PER SECOND (L/S) AND FIND UNIT'S MINIMUM FLOW RATE.

TOTAL GPM (L/S): _____

GPM/NOMINAL TON (L/S PER TON) = _____

☐ TOTAL CONDENSER GPM (L/S) IS GREATER THAN UNIT'S MINIMUM FLOW RATE

☐ TOTAL GPM MEETS JOB SPECIFIED REQUIREMENT OF _____ GPM (L/S)

PERFORM TEST FUNCTION (INDICATE POSITIVE RESULT):

ONCE POWER IS SUPPLIED TO THE UNIT, CHECK THE DISPLAY FOR ANY ALARMS, SUCH AS PHASE REVERSAL. FOLLOW THE TEST FUNCTION INSTRUCTIONS IN THE CONTROLS AND TROUBLESHOOTING LITERATURE. BE SURE TO CHECK FOR PROPER FAN ROTATION WITH THE FAN TEST SECTIONS. BE SURE ALL SERVICE VALVES ARE OPEN BEFORE BEGINNING THE COMPRESSOR TEST SECTION. ITEMS MARKED WITH “†” CAN BE TESTED ONLY IF THE UNIT IS CONFIGURED FOR THIS OPTION. DO NOT RUN OIL PUMPS FOR MORE THAN 20 SECONDS.



- ☐ LOADER A1
- ☐ LOADER A2
- ☐ MINIMUM LOAD VALVE A†
- ☐ CIRCUIT A OIL HEATER
- ☐ A1 MOTOR COOLING SOLENOID
- ☐ A2 MOTOR COOLING SOLENOID†
- ☐ CIRCUIT A OIL PUMP
- ☐ OIL SOLENOID A1
- ☐ OIL SOLENOID A2†



- ☐ LOADER B1
- ☐ LOADER B2
- ☐ MINIMUM LOAD VALVE B†
- ☐ CIRCUIT B OIL HEATER
- ☐ B1 MOTOR COOLING SOLENOID
- ☐ B2 MOTOR COOLING SOLENOID†
- ☐ CIRCUIT B OIL PUMP
- ☐ OIL SOLENOID B1
- ☐ OIL SOLENOID B2†



- ☐ CIRCUIT A EXV
- ☐ CIRCUIT B EXV
- ☐ CIRCUIT A WATER VALVE†
- ☐ CIRCUIT A% FAN SPEED (GX)†
- ☐ CIRCUIT B% FAN SPEED (GX)†



- ☐ FAN 1 (30GX)†
- ☐ FAN 2 (30GX)†
- ☐ FAN 3 (30GX)†
- ☐ FAN 4 (30GX)†
- ☐ FAN 5 (30GX)†
- ☐ FAN 6 (30GX)†
- ☐ COOLER PUMP†
- ☐ CONDENSER PUMP†
- ☐ COOLER HEATER†
- ☐ ALARM RELAY†



- ☐ COMPRESSOR A1
- ☐ COMPRESSOR A2†
- ☐ COMPRESSOR B1
- ☐ COMPRESSOR B2†

- ☐ CHECK FOR COMMUNICATING MODULES (BLINKING RED AND GREEN LEDs)
- ☐ CORRECT FLUID SET POINTS ARE ENTERED



COOL SET POINT 1 _____
COOL SET POINT 2 _____

- ☐ CORRECT DATE, TIME, AND OPERATING SCHEDULE(S) ARE SET

☐ REVIEW AND RECORD FACTORY CONFIGURATION CODES, 5 SERV

CONFIGURATION CODE 1: _____

CONFIGURATION CODE 2: _____

CONFIGURATION CODE 3: _____

CONFIGURATION CODE 4: _____

CONFIGURATION CODE 5: _____

☐ REVIEW AND RECORD SOFTWARE VERSION, 1 SERV
SOFTWARE CESR_500100 VERSION _____

☐ REVIEW AND RECORD FIELD CONFIGURATION, 2 SERV

COOLER FLUID SELECT _____

MIN LOAD VALVE SELECT _____

LOADING SEQ. SELECT _____

LEAD/LAG SEQ. SELECT _____

HEAD PRESSURE CONTROL _____

MOTORMASTER SELECT _____

WATER VALVE TYPE _____

EXTERNAL RESET SENSOR _____

COOLER PUMP INTERLOCK _____

COOLER PUMP CONTROL _____

CONDENSER PUMP CONTROL _____

CONDENSER FLOW SWITCH _____

CONDENSER WATER SENSORS _____

☐ REVIEW AND RECORD RESET CONFIGURATION, 4 SERV

COOLING RESET TYPE 1

Degrees Reset at 20 mA _____

COOLING RESET TYPE 2

Remote Temp (No Reset) _____

Remote Temp (Full Reset) _____

Degrees Reset _____

COOLING RESET TYPE 3

CHW Temp (No Reset) _____

CHW Temp (Full Reset) _____

Degrees Reset _____

COOLING RESET

Select/Enable Reset Type _____

DEMAND LIMIT

Demand Limit at 20 mA _____

Loadshed Group Number _____

Loadshed Demand Delta _____

Maximum Loadshed Time _____

WATER VALVE PID

Proportional PID Gain _____

Integral PID Gain _____

Derivative PID Gain _____

AIR MOTORMASTER PID

Proper Manual PID Gain _____

Integral PID Gain _____

Derivative PID Gain _____

TO START THE CHILLER:

BE SURE THAT ALL SERVICE VALVES ARE OPEN, AND ALL PUMPS ARE ON BEFORE ATTEMPTING TO START THIS MACHINE. ONCE ALL CHECKS HAVE BEEN MADE, MOVE THE SWITCH TO “LOCAL” OR “REMOTE” FROM “OFF.”

☐ UNIT STARTS AND OPERATES PROPERLY.

TEMPERATURES AND PRESSURES:

ONCE THE MACHINE HAS BEEN OPERATING FOR A WHILE AND THE TEMPERATURES AND PRESSURES HAVE STABLIZED, RECORD THE FOLLOWING:

COOLER EWT _____

COOLER LWT _____

AMBIENT TEMPERATURE _____

CONDENSER EWT
(ENTERING WATER TEMP) _____

CONDENSER LWT
(LEAVING WATER TEMP) _____

CIR. A OIL PRESS _____

CIR. A SUCTION PRESS _____

CIR. A DISCHARGE PRESS _____

CIR. A ECONOMIZER PRESS _____

CIR. A DISCHARGE TEMP _____

CIR. A LIQUID LINE TEMP _____

CIR. B OIL PRESS _____

CIR. B SUCTION PRESS _____

CIR. B DISCHARGE PRESS _____

CIR. B ECONOMIZER PRESS _____

CIR. B DISCHARGE TEMP _____

CIR. B LIQUID LINE TEMP _____

NOTE: OIL FILTER PRESSURE DROPS MUST BE CHECKED AFTER INITIAL 200-300 HOURS OF COMPRESSOR OPERATION. SEE OIL FILTER MAINTENANCE SECTION, PAGE 58.

NOTES:

CUT ALONG DOTTED LINE

CUT ALONG DOTTED LINE