



Installation Instructions

Location of Parts Motor Change Out Kit KIT16323

Model Number: CVHE

June 2015

PART-SVN144B-EN
© 2015 Trane All Rights Reserved



1

Warnings, Cautions, and Notices

Read this manual thoroughly before operating or servicing this unit. Safety advisories appear throughout this manual as required. Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

The three types of advisories are defined as follows:

- ⚠ WARNING** Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
- ⚠ CAUTION** Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert
- NOTICE** Indicates a situation that could result in equipment or property-damage only accidents.

Important Environmental Concerns

Scientific research has shown that certain man-made chemicals can affect the earth's naturally occurring stratospheric ozone layer when released to the atmosphere. In particular, several of the identified chemicals that may affect the ozone layer are refrigerants that contain Chlorine, Fluorine and Carbon (CFCs) and those containing Hydrogen, Chlorine, Fluorine and Carbon (HCFCs). Not all refrigerants containing these compounds have the same potential impact to the environment. Trane advocates the responsible handling of all refrigerants-including industry replacements for CFCs such as HCFCs and HFCs.

Important Responsible Refrigerant Practices

Trane believes that responsible refrigerant practices are important to the environment, our customers, and the air conditioning industry. All technicians who handle refrigerants must be certified. The Federal Clean Air Act (Section 608) sets forth the requirements for handling, reclaiming, recovering and recycling of certain refrigerants and the equipment that is used in these service procedures. In addition, some states or municipalities may have additional requirements that must also be adhered to for responsible management of refrigerants. Know the applicable laws and follow them.

2

⚠ WARNING

Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury. All field wiring MUST be performed by qualified personnel. Improperly installed and grounded field wiring poses FIRE and ELECTROCUTION hazards. To avoid these hazards, you MUST follow requirements for field wiring installation and grounding as described in NEC and your local/state electrical codes.

⚠ WARNING

Personal Protective Equipment Required!

Installing/servicing this unit could result in exposure to electrical, mechanical and chemical hazards. Before installing/servicing this unit, technicians MUST put on all Personal Protective Equipment (PPE) recommended for the work being undertaken. ALWAYS refer to appropriate MSDS sheets and OSHA guidelines for proper PPE. When working with or around hazardous chemicals, ALWAYS refer to the appropriate MSDS sheets and OSHA guidelines for information on allowable personal exposure levels, proper respiratory protection and handling recommendations. If there is a risk of arc or flash, technicians MUST put on all necessary Personal Protective Equipment (PPE) in accordance with NFPA70E for arc/flash protection PRIOR to servicing the unit. Failure to follow recommendations could result in death or serious injury.

Some of these kits are intended for more than one size or type of unit and may contain additional parts not required for the particular unit in which the kit is being installed. Check the unit parts list if questions arise as to use of individual components.

Trane recommends using Loctite® 515 Gasket Eliminator on all refrigerant to atmospheric O-ring connections (except suction elbows to compressor connection) on centrifugal chillers using R-11, R-113, and R-123. Loctite 515 Gasket Eliminator is available from the Trane

3

Company in 50-mL tubes (SEL00922) and 300-mL caulking tubes (SEL00376). Refer to KIT09237 for more information on Loctite and its installation. To ensure leak free joints after rebuild, apply Loctite 515 to grooved O-ring joints as follows:

- Inspect O-ring groove for nicks and scratches. Minor surface scratches or nicks can be repaired by filling the imperfection with a soft soldering material, then filing or sanding to a smooth finish.
- Apply a bead of Loctite 515 (1/8-in. maximum diameter) to the entire circumference of the bottom I.D. of the O-ring groove as shown in Figure 1.
- Place the O-ring into the groove and gently press it into sealant.

Note: O-rings should not be stretched more than 5 percent of their I.D. dimension once seated in the groove.

- Apply a bead of Loctite 515 (1/8-in. maximum diameter) to the entire circumference between the O-ring and top O.D. of the groove as shown in Figure 2.

Figure 1.


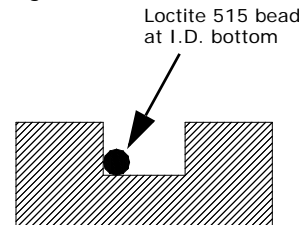


Figure 2.

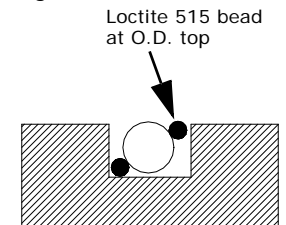

4

Part #	Qty.	Location and Use
RNG02119	1	O-ring; compressor to suction elbow
RNG02117	1	O-ring; suction elbow to evaporator
RNG02179	1	O-ring; suction elbow to evaporator
GKT04430	2	Gasket; liquid line
GKT04459	1	Gasket; 3rd stage vane operator mounting
GKT01319	1	Gasket; bearing oil seal mounting
GKT01320	2	Gasket; bearing oil seal
GKT04416	2	Gasket; compressor motor liquid return
GKT04402	2	Gasket; compressor motor liquid supply
GKT04461	2	Gasket; compressor to economizer
GKT04462	1	Gasket; compressor to economizer
RNG02135	1	O-ring; 1st stage casting
RNG02181	1	O-ring; 2nd stage casting
RNG02133	1	O-ring; 3rd stage casting
RNG02113	1	O-ring; motor housing
RNG02145	1	O-ring; 1st stage vane operator mounting
GKT04446	1	Gasket; oil tank cover
GKT04402	2	Gasket; oil drain line
RNG02174	1	O-ring; 13.475 ID x 0.275 RD
NUT00639	1	Locknut
WAS00563	1	Lockwasher
SCR00312	32	Screw; cap
SHM00178 *	1	Shim; 6 x 0.050
SHM00179 *	1	Shim; 6 x 0.002
SHM00180 *	2	Shim; 6 x 0.005
SHM00181 *	1	Shim; 6 x 0.010

5

Part #	Qty.	Location and Use
SCR02146	16	Screw
WAS01050	40	Washer; Ramp, 2 pieces = 1 pair
SHM00182 *	1	Shim; 6 x 0.020
SHM00194 *	1	Shim; 6 x 0.100
SPC00191	1	Spacer; 5.4 x 0.120

* Shims as required

6

7

Trane and the Trane logo are trademarks or registered trademarks of Trane in the United States and other countries. All trademarks referenced in this document are the trademarks of their respective owners.
Loctite is a registered trademark of Henkel Corporation.



Trane optimizes the performance of homes and buildings around the world. A business of Ingersoll Rand, the leader in creating and sustaining safe, comfortable and energy efficient environments, Trane offers a broad portfolio of advanced controls and HVAC systems, comprehensive building services, and parts. For more information, visit www.IRco.com.

Trane has a policy of continuous product and product data improvement and reserves the right to change design and specifications without notice.